


Model 3051 Smart Pressure Transmitter Family

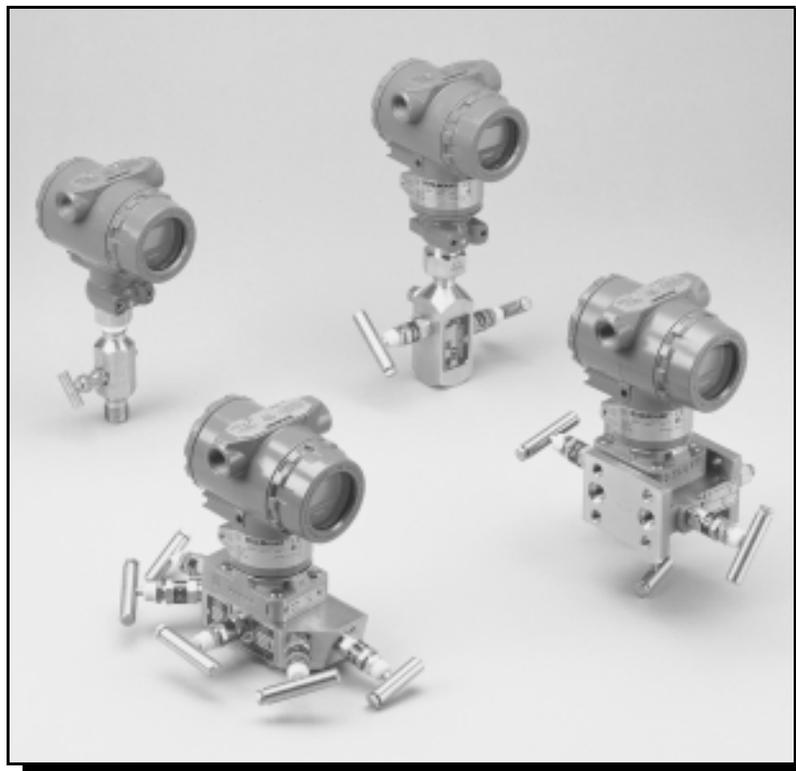

ROSEMOUNT®

FISHER-ROSEMOUNT™ Managing The Process Better.™

Model 3051 Smart Pressure Transmitter Family

Model 3051 Smart Software Revision 5.2.x

NOTICE

Read this manual before working with the product. For personal and system safety, and for optimum product performance, make sure you thoroughly understand the contents before installing, using, or maintaining this product.

Within the United States, Rosemount Inc. has two toll-free assistance numbers:

Customer Central

Technical support, quoting, and order-related questions.

1-800-999-9307 (7:00 am to 7:00 pm CST)

North American Response Center

Equipment service needs.

1-800-654-7768 (24 hours—includes Canada)

Outside of the United States, contact your local Rosemount representative.

⚠ CAUTION

The products described in this document are NOT designed for nuclear-qualified applications. Using non-nuclear qualified products in applications that require nuclear-qualified hardware or products may cause inaccurate readings.

For information on Rosemount nuclear-qualified products, contact your local Rosemount Sales Representative.

Rosemount Model 3051 Smart Pressure Transmitters may be protected by one or more of the following U.S. Patent Nos. 4,370,890; 4,466,290; 4,612,812; 4,791,352; 4,798,089; 4,818,994; 4,833,922; 4,866,435; 4,926,340; 4,988,990; and 5,028,746. Mexico Patentado No. 154,961. May depend on model. Other foreign patents issued and pending.

Rosemount, the Rosemount logotype, and SMART FAMILY are registered trademarks of Rosemount Inc. Coplanar is a trademark of Rosemount Inc.

Hastelloy C and Hastelloy C-276 are registered trademarks of Cabot Corp.

Teflon is a registered trademark of E.I. du Pont de Nemours & Co.

Monel is a registered trademark of International Nickel Co.

Syltherm 800 and D.C. 200 are registered trademarks of Dow Corning Corporation.

Neobee M-20 is a registered trademark of PVO International, Inc.

HART is a registered trademark of the HART Communication Foundation.

FOUNDATION fieldbus is a registered trademark of the Fieldbus Foundation.

COVER PHOTO: 305-305COVER

Rosemount Inc.
Measurement Division
8200 Market Boulevard
Chanhassen, MN 55317 USA
Tel 1-800-999-9307
Telex 4310012
Fax (612) 949-7001
00809-0100-4001
© Rosemount Inc. 1999
<http://www.rosemount.com>



Fisher-Rosemount satisfies all obligations coming from legislation to harmonize product requirements in the European Union.



ROSEMOUNT®

FISHER-ROSEMOUNT™ Managing The Process Better.™

Table of Contents

Section 1 Introduction

Using This Manual	1-1
Models Covered	1-2
New Features of the Model 3051 Pressure Transmitter	1-3
Model 3051CD0 Draft Range Pressure Transmitter	1-4
Special Draft Range Considerations	1-4
Installation	1-4
Reducing Process Noise	1-4

Section 2 Transmitter Functions

Overview	2-1
Safety Messages	2-1
Warnings	2-1
Failure Mode Alarm	2-2
Alarm and Saturation Values for Burst Mode	2-3
Alarm and Saturation Values for Multidrop Mode	2-3
Alarm Level Verification	2-3
Transmitter Security	2-4
Security Jumper (Write Protect)	2-4
Local Zero and Span (Local Keys) Software Lock Out	2-4
Physical Removal of Local Zero and Span (Local Keys)	2-4
Configuring Alarm and Security Jumper Procedure	2-5
Selecting Output Range for Low-Power Output	2-8
Commissioning on the bench with HART Communicator	2-9
Setting the Loop to Manual	2-9
Wiring Diagrams (Bench Hook-up)	2-10
Wiring Diagrams (Field Hook-up)	2-11
Review Configuration Data	2-12
Check Output	2-12
Process Variables	2-12
Sensor Temperature	2-13
Basic Setup	2-13
Set Process Variable Units	2-13
Set Output	2-13
Rerange	2-14
With Communicator Only	2-15
With Pressure Input Source and a Communicator	2-15
With Pressure Input Source and Local Zero and Span	2-15
Damping	2-17
LCD Meter Options	2-17
Detailed Setup	2-17
Local Span and Zero Control (Local Keys)	2-17
Sensor Temperature Output Unit Selection	2-17
Diagnostics and Service	2-18
Transmitter Test	2-18
Loop Test	2-18
Calibration	2-19
Calibration Overview	2-20
Deciding Which Trim Procedure to Use	2-22
Determining Calibration Frequency	2-22
Sensor Trim	2-24
Zero Trim	2-25
Full Trim	2-25
Recall Factory Trim	2-26

Recall Factory Trim—Sensor Trim	2-26
Recall Factory Trim—Analog Output	2-26
Analog Output Trim	2-27
Digital-to-Analog Trim	2-27
Digital-to-Analog Trim Using Other Scale	2-27
Analog Output Trim (Low Power)	2-27
Compensating Range 4 and 5 for Line Pressure	2-28
Advanced Functions	2-29
Saving, Recalling, and Cloning Configuration Data	2-29
Burst Mode	2-30
Multidrop Communication	2-31
Changing a Transmitter Address	2-32
Communicating with a Multidropped Transmitter	2-32
Polling a Multidropped Transmitter	2-32

**Section 3
Installation**

Overview	3-1
Safety Messages	3-1
Warnings	3-1
General Considerations	3-3
Mechanical Considerations	3-3
Mounting	3-9
Mounting Requirements	3-10
Impulse Piping	3-11
Process Connections	3-12
Model 3051T Process Connection	3-13
Housing Rotation	3-13
Mounting Bolts	3-18
Differential Pressure	3-18
Gage/Absolute Pressure	3-18
Bolt Installation	3-18
Electrical Considerations	3-20
Power Supply	3-20
4–20 mA Transmitters	3-20
Low Power Transmitters	3-20
Wiring	3-21
Signal Wiring Grounding	3-22
Grounding the Transmitter Case	3-22
Environmental Considerations	3-23
Access Requirements	3-23
Process Flange Orientation	3-23
Housing Rotation	3-23
Terminal Side of Electronics Housing	3-23
Circuit Side of Electronics Housing	3-23
Exterior of Electronics Housing	3-23
Cover Installation	3-23

**Section 4
Troubleshooting**

Overview	4-1
Safety Messages	4-1
Warnings	4-1
Before Disassembling the Transmitter	4-2
Disassembly Procedures	4-3
Remove the Transmitter from Service	4-3
Remove the Terminal Block	4-3
Remove the Electronics Board	4-4
Remove the Sensor Module from the Electronics Housing	4-5
Reassembly Procedures	4-6
Attach the Sensor Module to the Electronics Housing	4-6

	Attach the Electronics Board	4-7
	Install the Terminal Block	4-8
	Reassemble the Process Sensor Body	4-8
	Returning Rosemount Products and Materials	4-9
Section 5		
Specifications and Reference Data		
	Performance Specifications	5-1
	Detailed Performance Specifications	5-2
	Reference Accuracy	5-2
	Ambient Temperature Effect per 50 °F (28 °C)	5-3
	Static Pressure Effect per 1000 psi (6,9 MPa)	5-3
	Mounting Position Effects	5-4
	Vibration Effect	5-5
	Power Supply Effect	5-5
	RFI Effects	5-5
	Transient Protection (Option Code T1)	5-5
	Functional Specifications	5-6
	Range and Sensor Limits	5-6
	Physical Specifications	5-10
	Certifications	5-12
	Ordering Information	5-15
	Configuration Information	5-27
	Standard Configuration	5-27
	Custom Configuration (Option Code C1)	5-27
	Tagging	5-27
	Optional Model 305 or Model 306 Integral Manifolds	5-27
	Optional Conventional Manifolds	5-27
	Optional Diaphragm and Sanitary Seals	5-28
	Output Information	5-28
	Shipping Weights	5-28
	Rosemount Smart Family [®] Instruments	5-29
	Related Product Data Sheets	5-29
	Parts List	5-30
Section 6		
Options		
	Overview	6-1
	Safety Messages	6-1
	Warnings	6-1
	Local Zero and Span Adjustment Options	6-1
	Activating Local Zero and Span Adjustments	6-1
	Disabling Local Zero and Span Adjustments	6-2
	LCD Meter	6-2
	Custom Meter Configuration	6-3
	Installing the Meter	6-4
	Diagnostic Messages	6-6
	Error	6-6
	Warnings	6-7
	Operation	6-8
	Mounting Brackets	6-9
	Custom Configuration (C1)	6-9
	Level Flange (F1, F2, G1, G2, FA, FB, FC, and FD)	6-9
	Vertical Mount (FA, FB, FC, FD, FP, and FQ)	6-10
	Traditional Flange (H2, H3, H4, H7, HJ, HK, and HL)	6-10
	Optional Flange and Adapter Bolts (L4, L5, and L6)	6-11
	Transient Protection Terminal Block (T1)	6-12
	Installation Procedure	6-12
	Model 305 and 305 Integral Manifolds	6-13
	Model 305 Integral Manifold Installation Procedure	6-13
	Model 306 Integral Manifold Installation Procedure	6-14

	Configuration Data Sheet	6-15
Appendix A		
HART Communicator	Introduction	A-1
	Safety Messages	A-1
	Warnings	A-1
	Connections and Hardware	A-6
	Communicator Keys	A-8
	Action Keys	A-8
	Function Keys	A-9
	Alphanumeric and Shift Keys	A-9
	Data Entry	A-9
	Fast Key Sequences	A-10
	Fast Key Sequence Conventions	A-10
	Fast Key Sequence Example	A-10
	Menus and Functions	A-10
	Main Menu	A-10
	Online Menu	A-11
	Diagnostic Messages	A-11
Appendix B		
Model 268 Communicator	Introduction	B-1
	Safety Messages	B-1
	Warnings	B-1
	Connections and Hardware	B-4
	Communicator Keys	B-5
	Dedicated Keys	B-5
	Alphanumeric and Shift Keys	B-6
	Function Keys	B-7
	Fast Key Sequences	B-7
	Fast Key Sequence Conventions	B-7
	Fast Key Sequence Example	B-8
	Diagnostic Messages	B-8
Appendix C		
Approval Drawings	Overview	C-1
Appendix D		
European ATEX		
Directive Information	Overview	D-1
Glossary		
Index		

Introduction

USING THIS MANUAL

The sections in this manual provide information on installing, operating, and maintaining devices from the Rosemount Model 3051 Smart Pressure Transmitter Family. The sections are organized as follows:

Section 2: Transmitter Functions

Section 2 provides instruction on commissioning and operating Model 3051 Pressure Transmitters. Information on software functions, configuration parameters, and on-line variables is also included.

Section 3: Installation

Section 3 contains mechanical and electrical installation instructions.

Section 4: Troubleshooting

Section 4 provides troubleshooting techniques for the most common Model 3051 transmitter operating problems.

Section 5: Specifications and Reference Data

Section 5 supplies reference and specification data for the Model 3051 Smart Pressure Transmitter Family.

Section 6: Options

Section 6 describes the mounting and configuration options available for Model 3051 transmitters.

Appendix A: HART Communicator

Appendix A gives an overview of the Model 275 HART Communicator, defines its command menu tree for the Model 3051 family, and provides a table of its fast key sequences. A table of diagnostic messages is also included.

Appendix B: Model 268 Communicator

Appendix B gives an overview of the Model 268 Communicator, defines its command menu tree for the Model 3051 family, and provides a table of its fast key sequences. A table of diagnostic messages is also included.

Appendix C: Approval Drawings

Appendix C contains intrinsic safety approval drawings.

Appendix D: European ATEX Directive Information

Appendix D contains European ATEX Directive information.

MODELS COVERED

The following Rosemount Model 3051 Pressure Transmitters are covered by this manual:

Model 3051CD Differential Pressure Transmitter

The Model 3051CD measures pressures from 0.1 inH₂O to 2000 psi (0,02 to 13 800 kPa) with superior performance including 0.075% accuracy and 100:1 rangeability.

Model 3051CG Gage Pressure Transmitter

The Model 3051CG measures gage pressures from 2.5 inH₂O to 2000 psig (0,62 to 13 800 kPa) using proven Rosemount capacitance cell technology.

Model 3051CA Absolute Pressure Transmitter

The Model 3051CA measures absolute pressures from 0.167 to 4000 psia (8,6 mmHga to 27 580 kPa) using a Rosemount patented piezoresistive silicon sensor.

Model 3051L Liquid Level Transmitter

The Model 3051L provides precise level and specific gravity measurements from 2.5 to 8310 inH₂O (0,62 to 2 070 kPa) for a wide variety of tank configurations.

Model 3051H High Process Temperature Pressure Transmitter

The Model 3051H provides high process temperature capability to 375 °F (191 °C) without the use of remote diaphragm seals or capillaries. Model 3051H transmitters are available for differential and gage configurations (3051HD and 3051HG).

Model 3051P Reference Class Pressure Transmitter

The Model 3051P, at 0.05% accuracy, is the most accurate pressure transmitter available. The Model 3051P is ideal for fiscal and allocation metering.

Model 3051T Gage and Absolute Pressure Transmitter

The Model 3051T measures absolute and gage pressures from 0.3 to 10000 psig/a (2,07 to 68 900 kPa). The Model 3051T uses a single isolator design and microprocessor-based electronics.

New Model 3051CD0 Draft Range Transmitter


See page 1-4 for the details of the Model 3051CD0 transmitter.

NOTE

For Model 3051 with FOUNDATION™ fieldbus, see Rosemount Product Manual 00809-0100-4774.

NEW FEATURES OF THE MODEL 3051 PRESSURE TRANSMITTER

The latest line of Rosemount Model 3051 Pressure Transmitters feature physical and software enhancements for additional functionality and increased ease of use.

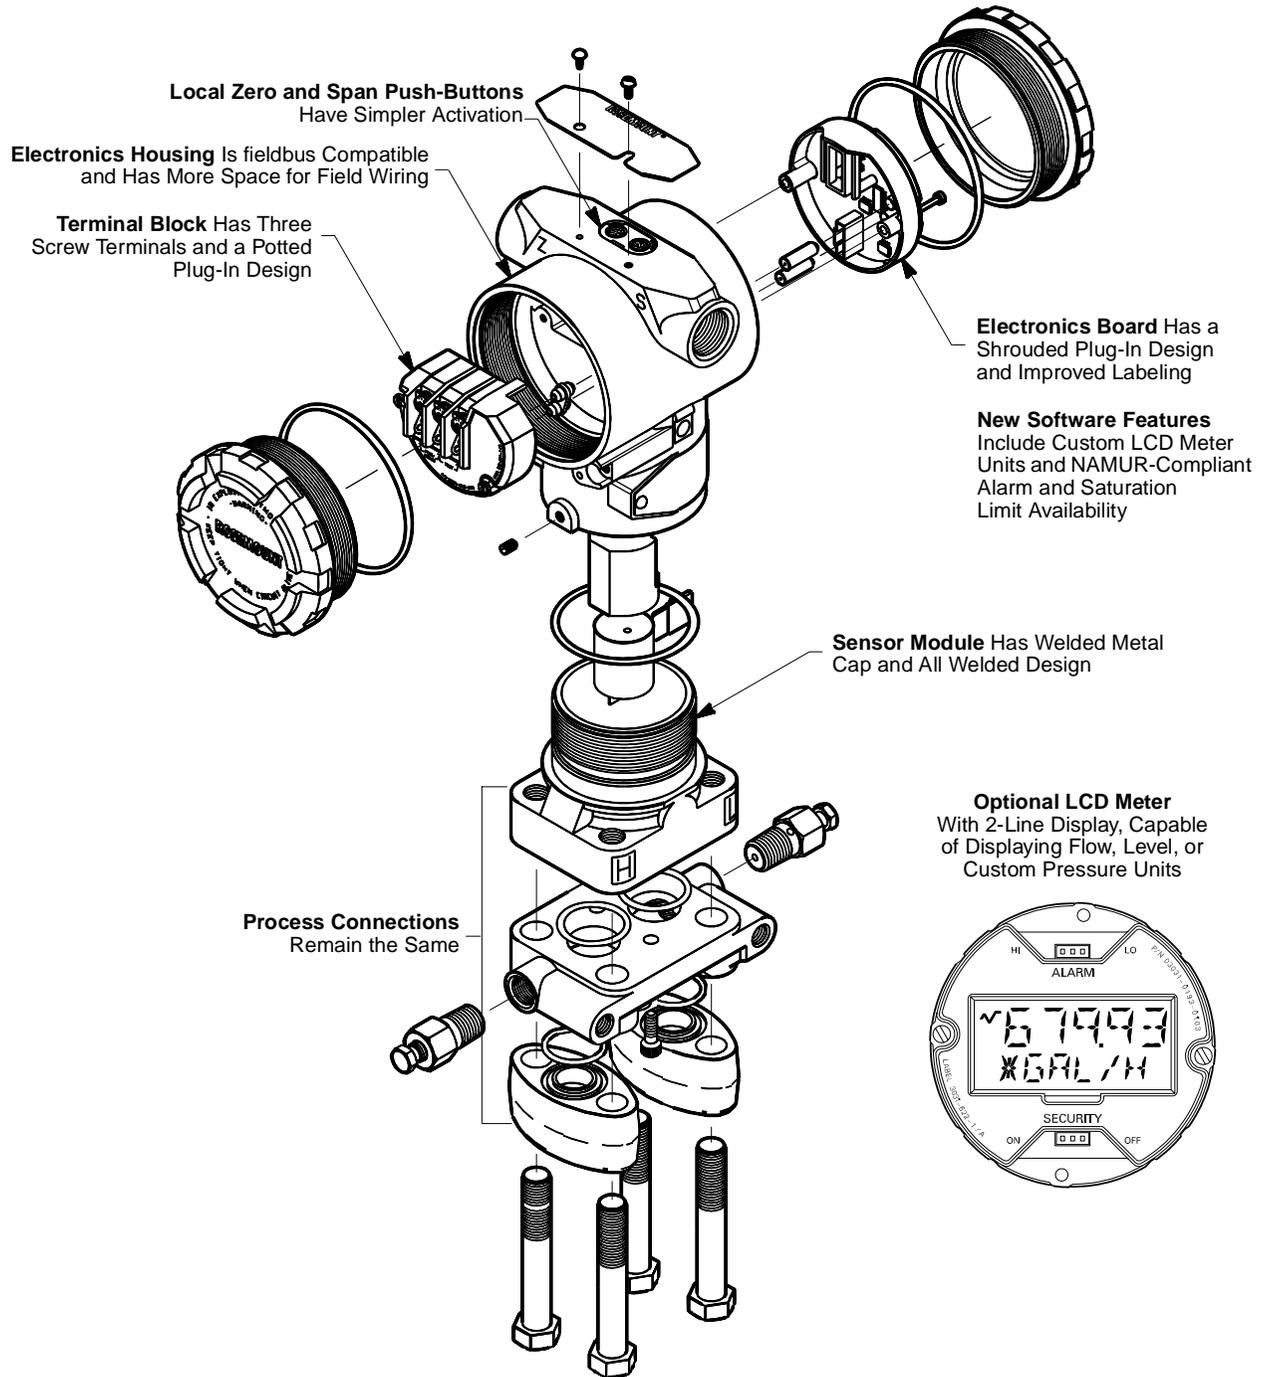

3051-3031A08E; 3051LCD

MODEL 3051CD0 DRAFT RANGE PRESSURE TRANSMITTER

The Model 3051CD0 Draft Range Pressure Transmitter is a true draft range offering that features a pressure range from -3.0 to 3.0 inH₂O (-750 to 750 Pa) with spans as small as 0.1 inH₂O (25 Pa). The transmitter has an accuracy of $\pm 0.10\%$ of range and has a redesigned capacitance sensor optimized for draft measurements. Because the Model 3051CD0 Draft Range Transmitter is based on the standard Model 3051 Transmitter design, the requirement for spare parts is reduced.

The Model 3051CD0 Draft Range Transmitter is the perfect choice for applications including:

- Furnace and boiler draft
- HVAC duct flow and clogging filter detection
- Room and chamber pressurization
- Clean room pressurization control systems
- Flow measurements with low differential pressures

Special Draft Range Considerations

Installation

It is best to mount the transmitter with the isolators parallel to the ground. Installing the transmitter in this way reduces oil head effect and provides for optimal temperature performance.

Be sure the transmitter is securely mounted. Tilting of the transmitter may cause a zero shift in the transmitter output.

Reducing Process Noise

It is often difficult to isolate the actual process variable from process noise in draft range applications. Pressure fluctuations and air currents can make accurate draft range measurements difficult to obtain.

There are two recommended methods of reducing process noise: output damping and, in gage applications, reference side filtering.

Output Damping

The output damping for the Model 3051CD0 is factory set to 3.2 seconds as a default. If the transmitter output is still noisy, increase the damping time. If faster response is needed, decrease the damping time. Damping adjustment information is available in Section 2: Transmitter Functions.

Reference Side Filtering

In gage applications it is important to minimize fluctuations in atmospheric pressure to which the low side isolator is exposed. One method of reducing fluctuations in atmospheric pressure is to attach a length of tubing to the reference side of the transmitter to act as a pressure buffer. Another method is to plumb the reference side to a chamber that has a small vent to atmosphere. If multiple draft transmitters are being used in an application, the reference side of each device can be plumbed to a chamber to achieve a common gage reference.

Transmitter Functions

OVERVIEW

This section contains information on commissioning and operating Model 3051 Smart Pressure Transmitters. Tasks that should be performed on the bench prior to installation are explained in this section.

For your convenience, HART communicator fast key sequences are listed for each software function. If you are unfamiliar with the communicator or how to follow fast key sequences, please refer to Appendices A and B for communicator operations.

SAFETY MESSAGES

Procedures and instructions in this section may require special precautions to ensure the safety of the personnel performing the operations. Information that raises potential safety issues is indicated by a warning symbol (⚠). Refer to the following safety messages before performing an operation preceded by this symbol.

Warnings (⚠)

⚠ WARNING

Explosions can result in death or serious injury.

- Do not remove the transmitter covers in explosive environments when the circuit is alive.
- Transmitter covers must be fully engaged to meet explosionproof requirements.
- Before connecting a communicator in an explosive atmosphere, make sure the instruments in the loop are installed in accordance with intrinsically safe or nonincendive field wiring practices.

⚠ WARNING

Electrical shock can result in death or serious injury.

- Avoid contact with the leads and terminals. High voltage that may be present on leads can cause electrical shock.

FAILURE MODE ALARM

Model 3051 transmitters automatically and continuously perform self-diagnostic routines. If the self-diagnostic routines detect a failure, the transmitter drives its output outside of the normal saturation values. The transmitter will drive its output low or high based on the position of the failure mode alarm jumper. See Table 2-1, Table 2-2, and Table 2-3 for failure mode and saturation output levels. To select alarm position, see “Configuring Transmitter Alarm and Security Jumper Procedure” on page 2-5.

TABLE 2-1. Standard Alarm and Saturation Values.

Level	4–20 mA Saturation	4–20 mA Alarm
Low	3.9 mA	≤ 3.75 mA
High	20.8 mA	≥ 21.75 mA

TABLE 2-2. NAMUR-Compliant Alarm and Saturation Values.

Level	4–20 mA Saturation	4–20 mA Alarm
Low	3.8 mA	≤ 3.6 mA
High	20.5 mA	≥ 22.5 mA

TABLE 2-3. Low-Power Alarm and Saturation Values.

Level	1–5 V Saturation	1–5 V Alarm	0.8–3.2 V Saturation	0.8–3.2 V Alarm
Low	0.97 V	≤ 0.95 V	0.78 V	≤ 0.75 V
High	5.20 V	≥ 5.4 V	4.04 V	≥ 4.2 V

NOTE

You can alter the actual transmitter mA output values by performing an analog output trim.

NOTE

When a transmitter is in an alarm condition, the hand-held HART communicator indicates the analog output the transmitter would drive if the alarm condition did not exist. The transmitter will alarm high in the event of failure if the alarm jumper is removed.

Alarm and Saturation Values for Transmitters Set to Burst Mode

Transmitters set to burst mode handle saturation and alarm conditions differently.

Alarm Conditions:

- Analog output switches to alarm value.
- Primary variable (pressure) is burst with a status bit set.
- Percent of range follows primary variable (pressure).
- Temperature is burst with a status bit set.

Saturation:

- Analog output switches to saturation value.
- Primary variable (pressure) is burst normally.
- Temperature is burst normally.

Alarm and Saturation Values for Transmitters Set to Multidrop Mode

Transmitters set to multidrop mode handle saturation and alarm conditions differently.

Alarm Conditions:

- Primary variable (pressure) is sent with a status bit set.
- Percent of range follows primary variable (pressure).
- Temperature is sent with a status bit set.

Saturation:

- Primary variable (pressure) is sent normally.
- Temperature is sent normally.

Alarm Level Verification

Transmitters with shrouded design electronics boards (board version 5.3 or later) have increased functionality that allows verification testing of alarm current levels. If you repair or replace the transmitter electronics board, sensor module, or LCD meter, verify the transmitter alarm level before you return the transmitter to service. This feature is also useful in testing the reaction of your control system to a transmitter in an alarm state. To verify the transmitter alarm values, perform a loop test and set the transmitter output to the alarm value (see Tables 2-1 and 2-2 on page 2-2, and “Loop Test” on page 2-18).

TRANSMITTER SECURITY

There are three security methods with the Model 3051 transmitter:

1. Security Jumper: prevents all writes to transmitter configuration.
2. Local Keys (Local Zero and Span) Software Lock Out: prevents changes to transmitter range points via local zero and span adjustment keys. With local keys security enabled, changes to configuration are possible via HART.
3. Physical Removal of Local Keys (Local Zero and Span) Magnetic Buttons: removes ability to use local keys to make transmitter range point adjustments. With local keys security enabled, changes to configuration are possible via HART.

NOTE

If the security jumper is not installed, the transmitter will continue to operate in the security OFF configuration.

Security Jumper (Write Protect)

You can prevent changes to the transmitter configuration data with the write protection jumper. Security is controlled by the security (write protect) jumper located on the electronics board or meter face. Position the jumper on the transmitter circuit board in the “ON” (WP on previous electronics board) position to prevent accidental or deliberate change of configuration data.

If the transmitter write protection jumper is in the “ON” position, the transmitter will not accept any “writes” to its memory. Configuration changes, such as digital trim and reranging, cannot take place when the transmitter security is on.

Local Zero and Span (Local Keys) Software Lock Out

To enable this feature, see “Local Span and Zero Control (Local Keys)” on page 2-17.

Physical Removal of Local Zero and Span (Local Keys)

To remove the magnetic buttons used to activate the local zero and span, use a small slotted head screwdriver and pry off the small, plastic cap located under the approval tag. Remove button assemblies and discard.

NOTE

On previous versions of Model 3051, remove the magnetic screws.

CONFIGURING TRANSMITTER ALARM AND SECURITY JUMPER PROCEDURE


To reposition the jumpers, follow the procedure described below.



1. If the transmitter is installed, secure the loop and remove power.
2. Remove the housing cover opposite the field terminal side. Do not remove the transmitter covers in explosive atmospheres when the circuit is alive.
3. Reposition the jumpers as desired.
 - Figure 2-1 shows the jumper positions for *Improved Electronics Boards*.
 - Figure 2-2 shows *Previous Electronics Board* jumper positions.
 - Figure 2-3 shows transmitters with an optional LCD meter.
 - Figure 2-5 shows the jumper positions for low-power transmitters.
4. Reattach the transmitter cover. Transmitter covers must be fully engaged to meet explosionproof requirements.




FIGURE 2-1. *Improved Electronics Board*.

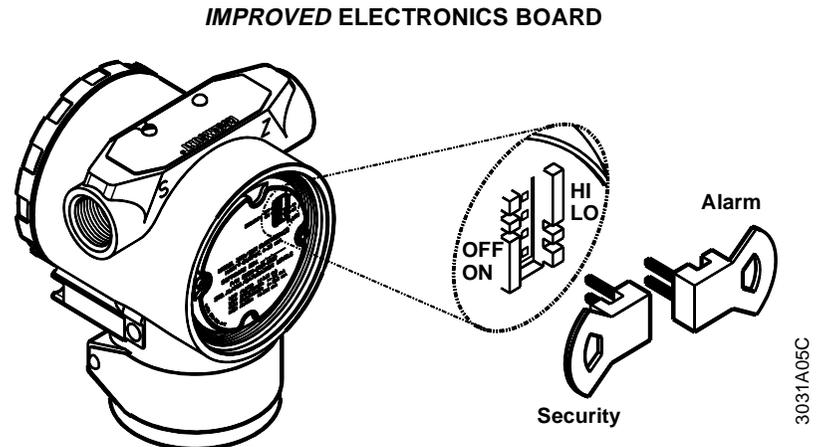

NOTE

Security jumper not installed = Not Write Protected.
Alarm jumper not installed = High Alarm.

FIGURE 2-2. *Previous Electronics Board.*

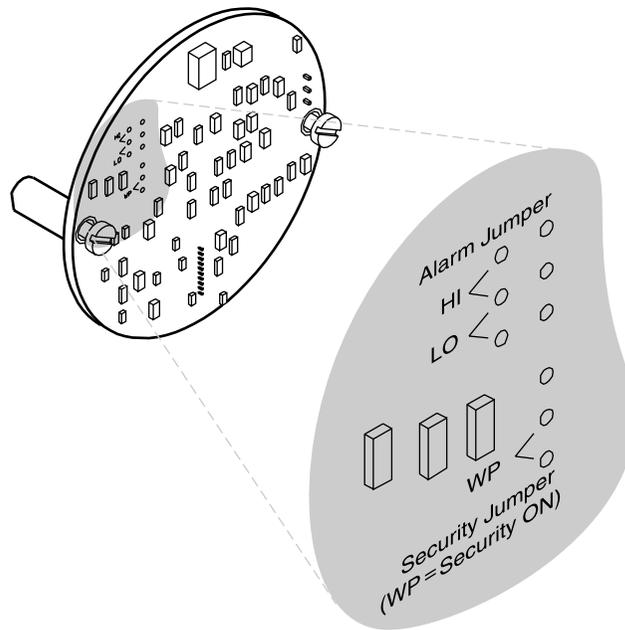

On one version of the previous electronics board, the security jumper is located on the back side of the board. Contact Rosemount Customer Central at 1-800-999-9307 for more information.

3051-3051B

NOTE

Security jumper not installed = Not Write Protected.
Alarm jumper not installed = High Alarm.


FIGURE 2-3. *Improved Model 3051 with Optional LCD Meter.*



NOTE

Security jumper not installed = Not Write Protected.
Alarm jumper not installed = High Alarm.

FIGURE 2-4. *Previous* Model 3051 with Optional LCD Meter.

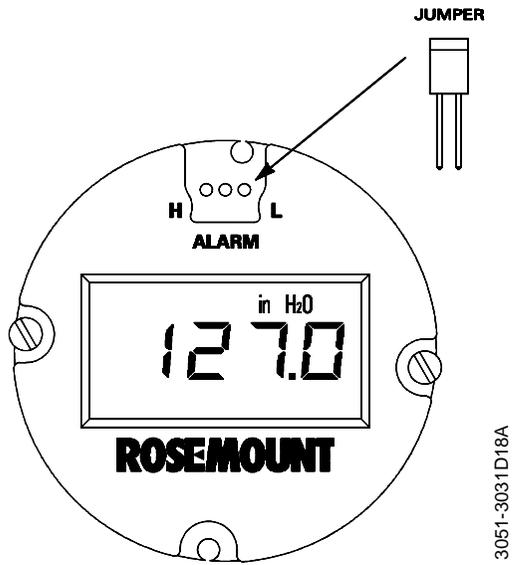

NOTE
Alarm jumper not installed = High Alarm.


SELECTING OUTPUT RANGE FOR LOW-POWER OUTPUT TRANSMITTERS

Low power transmitters output either 1–5 V dc or 0.8–3.2 V dc depending on the position of the voltage output jumper. To reposition the voltage output jumper, follow the procedure described on page 2-5.

NOTE

Default low power output is 1–5 V dc. After changing output between 1–5 V and 0.8–3.2 V, perform a low power output trim.

FIGURE 2-5. Low Power Transmitter Electronics Boards.

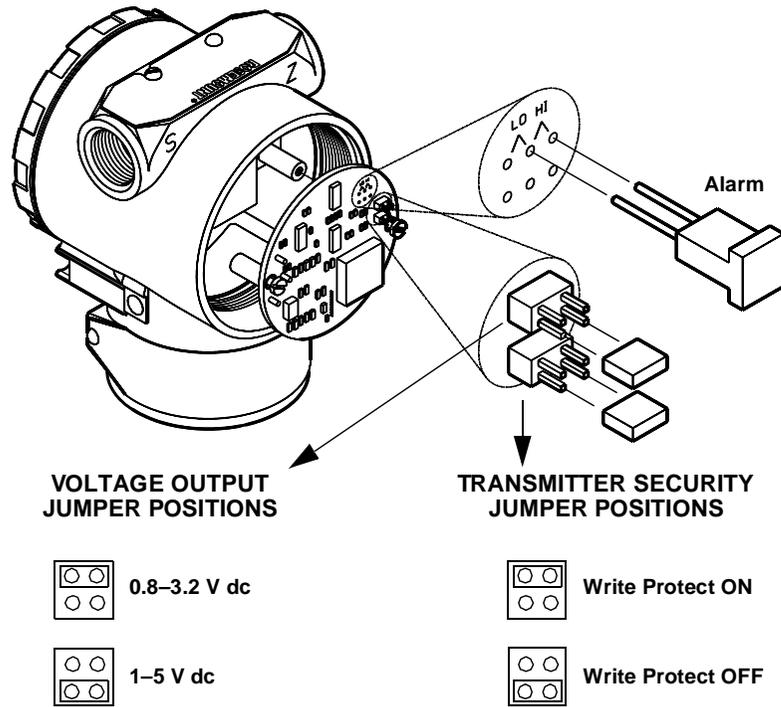

3051-3031B05D

NOTE

Security jumper not installed = Not Write Protected.
 Alarm jumper not installed = High Alarm.
 Voltage output jumper not installed = 1–5 V

COMMISSIONING THE MODEL 3051 ON THE BENCH WITH A HART-BASED COMMUNICATOR

Commissioning consists of testing the transmitter and verifying transmitter configuration data. You may commission Model 3051 transmitters either before or after installation. Commissioning the transmitter on the bench before installation using a HART-based communicator ensures that all transmitter components are in good working order and acquaints you with the operation of the device.

 To commission on the bench, connect the transmitter and the communicator as shown in Figure 2-6 and 2-7. Make sure the instruments in the loop are installed in accordance with intrinsically safe or nonincendive field wiring practices before connecting a communicator in an explosive atmosphere. Connect the communicator leads at any termination point in the signal loop. It is most convenient to connect them to the terminals labeled “COMM” on the terminal block. Connecting across the “TEST” terminals will prevent successful communication. To avoid exposing the transmitter electronics to the plant environment after installation, set all transmitter jumpers during the commissioning stage on the bench.

For 4–20 mA transmitters, you will need a power supply capable of providing 10.5 to 55 V dc at the transmitter, and a meter to measure output current. To enable communication, a resistance of at least 250 ohms must be present between the communicator loop connection and the power supply. Do not use inductive-based transient protectors with the Model 3051.


Setting the Loop to Manual

Whenever you are preparing to send or request data that would disrupt the loop or change the output of the transmitter, you must set your process application loop to manual. Both the HART Communicator Model 275 and the Rosemount Model 268 will prompt you to set the loop to manual when necessary. Keep in mind that acknowledging this prompt does not set the loop to manual. The prompt is only a reminder; you have to set the loop to manual yourself as a separate operation.

Wiring Diagrams (Bench Hook-up)


Connect the bench equipment as shown in Figure 2-6 and 2-7, and turn on the HART-based communicator by pressing the ON/OFF key. The communicator will search for a HART-compatible device and will indicate when the connection is made. If the communicator fails to connect, it will indicate that no device was found. If this occurs, refer to Section 4: Troubleshooting.

FIGURE 2-6. Bench Hook-up
(4–20 mA Transmitters).

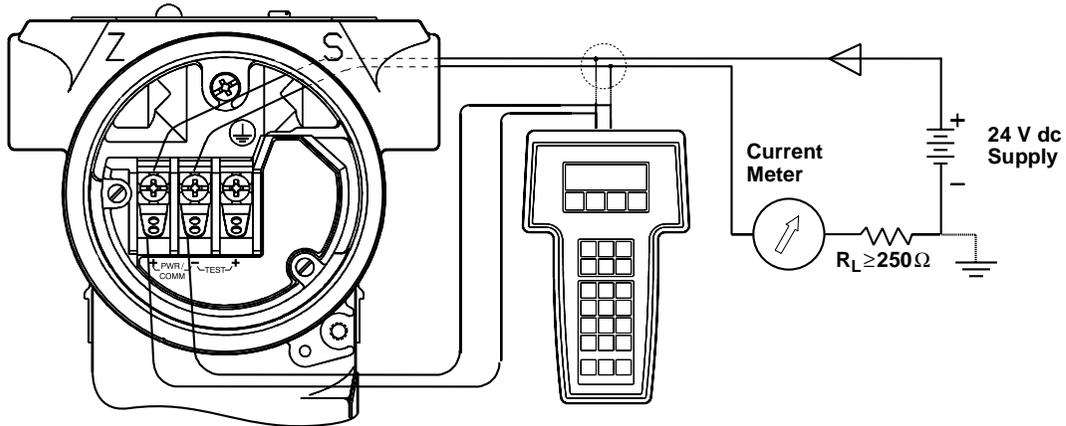

3051-3031G02B

FIGURE 2-7. Bench Hook-up
(Low-Power Transmitters).

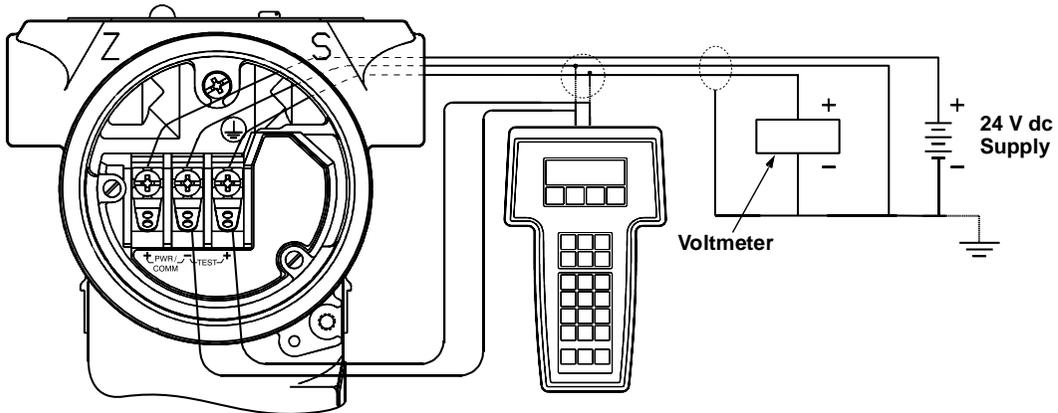


3051-3031I02B

**Wiring Diagrams
(Field Hook-up)**


The following diagrams illustrate wiring loops for a field hook-up with a HART-based communicator.

FIGURE 2-8. Field Hook-up
(4–20 mA Transmitters).

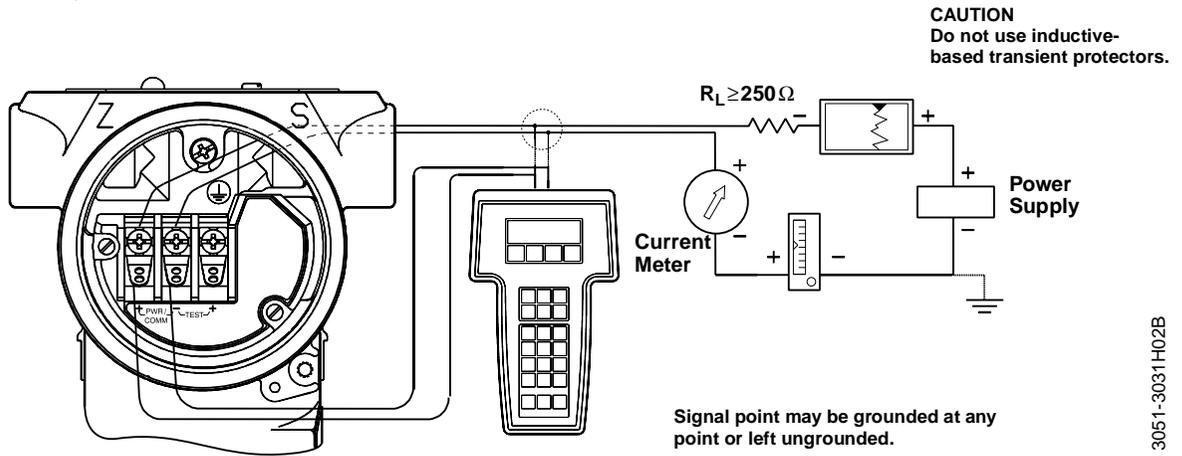

3051-3031H02B

FIGURE 2-9. Field Hook-up
(Low-Power Transmitters).

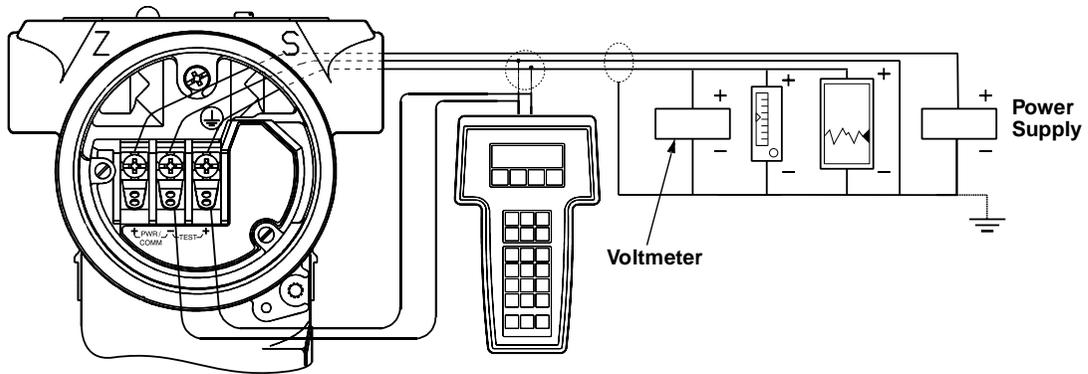

3051-3031E02B

REVIEW CONFIGURATION DATA

HART Comm	1, 5
Model 268	Review Key

NOTE

Information and procedures in this section that make use of HART Communicator fast key sequences assume that the transmitter and communicator are connected, powered, and operating correctly. If you are not familiar with the HART Communicator or fast-key sequences, refer to Appendix A: HART Communicator.

Before you place the transmitter into operation, it is recommended that you review the transmitter configuration data that was set at the factory. You should review the following configuration data:

Transmitter Model	Type
Tag	Range
Date	Descriptor
Message	Minimum and Maximum Sensor Limits
Minimum Span	Units
4 and 20 mA points	Output (linear or sq. root)
Damping	Alarm Setting (high, low)
Security Setting (on, off)	Local Zero/Span Keys (enabled, disabled)
Integral Meter	Sensor Fill
Isolator Material	Flange (type, material)
O-Ring Material	Drain/Vent
Remote Seal (type, fill fluid, isolator material, number)	Transmitter S/N
Address	Sensor S/N

CHECK OUTPUT

Before performing other transmitter on-line operations, review the digital output parameters to ensure that the transmitter is operating properly and is configured to the appropriate process variables.

Process Variables

HART Comm.	2
Model 268	PV

The process variables for the Model 3051 provide the transmitter output, and are continuously updated. The process variable menu displays the following process variables:

- Pressure
- Percent of Range
- Analog Output

The pressure reading in both Engineering Units and Percent of Range will continue to track with pressures outside of the defined range from the lower to the upper range limit of the sensor module. (Previous versions of the software will track with pressure up to 105% of span and remain there as pressure increases.)

NOTE

Regardless of the range points, the Model 3051 will measure and report all readings within the digital limits of the sensor. For example, if the 4 and 20 mA points are set to 0 and 10 inH₂O, and the transmitter detects a pressure of 25 inH₂O, it digitally outputs the 25 inH₂O reading and a 250% of span reading. However, there may be up to ±5.0% error associated with output outside of the range points.

Sensor Temperature

HART Comm.	1, 1, 4
Model 268	PV, F3

The Model 3051 contains a temperature sensor just above its pressure sensor in the sensor module. When reading this temperature, keep in mind that this is not a process temperature reading.

BASIC SETUP

Set Process Variable Units

HART Comm.	1, 3
Model 268	F3, F2

The *PV Unit* command sets the process variable units to allow you to monitor your process using the appropriate units of measure. Select from the following engineering units:

- inH₂O
- inHg
- ftH₂O
- mmH₂O
- mmHg
- psi
- torr
- inH₂O at 4 °C⁽¹⁾
- bar
- mbar
- g/cm²
- kg/cm²
- Pa
- kPa
- atm
- mmH₂O at 4 °C⁽¹⁾

(1) Not available with low power or previous Model 3051 transmitters.

Set Output


HART Comm.	1, 3, 5
Model 268	F3, F2, F1, F1

Activate the transmitter square root output option to make the analog output proportional to flow. As the input approaches zero, the Model 3051 automatically switches to a linear output in order to ensure a more smooth, stable output near zero. See Figure 2-10.

The transition from linear to square root is not adjustable. It occurs at 0.8% of ranged pressure input or 9% of full-scale flow output in transmitters with Revision 5.2 or higher software. In earlier software, the transition point occurred at 4% of ranged pressure input, or 20% of full scale flow output.

From 0 percent to 0.6 percent of the ranged pressure input, the slope of the curve is unity ($y = x$). This allows accurate calibration near zero. Greater slopes would cause large changes in output for small changes at input. From 0.6 percent to 0.8 percent, the slope of the curve equals 42 ($y = 42x$) to achieve continuous transition from linear to square root at the transition point.

FIGURE 2-10. Square Root Output Transition Point.

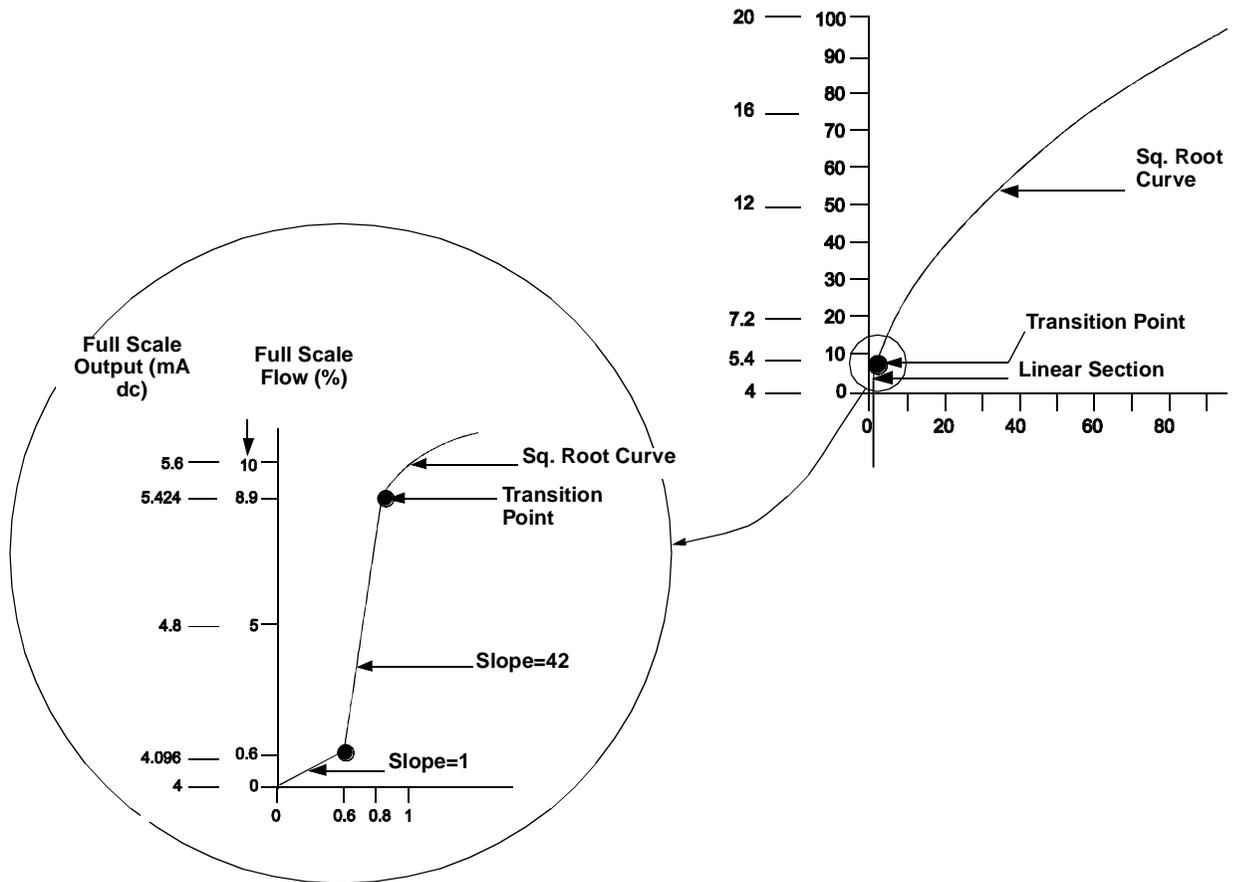

Rerange

The *Range Values* command sets the 4 and 20 mA points (lower and upper range values). Setting the range values to the limits of expected readings maximizes transmitter performance. In practice, you may reset the transmitter range values as often as necessary to reflect changing process conditions.

NOTE

Regardless of the range points, the Model 3051 will measure and report all readings within the digital limits of the sensor. For example, if the 4 and 20 mA points are set to 0 and 10 inH₂O, and the transmitter detects a pressure of 25 inH₂O, it digitally outputs the 25 inH₂O reading and a 250% percent of span reading. However, there may be up to ±5.0% error associated with output outside of the range points.

You may use one of three methods to rerange the transmitter. Each method is unique; examine all three closely before deciding which method to use.

Rerange with a Communicator Only

HART Comm.	1, 2, 3, 1, 1
Model 268	F3, F2, F1, F3, F1

Reranging using only the communicator is the easiest and most popular way to rerange the transmitter. This method changes the values of the analog 4 and 20 mA points independently without a pressure input.

NOTE

Changing the lower or upper range point results in similar changes to the span.

To rerange using only the communicator, enter the fast-key sequence above, select *1 Keypad input*, and follow the on-line instructions. Or enter the values directly from the **HOME** screen.

NOTE

If the transmitter security jumper is in the **ON** position, you will not be able to make adjustments to the zero and span. Refer to Figure 2-1 on page 2-5 for the appropriate placement of the transmitter security jumper.

Rerange with a Pressure Input Source and a Communicator

HART Comm.	1, 2, 3, 1, 2
Model 268	F3, F2, F1, F3, F2

Reranging using the communicator and a pressure source or process pressure is a way of reranging the transmitter when specific 4 and 20 mA points are not known. This method changes the values of the analog 4 and 20 mA points.

NOTE

When you set the 4 mA point the span is maintained; when you set the 20 mA point the span changes. If you set the lower range point to a value that causes the upper range point to exceed the sensor limit, the upper range point is automatically set to the sensor limit, and the span is adjusted accordingly.

To rerange using the communicator and a pressure source or process pressure, enter the fast-key sequence above, select *2 Apply values*, and follow the on-line instructions.

NOTE

If the transmitter security jumper is in the **ON** position, you will not be able to make adjustments to the zero and span. Refer to Figure 2-1 on page 2-5 for the appropriate placement of the transmitter security jumper.

Rerange with a Pressure Input Source and the Local Zero and Span Buttons

Reranging using the local zero and span adjustments (see Figure 2-11 on page 2-16) and a pressure source is a way of reranging the transmitter when specific 4 and 20 mA points are not known and a communicator is not available.

NOTE

When you set the 4 mA point the span is maintained; when you set the 20 mA point the span changes. If you set the lower range point to a value that causes the upper range point to exceed the sensor limit, the upper range point is automatically set to the sensor limit, and the span is adjusted accordingly.

To rerange the transmitter using the span and zero buttons, perform the following procedure:

1. Loosen the screw holding the certifications label on top of the transmitter housing, and rotate the label to expose the zero and span buttons (see Figure 2-11 on page 2-16).
2. Using a pressure source with an accuracy three to ten times the desired calibrated accuracy, apply a pressure equivalent to the lower range value to the high side of the transmitter.
3. To set the 4 mA point, press and hold the zero button for at least two seconds, then verify that the output is 4 mA. If a meter is installed, it will display ZERO PASS.

NOTE


The zero and span adjustments on previous versions of the transmitter are screws instead of buttons. To activate the zero and span adjustments loosen the screws until they pop up.

4. Apply a pressure equivalent to the upper range value to the high side of the transmitter.
5. To set the 20 mA point, press and hold the span button for at least two seconds, then verify that the output is 20 mA. If a meter is installed, it will display SPAN PASS.

NOTE

If the transmitter security jumper is in the **ON** position, or if the local zero and span adjustments are disabled through the software, you will not be able to make adjustments to the zero and span using the local buttons. Refer to Figure 2-1 on page 2-5 for the proper placement of the transmitter security jumper. Or refer to “Local Span and Zero Control (Local Keys)” on page 2-17 for instructions on how to enable the span and zero buttons.

FIGURE 2-11. Local Zero and Span Adjustments.

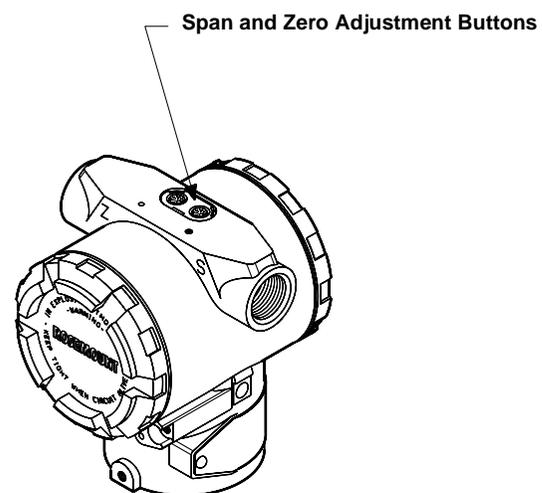

3051-3031D02A

After you rerange the transmitter using the span and zero adjustments, it is possible to disable the adjustments to prevent further reranging. Refer to “Local Span and Zero Control (Local Keys)” below for more information.

Damping

HART Comm.	1, 3, 6
Model 268	F3, F2, (F1 × 3)

The PV damp command changes the response time of the transmitter to smooth variations in output readings caused by rapid changes in input. Determine the appropriate damping setting based on the necessary response time, signal stability, and other requirements of the of loop dynamics of your system. The default damping value is 0.4 seconds,⁽¹⁾ and can be reset to any of ten pre-configured damping values between 0 and 25.6 seconds.

LCD Meter Options

HART Comm.	1, 4, 3, 4
Model 268	not available

The Meter Options command allows you to customize the LCD meter for use in your application. You can configure the meter to display the following information:

- Engineering Units
- Percent of Range
- User-Configurable LCD Scale
- Alternating between any two of the above

NOTE

The user-configurable LCD scale is a feature specific to the new 4–20 mA output transmitters. If you have a previous Model 3051 transmitter, upgrade the transmitter electronics board and LCD display to attain this new functionality.

The user-configurable scale is a new feature that enables you to configure the LCD meter to a custom scale using a Model 275 HART communicator. With this feature you can define the decimal point position, the upper range value, the lower range value, the engineering units, and the transfer function. Refer to “Custom Meter Configuration” on page 6-3 for complete configuration information.

DETAILED SETUP

Local Span and Zero Control (Local Keys)

HART Comm.	1, 4, 4, 1, 7
Model 268	F4, F4, F2, F1

The *Local keys* command allows software control over the use of the local span and zero adjustments. To enable or disable the span and zero adjustment buttons on your transmitter, perform the fast key sequence at left.

NOTE

Disabling the local keys does not disable all transmitter configuration changes. With the local keys disabled, you can still make changes to the transmitter configuration—including range values—using a HART communicator.

Sensor Temperature Output Unit Selection

HART Comm.	1, 4, 1, 2, 2
Model 268	F4, F4, F2, F1

The *Sensor Temperature Output Unit Selection* command selects between Celsius and Fahrenheit units for output of the sensor temperature. The sensor temperature output is accessible via HART only. (The Sensor Temperature Output Units command is not available on previous design transmitters.)

(1) Model 3051CD0 default damping is 3.2 seconds. Model 3051CD1, with calibrations below 2.5 inH₂O (0,62 kPa), have damping set at 3.2 seconds.

DIAGNOSTICS AND SERVICE

The diagnostics and service functions listed here are primarily for use after you install the transmitter in the field. The transmitter test feature is designed to verify that the transmitter is operating properly, and can be performed either on the bench or in the field. The loop test feature is designed to verify proper loop wiring and transmitter output, and should only be performed after you install the transmitter.

Transmitter Test

HART Comm.	1, 2, 1, 1
Model 268	F2, F2

The transmitter test command initiates a more extensive diagnostics routine than that performed continuously by the transmitter. The transmitter test routine can quickly identify potential electronics problems. If the transmitter test detects a problem, messages to indicate the source of the problem are displayed on the communicator screen.

Loop Test

HART Comm.	1, 2, 2
Model 268	F2, F3

The *Loop Test* command verifies the output of the transmitter, the integrity of the loop, and the operations of any recorders or similar devices installed in the loop. To initiate a loop test, perform the following procedure:

1. Connect a reference meter to the transmitter. To do so, either connect the meter to the test terminals on the transmitter terminal block, or shunt the power to the transmitter through the meter at some point in the loop.
2. From the **HOME** screen, select *1 Device Setup, 2 Diagnostics and Service, 2 Loop Test*, to prepare to perform a loop test.
3. Select **OK** after you set the control loop to manual (see “Setting the Loop to Manual” on page 2-9). The communicator displays the loop test menu.
4. Select a discreet milliamp level for the transmitter to output. At the **CHOOSE ANALOG OUTPUT** prompt, select *1 4mA, 2 20mA*, or select *3 other* to manually input a value. **IF** you are performing a loop test to verify the output of a transmitter, **THEN** enter a value between 4 and 20 mA. **IF** you are performing a loop test to verify the transmitter alarm levels, **THEN** enter the milliamp value representing an alarm state (see Tables 2-1, 2-3, and 2-2 on page 2-2).
5. Check the electrical current meter installed in the test loop to verify that it reads the value you commanded the transmitter to output. **IF** the readings match, **THEN** the transmitter and the loop are configured and functioning properly. **IF** the readings do not match, **THEN** you may have the current meter attached to the wrong loop, there may be a fault in the wiring, the transmitter may require an output trim, or the electrical current meter may be malfunctioning.

After completing the test procedure, the display returns to the loop test screen and allows you to choose another output value or to exit loop testing.

CALIBRATION

Calibrating a smart transmitter is different from calibrating an analog transmitter. The one-step calibration process of an analog transmitter is done in three steps with a smart transmitter:

- **Rerange**—sets the 4 and 20 mA points at the desired pressures;
- **Sensor Trim**—Adjusts the position of the factory characterization curve to optimize the transmitter performance over a specified pressure range or to adjust for mounting effects
- **Analog Output Trim**—Adjusts the analog output to match the plant standard or the control loop.

Smart transmitters operate differently than analog transmitters. A smart transmitter uses a microprocessor that contains information about the sensor's specific characteristics in response to pressure and temperature inputs. A smart transmitter compensates for these sensor variations. The process of generating the sensor performance profile is called factory characterization. Factory characterization also provides the ability to readjust the 4 and 20 mA points without applying pressure to the transmitter.

The trim and rerange functions also differ. Reranging sets the transmitter analog output to the selected upper and lower range points and can be done with or without an applied pressure. Reranging does not change the factory characterization curve stored in the microprocessor. Sensor trimming requires an accurate pressure input and adds additional compensation that adjusts the position of the factory characterization curve to optimize transmitter performance over a specific pressure range.

NOTE

Sensor trimming adjusts the position of the factory characterization curve. It is possible to degrade the performance of the transmitter if the sensor trim is done improperly or with inaccurate equipment. Contact your local Rosemount representative or call Rosemount Customer Central at 800-999-9307 if you have questions.

TABLE 2-4. Recommended Calibration Tasks.

Transmitter	Bench Calibration Tasks	Field Calibration Tasks
3051CD 3051CG 3051L 3051HD 3051HG	<ol style="list-style-type: none"> 1. Set output configuration parameters: <ol style="list-style-type: none"> a. Set the range points. b. Set the output units. c. Set the output type. d. Set the damping value. 2. <i>Optional:</i> Perform a full sensor trim. (Accurate multimeter required.) 3. <i>Optional:</i> Perform an analog output trim. (Accurate multimeter required.) 	<ol style="list-style-type: none"> 1. Reconfigure parameters if necessary. 2. Zero trim the transmitter to compensate for mounting effects or static pressure effects.
3051CA 3051TA 3051TG	<ol style="list-style-type: none"> 1. Set output configuration parameters: <ol style="list-style-type: none"> a. Set the range points. b. Set the output units. c. Set the output type. d. Set the damping value. 2. <i>Optional:</i> Perform a full sensor trim if equipment available (accurate absolute pressure source required), otherwise perform the low trim value section of the full sensor trim procedure. 3. <i>Optional:</i> Perform an analog output trim (multimeter required). 	<ol style="list-style-type: none"> 1. Reconfigure parameters if necessary. 2. Perform low trim value section of the full sensor trim procedure to correct for mounting position effects.

Notes:

- A HART communicator is required for all sensor and output trim procedures.
- Model 3051C Range 4 and Range 5 transmitters require a special calibration procedure when used in differential pressure applications under high static line pressure (see “Compensating Model 3051 Range 4 and 5 Differential Transmitters for Line Pressure” on page 2-28).
- Model 3051TG Range 5 transmitters use an absolute sensor that requires an accurate absolute pressure source to perform the optional full sensor trim.

Calibration Overview

Complete calibration of the Model 3051 Pressure Transmitter involves the following tasks:

Configure the Analog Output Parameters

- Set Process Variable Units (page 2-13)
- Set Output Type (page 2-13)
- Rerange (page 2-14)
- Set Damping (page 2-17)

Calibrate the Sensor

- Full Trim (page 2-25)
- Zero Trim (page 2-25)

Calibrate the 4–20 mA Output

- 4–20 mA Output Trim (page 2-27) or
- 4–20 mA Output Trim Using Other Scale (page 2-27) or
- Low-Power 1–5 V dc or Low-Power 0.8–3.2 V dc (page 2-27)


Figure 2-12 on page 2-21 illustrates the Model 3051 transmitter data flow. This data flow can be summarized in four major steps:

1. A change in pressure is measured by a change in the sensor output (Sensor Signal).
1. The sensor signal is converted to a digital format that can be understood by the microprocessor (Analog-to-Digital Signal Conversion).
2. Corrections are performed in the microprocessor to obtain a digital representation of the process input (Digital PV).
3. The Digital PV is converted to an analog value (Digital-to-Analog Signal Conversion).

Figure 2-12 also identifies the approximate transmitter location for each calibration task. Note that the data flows from left to right, and a parameter change affects all values to the right of the changed parameter.

Not all calibration procedures should be performed for each Model 3051 transmitter. In addition, some procedures are appropriate for bench calibration but should not be performed during field calibration. Table 2-4 identifies the recommended calibration procedures for each type of Model 3051 transmitter for both bench and field calibration.

FIGURE 2-12. Transmitter Data Flow with Calibration Options.

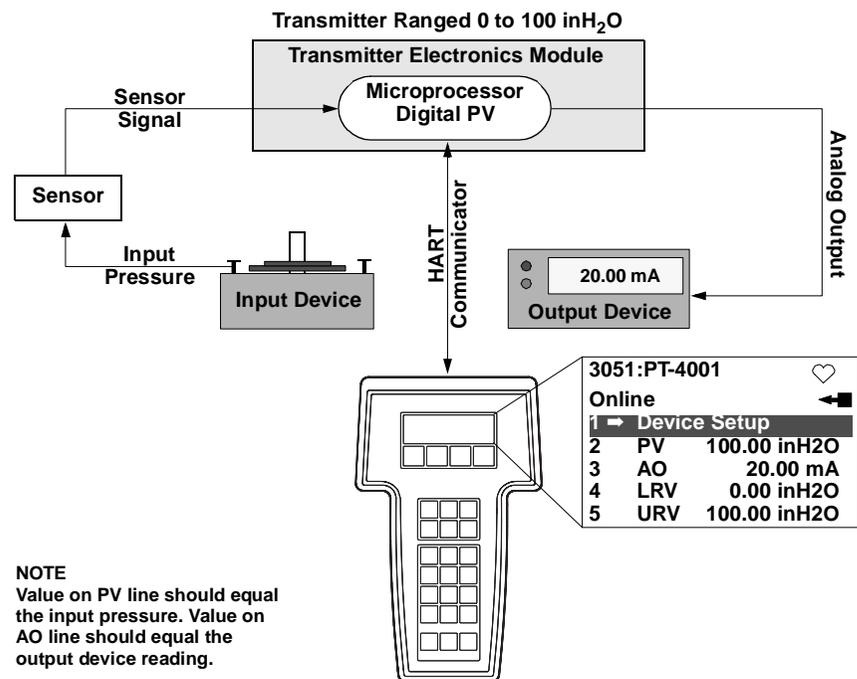

Deciding Which Trim Procedure to Use

To decide which trim procedure to use, you must first determine whether the analog-to-digital section or the digital-to-analog section of the transmitter electronics is in need of calibration. To do so, refer to Figure 2-12 and perform the following procedure:


1. Connect a pressure source, a HART communicator, and a digital readout device to the transmitter.
2. Establish communication between the transmitter and the communicator.
3. Apply pressure equal to the upper range point pressure (100 inH₂O, for example).
4. Compare the applied pressure to the Process Variable (PV) line on the Communicator On-line Menu. **IF** the PV reading on the communicator does not match the applied pressure, and you are confident that your test equipment is accurate, **THEN** perform a sensor trim.
5. Compare the Analog Output (AO) line on the communicator on-line menu to the digital readout device. **IF** the AO reading on the communicator does not match the digital readout device, and you are confident that your test equipment is accurate, **THEN** perform an output trim.

Determining Calibration Frequency

Calibration frequency can vary greatly depending on the application, performance requirements, and process conditions. Use the following procedure to determine the calibration frequency that meets the needs of your application.

1. Determine the performance required for your application.
2. Determine the operating conditions.
3. Calculate the Total Probable Error (TPE).
4. Calculate the stability per month.
5. Calculate the calibration frequency.

FIGURE 2-13. Calculating Calibration Frequency.

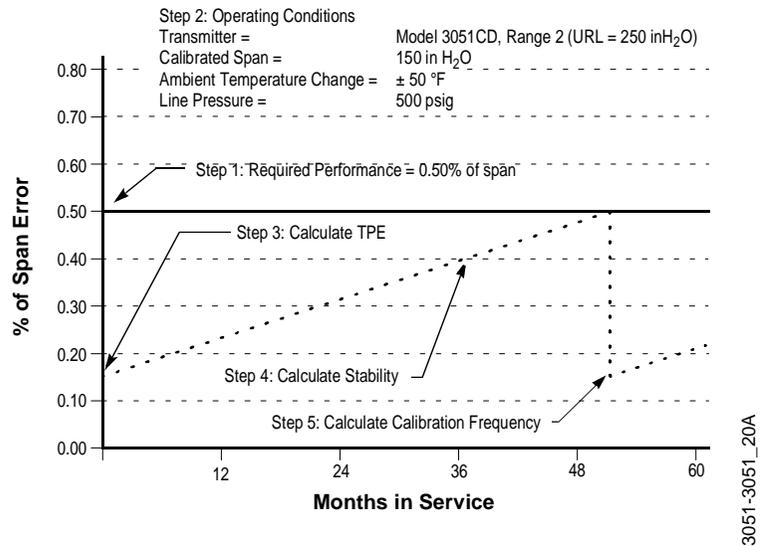

Sample Calculation

Step 1: Determine the performance required for your application.

Required Performance: 0.30% of span

Step 2: Determine the operating conditions.

Transmitter: Model 3051CD, Range 2 (URL=250 inH₂O)
 Calibrated Span: 150 inH₂O
 Ambient Temperature Change: ± 50 °F
 Line Pressure: 500 psig

Step 3: Calculate total probable error (TPE).

$$TPE = \sqrt{(\text{Reference Accuracy})^2 + (\text{Temperature Effect})^2 + (\text{Static Pressure Effect})^2} = 0.150\% \text{ of span}$$

Where:

Reference Accuracy = ± 0.075% of span

Ambient Temperature Effect =

$$\pm \left(\frac{0.0125 \times \text{URL}}{\text{Span}} + 0.0625 \right) \text{ per } 50 \text{ }^\circ\text{F} = \pm 0.0833\% \text{ of span}$$

Span Static Pressure Effect⁽¹⁾ =

0.1% reading per 1000 psi = ±0.05 of span at maximum span

(1) Zero static pressure effect removed by zero trimming at line pressure.

Step 4: Calculate the stability per month.

$$\text{Stability} = \pm \left[\frac{0.0125 \times \text{URL}}{\text{Span}} \right] \% \text{ of span for 5 years} = \pm 0.05\% \text{ of span per month}$$

Step 5: Calculate calibration frequency.

$$\text{Cal. Freq.} = \frac{(\text{Req. Performance} - \text{TPE})}{\text{Stability per Month}} = \frac{(0.3\% - 0.123\%)}{0.0035\%} = 51 \text{ months}$$

Sensor Trim


You can trim the sensor using either the full trim or the zero trim function. The trim functions vary in complexity, and their use is application-dependent. Both trim functions alter the transmitter's interpretation of the input signal.

A **zero trim** is a single-point adjustment. It is useful for compensating for mounting position effects and is most effective when performed with the transmitter installed in its final mounting position. Since this correction maintains the slope of the characterization curve, it should not be used in place of a full trim over the full sensor range.


When performing a zero trim, ensure that the equalizing valve is open and all wet legs are filled to the correct levels.

NOTE


Do not perform a zero trim on Model 3051 Absolute pressure transmitters. A zero trim is zero based, and absolute pressure transmitters reference absolute zero. To correct mounting position effects on a Model 3051 Absolute Pressure Transmitter, perform a low trim within the full sensor trim function. The low trim function provides a "zero" correction similar to the zero trim function but it does not require the input to be zero based.

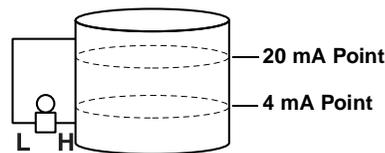

**NONZERO-BASED
LEVEL APPLICATION**

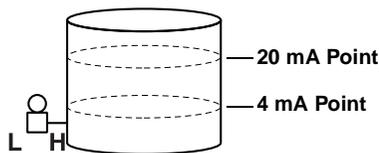

**ZERO-BASED LEVEL
APPLICATION**

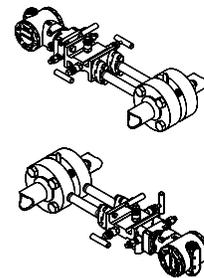

**ZERO-BASED FLOW
APPLICATION**

3051-3031B03A, B03B, 3051_18A, 19A

A **full trim** is a two-point sensor calibration where two end-point pressures are applied, and all output is linearized between them. You should always adjust the low trim value first to establish the correct offset. Adjustment of the high trim value provides a slope correction to the characterization curve based on the low trim value. The factory-established characterization curve is not changed by this procedure. The trim values allow you to optimize performance over your specified measuring range at the calibration temperature.

Zero Trim

HART Comm.	1, 2, 3, 3, 1
Model 268	F3, F2, F1, F3, F2

To calibrate the sensor with a HART Communicator using the zero trim function, perform the following procedure.

1. Vent the transmitter and attach a communicator to the measurement loop.
2. From the communicator main menu select *1 Device setup, 2 Diagnostics and service, 3 Calibration, 3 Sensor trim, 1 Zero trim* to prepare to adjust the zero trim.

NOTE

The transmitter must be within 3% of true zero (zero based) in order to calibrate it using the zero trim function.

3. Follow the commands provided by the communicator to complete the adjustment of the zero trim.

Full Trim

HART Comm.	1, 2, 3, 3
Model 268	F4, F4, F3, F2, F1

To calibrate the sensor with a HART communicator using the full trim function, perform the following procedure:

1. Assemble and power the entire calibration system including a transmitter, HART communicator, power supply, pressure input source, and readout device (see Figure 2-14).

NOTE

Use a pressure input source that is at least three times more accurate than the transmitter, and allow the input pressure to stabilize for 10 seconds before entering any values.


2. From the communicator **MAIN** menu select *1 Device setup, 2 Diagnostics and service, 3 Calibration, 3 Sensor trim, 2 Lower sensor trim* to prepare to adjust the lower trim point.

NOTE

Select pressure input values so that the low and high values are equal to or outside the 4 and 20 mA points. Do not attempt to obtain reverse output by reversing the high and low points. The transmitter allows approximately a 5% URL deviation from the characterized curve established at the factory.

3. Follow the commands provided by the communicator to complete the adjustment of the lower value.
4. Repeat the procedure for the upper value, replacing *2 Lower sensor trim* with *3 Upper sensor trim* in Step 2.

FIGURE 2-14. Digital Trim Connection Drawing (4–20 mA Transmitters).

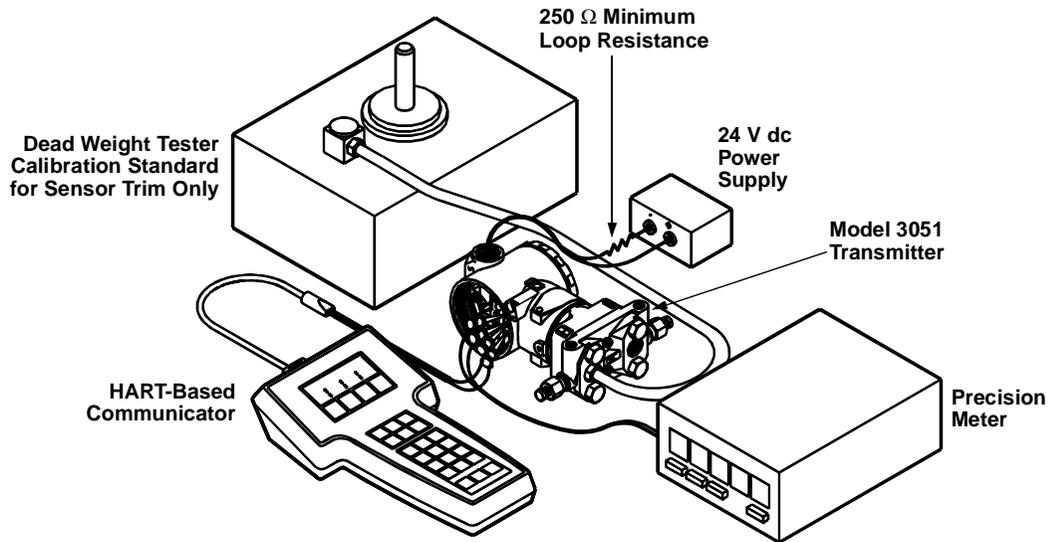

3051-3031A01A

Recall Factory Trim

The *Recall Factory Trim* commands allow the restoration of the as-shipped factory settings of the sensor trim and analog output trim.

NOTE

The Recall Factory Trim commands are not available on previous design transmitters.

Recall Factory Trim— Sensor Trim

HART Comm.	1, 2, 3, 4, 1
Model 268	Not available

Resets the transmitter sensor trim to the as-shipped factory settings. The *Recall Factory Trim—Sensor Trim* command can be useful for recovering from an inadvertent zero trim of an absolute pressure unit.

Recall Factory Trim— Analog Output

HART Comm.	1, 2, 3, 4, 2
Model 268	Not available

Resets the transmitter analog output trim to the as-shipped factory settings. The *Recall Factory Trim—Analog Output* command can be useful for recovering from an inadvertent zero trim on an absolute pressure transmitter.

Analog Output Trim

The *Analog Output Trim* commands allow you to adjust the transmitter's current output at the 4 and 20 mA points to match the plant standards. This command adjusts the digital to analog signal conversion (see Figure 2-12 on page 2-21).

Digital-to-Analog Trim

HART Comm.	1, 2, 3, 2, 1
Model 268	F4, F4, F3, F1, F1

To perform a digital-to-analog trim with a HART communicator, perform the following procedure.

1. From the **HOME** screen, select *1 Device setup, 2 Diag/Service, 3 Calibration, 4 D/A trim*. Select **OK** after you set the control loop to manual (see "Setting the Loop to Manual" on page 2-9).
2. Connect an accurate reference ammeter to the transmitter at the **CONNECT REFERENCE METER** prompt. To do so, connect the positive lead to the positive terminal and the negative lead to the test terminal in the transmitter terminal compartment, or shunt the transmitter power through the reference meter at some point.
3. Select **OK** after connecting the reference meter.
4. Select **OK** at the **SETTING FLD DEV OUTPUT TO 4 MA** prompt. The transmitter outputs 4,00 mA.
5. Record the actual value from the reference meter, and enter it at the **ENTER METER VALUE** prompt. The communicator prompts you to verify whether or not the output value equals the value on the reference meter.
6. Select *1 Yes* if the reference meter value equals the transmitter output value, or *2 No* if it does not.
IF you select *1 Yes*, THEN proceed to Step 7.
IF you select *2 No*, THEN repeat Step 5.
7. Select **OK** at the **SETTING FLD DEV OUTPUT TO 20 MA** prompt, and repeat Steps 5 and 6 until the reference meter value equals the transmitter output value.
8. Select **OK** after you return the control loop to automatic control.

Digital-to-Analog Trim Using Other Scale

HART Comm.	1, 2, 3, 2, 2
Model 268	F4, F4, F3, F1, F2

The *Scaled D/A Trim* command matches the 4 and 20 mA points to a user-selectable reference scale other than 4 and 20 mA (1 to 5 volts if measuring across a 250 ohm load, or 0 to 100 percent if measuring from a DCS, for example). To perform a scaled D/A trim, connect an accurate reference meter to the transmitter and trim the output signal to scale as outlined in the Output Trim procedure.

NOTE

Use a precision resistor for optimum accuracy. If you add a resistor to the loop, ensure that the power supply is sufficient to power the transmitter to a 20 mA output with the additional loop resistance.

Analog Output Trim (Low Power)

HART Comm.	1, 2, 3, 2, 1
Model 268	F4, F4, F3, F1, F1

The Model 3051 Low-Power Transmitter has two jumper-selectable output ranges: 1–5 V dc and 0.8–3.2 V dc. Positioning this jumper for the desired output range selects the proper coefficients for temperature corrections. The jumper position also sets the output values (1–5 or 0.8–3.2) which are communicated through HART protocol and accessed by a hand held communicator.

Compensating Model 3051 Range 4 and 5 Differential Transmitters for Line Pressure

However, switching this jumper does not by itself select the new outputs; you must perform the “Digital-to-Analog Trim” procedure above to match the transmitter’s output voltages to the new jumper selection.

Model 3051 Range 4 and Range 5 pressure transmitters require a special calibration procedure when used in differential pressure applications. The purpose of this procedure is to optimize transmitter performance by reducing the effect of static line pressure in these applications. Model 3051 differential pressure transmitters (Ranges 1, 2, and 3) do not require this procedure because the optimization occurs in the sensor.

Applying high static pressure to Model 3051 Range 4 and Range 5 pressure transmitters causes a systematic shift in the output. This shift is linear with static pressure; correct it by performing the Full Trim procedure on page 2-18.

The following specifications show the static pressure effect for Model 3051 Range 4 and Range 5 transmitters used in differential pressure applications:

Zero Effect:

±0.1% of the upper range limit per 1000 psi (6,9 MPa) for line pressures from 0 to 2000 psi (0 to 13,8 MPa)

±0.2% of the upper range limit per 1000 psi (6,9 MPa) for line pressures above 2000 psi (13,8 MPa)

Span Effect:

Correctable to ±0.2% of reading per 1000 psi for line pressures from 0 to 3626 psi.

The systematic span shift caused by the application of static line pressure is –1.00% of reading per 1000 psi for 3051C Range 4 transmitters, and –1.25% of reading per 1000 psi for Range 5 transmitters.

Use the following example to compute corrected input values.

Example

A transmitter with model number 3051CD4 will be used in a differential pressure application where the static line pressure is 1200 psi. The transmitter is ranged so that the output is 4 mA at 500 inH₂O and 20 mA at 1500 inH₂O.

To correct for systematic error caused by high static line pressure, first use the following formulas to determine corrected values for the low trim and high trim.

$$LT = LRV + S (LRV) P$$

Where:	LT =	Corrected Low Trim Value
	LRV =	Lower Range Value
	S =	–(Span shift per specification)
	P =	Static Line Pressure

HT = URV + S (URV) P

Where: HT = Corrected High Trim Value
 URV = Upper Range Value
 S = -(Span shift per specification)
 P = Static Line Pressure

In this example:

URV = 1500 inH₂O
 LRV = 500 inH₂O
 P = 1200 psi
 S = ± 0.01/1000

To calculate the low trim (LT) value:

LT = 500 + (0.01/1000)(500)(1200)
 LT = 506 inH₂O

To calculate the high trim (HT) value:

HT = 1500 + (0.01/1000)(1500)(1200)
 HT = 1518 inH₂O

To complete a Model 3051 full trim and enter the corrected values for low trim (LT) and high trim (HT), refer to “Full Trim” on page 2-25.

Enter the corrected input values for low trim and high trim through the communicator keypad after you apply the nominal value of pressure as the transmitter input.

NOTE

After calibrating Model 3051 Range 4 and Range 5 transmitters for high differential pressure applications, rerange the 4 and 20 mA points using the communicator to maintain the systematic static line pressure correction. You may re-zero the 4 mA point at line pressure after installation using the local zero button without affecting the completed calibration.

ADVANCED FUNCTIONS

Saving, Recalling, and Cloning Configuration Data

HART Comm.	left arrow, 1, 2
Model 268	F4, F3, F1

Use the cloning feature of the Model 275 HART Communicator if you need to configure several Model 3051 transmitters similarly. The cloning process involves configuring a transmitter, saving the configuration data, then sending a copy of the data to a separate transmitter. There are a number of possible procedures to use when saving, recalling, and cloning configuration data. For complete instructions refer to the HART Communicator manual, publication no. 00809-0100-4275. One common method is as follows:

1. Completely configure the first transmitter.
2. Save the configuration data:
 - a. Select **F2 SAVE** from the communicator **HOME/ONLINE** screen.
 - b. Ensure that the location to which the data will be saved is set to **MODULE**. If it is not, select *1 Location* to set the save location to **MODULE**.
 - c. Select *2 Name* to name the configuration data. The default is the transmitter tag number.
 - d. Ensure that the data type is set to **STANDARD**. IF the data type is **NOT STANDARD**, THEN select *3 Data Type* to set the data type to **STANDARD**.
 - e. Select **F2 SAVE**.
3. Connect and power the receiving transmitter and communicator.
4. Select the back arrow from the **HOME/ONLINE** screen. The HART Communicator menu appears.
5. Select *1 Offline, 2 Saved Configuration, 1 Module Contents* to reach the **MODULE CONTENTS** menu.
6. Use the **DOWN ARROW** to scroll through the list of configurations in the memory module, and use the **RIGHT ARROW** to select the configuration you wish to retrieve.
7. Select *1 Edit*.
8. Select *1 Mark All*.
9. Select **F2 SAVE**.
10. Use the **DOWN ARROW** to scroll through the list of configurations in the memory module, and use the **RIGHT ARROW** to select the configuration again.
11. Select *3 Send* to download the configuration to the transmitter.

When finished, the communicator informs you of the status. To configure another transmitter, repeat Steps 3 through 10.

NOTE

The transmitter receiving the cloned data must have the same software version (or later) as the original transmitter.

Burst Mode

HART Comm.	1, 4, 3, 3, 3
Model 268	F4, F4, F4, F1

When configured for burst mode, the Model 3051 provides faster digital communication from the transmitter to the control system by eliminating the time required for the control system to request information from the transmitter. Burst mode is compatible with use of the analog signal. Because the HART protocol features simultaneous digital and analog data transmission, the analog value can drive other equipment in the loop while the control system is receiving the digital information. Burst mode applies only to the transmission of dynamic data (pressure and temperature in engineering units, pressure in percent of range, and/or analog output), and does not affect the way other transmitter data is accessed.

Access to information other than dynamic transmitter data is obtained through the normal poll/response method of HART communication. A HART-based communicator or the control system may request any of the information that is normally available while the transmitter is in burst mode. Between each message sent by the transmitter, a short pause allows the HART-based communicator or a control system to initiate a request. The transmitter will receive the request, process the response message, and then continue “bursting” the data approximately three times per second.

Multidrop Communication

Multidropping transmitters refers to the connection of several transmitters to a single communications transmission line. Communication between the host and the transmitters takes place digitally with the analog output of the transmitters deactivated. Many of the Rosemount SMART FAMILY[®] transmitters can be multidropped. With the HART smart communications protocol, up to 15 transmitters can be connected on a single twisted pair of wires or over leased phone lines. This feature can greatly reduce wiring costs.


The application of a multidrop installation requires consideration of the update rate necessary from each transmitter, the combination of transmitter models, and the length of the transmission line. Communication with the transmitters can be accomplished with commercially available Bell 202 modems and a host implementing the HART protocol. Each transmitter is identified by a unique address (1–15) and responds to the commands defined in the HART protocol. HART-based communicators can test, configure, and format a multidropped transmitter the same way as a transmitter in a standard point-to-point installation.

Figure 2-15 shows a typical multidrop network. This figure is not intended as an installation diagram. Contact Rosemount product support with specific requirements for multidrop applications.

NOTE

A transmitter in multidrop mode has the analog output fixed at 4 mA. If a meter is installed to a transmitter in multidrop mode, it will alternate the display between “current fixed” and the specified meter output(s).

FIGURE 2-15. Typical Multidrop Network.

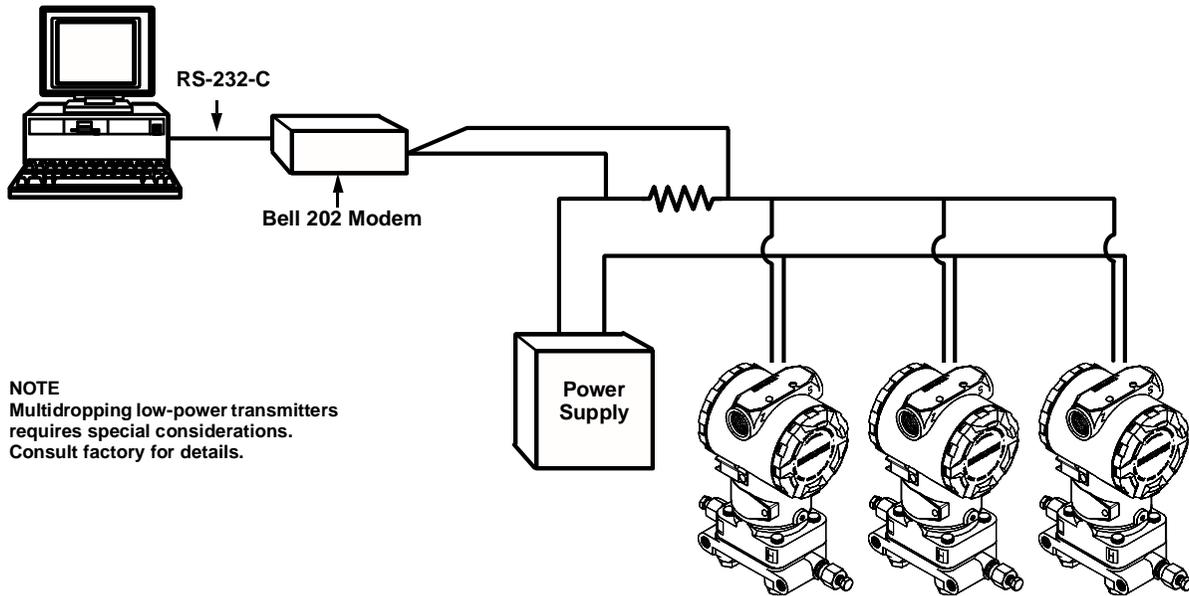

NOTE
Multidropping low-power transmitters requires special considerations. Consult factory for details.

3051-0087A, 3031A07B

NOTE

The Model 3051 is set to address 0 at the factory, allowing it to operate in the standard point-to-point manner with a 4–20 mA output signal. To activate multidrop communication, the transmitter address must be changed to a number from 1 to 15. This change deactivates the 4–20 mA analog output, sending it to 4 mA. It also disables the failure mode alarm signal, which is controlled by the upscale/downscale jumper position. Failure signals in multidropped transmitters are communicated through HART messages.

Changing a Transmitter Address

HART Comm.	1, 4, 3, 3, 1
Model 268	F1, F4, F4, F2, F3

To change the address of a multidropped transmitter, follow these fast key sequences. To activate multidrop communication, the transmitter address must be changed to a number from 1 to 15, and each transmitter in a multidropped loop must have a unique address.

Communicating with a Multidropped Transmitter

HART Comm.	1, 4, 3, 3, 2
Model 268	F1, F4, F4, F2, F2

To communicate with a multidropped transmitter for the purpose of testing, configuring, or formatting, follow the fast key sequence at left.

Polling a Multidropped Transmitter

HART Comm.	Left arrow, 4, 1
Model 268	F1, F4, F4, F2, F3

Polling a multidropped loop determines the model, address, and number of transmitters on the given loop.

NOTE

The HART Communicator Model 275 requires you to use the **UTILITY** menu to perform and autopoll. This menu is available from the **MAIN** menu of the HART Communicator. Press the **LEFT ARROW** to move from the **ONLINE MENU** to the **MAIN** menu. Press **4** from the **MAIN** menu to access the **UTILITY** menu.

Installation

OVERVIEW

The information in this section covers installation considerations. Dimensional drawings for each Model 3051 variation and mounting configuration are included in this section.

SAFETY MESSAGES

Procedures and instructions in this section may require special precautions to ensure the safety of the personnel performing the operation. Information that raises potential safety issues is indicated by a warning symbol (⚠). Refer to the following safety messages before performing an operation preceded by this symbol.

Warnings (⚠)

⚠ WARNING

Explosions can result in death or serious injury.

- Do not remove the transmitter covers in explosive environments when the circuit is alive.
- Both transmitter covers must be fully engaged to meet explosionproof requirements.
- Before connecting a communicator in an explosive atmosphere, make sure the instruments in the loop are installed in accordance with intrinsically safe or non-incendive field wiring practices.
- Verify that the operating atmosphere of the transmitter is consistent with the appropriate hazardous locations certifications.

⚠ WARNING

Electrical shock can result in death or serious injury.

- Avoid contact with the leads and terminals.

⚠ WARNING

Process leaks could result in death or serious injury.

- Install and tighten all four flange bolts before applying pressure.
- Do not attempt to loosen or remove flange bolts while the transmitter is in service.

⚠ WARNING

Replacement equipment or spare parts not approved by Rosemount Inc. for use as spare parts could reduce the pressure retaining capabilities of the transmitter and may render the instrument dangerous.


- Use only bolts supplied with the Model 3051 or sold by Rosemount Inc. as spare parts for the Model 3051.

⚠ WARNING

Improper assembly of manifolds to traditional housing can damage sensor module.

- For safe assembly of manifold to traditional flange, bolts must break back plane of flange web (i.e., bolt hold) but must not contact module housing.

FIGURE 3-1. Installation Flowchart.

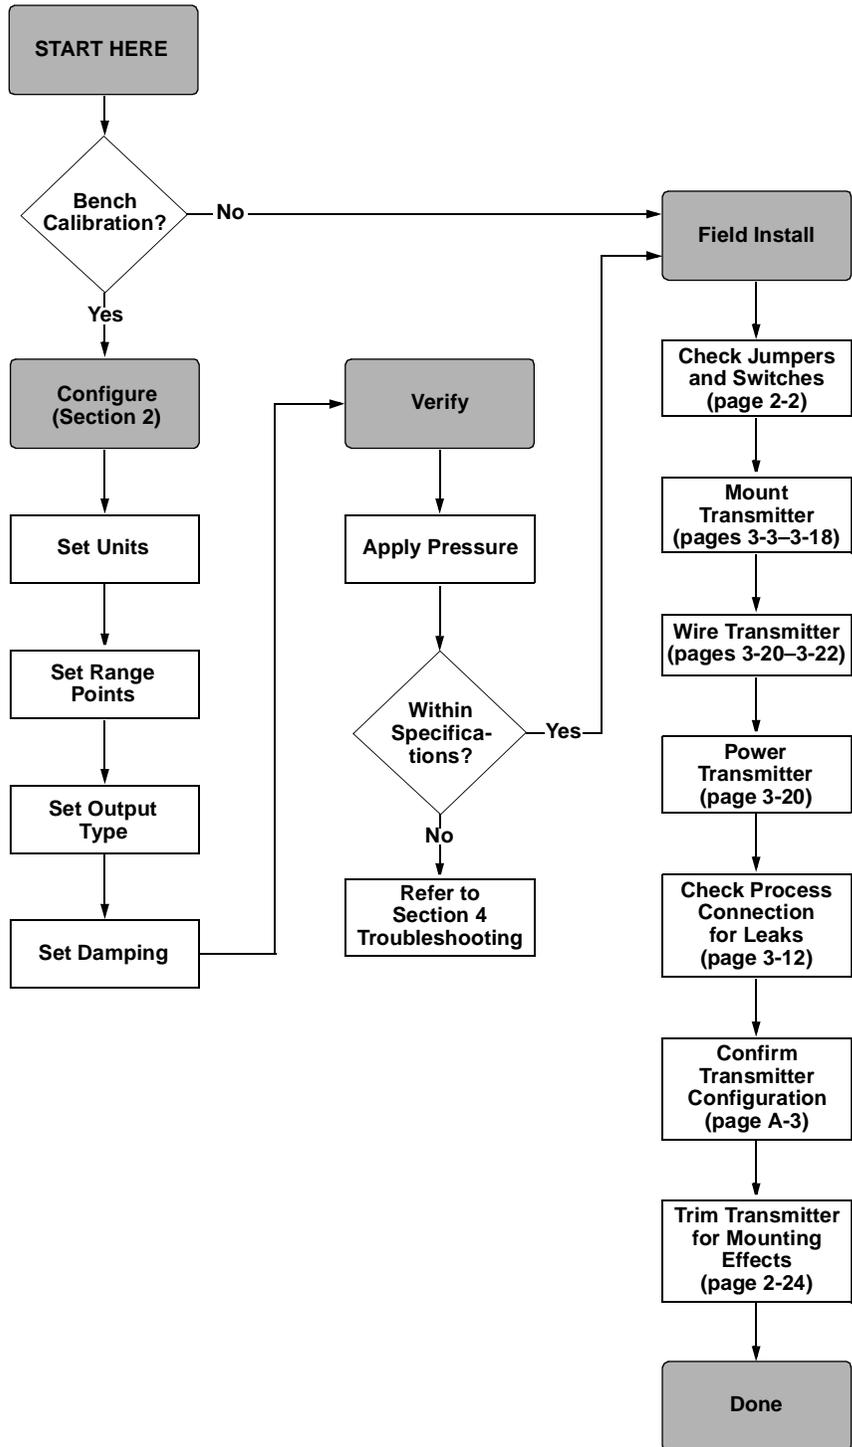

**GENERAL
CONSIDERATIONS**

Measurement accuracy depends upon proper installation of the transmitter and impulse piping. Mount the transmitter close to the process and use a minimum of piping to achieve best accuracy. Keep in mind the need for easy access, personnel safety, practical field calibration, and a suitable transmitter environment. Install the transmitter to minimize vibration, shock, and temperature fluctuation.

IMPORTANT

Install the enclosed pipe plug in unused conduit openings with a minimum of five threads engaged to comply with explosionproof requirements. The transmitter is shipped with the plug installed on transmitters ordered with CSA explosionproof approval.

**MECHANICAL
CONSIDERATIONS**

Figures 3-2 through 3-7 on pages 3-4 through 3-8 show dimensional drawings of Model 3051 transmitters. Figure 3-9 on page 3-11 shows installation examples. Figures 3-12 through 3-14 on pages 3-16 through 3-17 show dimensional drawings of mounting brackets.

NOTE

For Model 3051CD0 and 3051CD1, mount the transmitter solidly to prevent tilting. A tilt in the physical transmitter may cause a zero shift in the transmitter output.

NOTE

For steam service, do not blow down impulse piping through the transmitter. Flush the lines with the blocking valves closed and refill the lines with water before resuming measurement.

NOTE

When the transmitter is mounted on its side, position the Coplanar flange to ensure proper venting or draining. Mount the flange as shown in Figure 3-10 on page 3-14, keeping drain/vent connections on the bottom for gas service and on the top for liquid service.

NOTE

The Model 3051 transmitter incorporates two independent seals between the process connection and the conduit connection.

Rosemount Model 3051 Smart Pressure Transmitters

FIGURE 3-2. Model 3051CD
Dimensional Drawings.

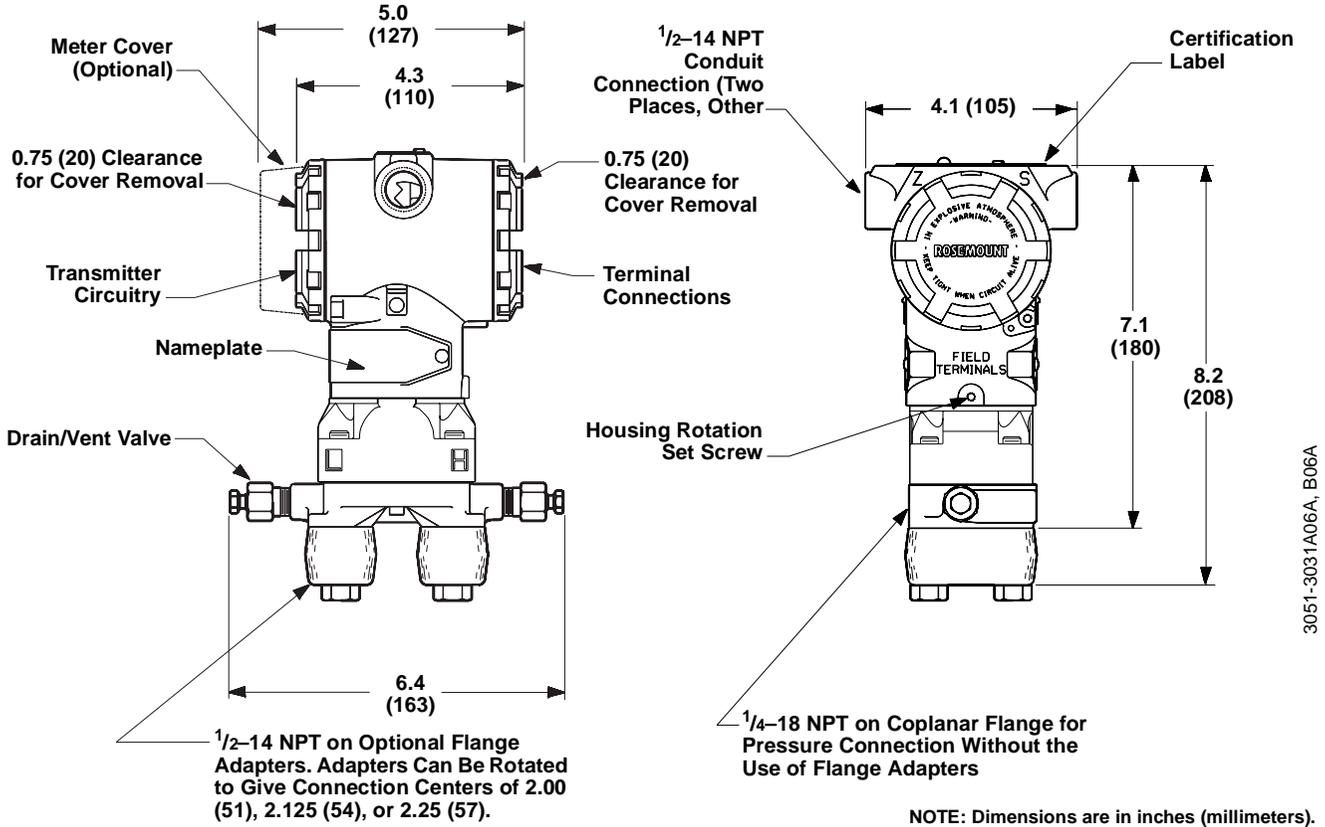


FIGURE 3-3. Model 3051CG and
3051CA Dimensional Drawings.

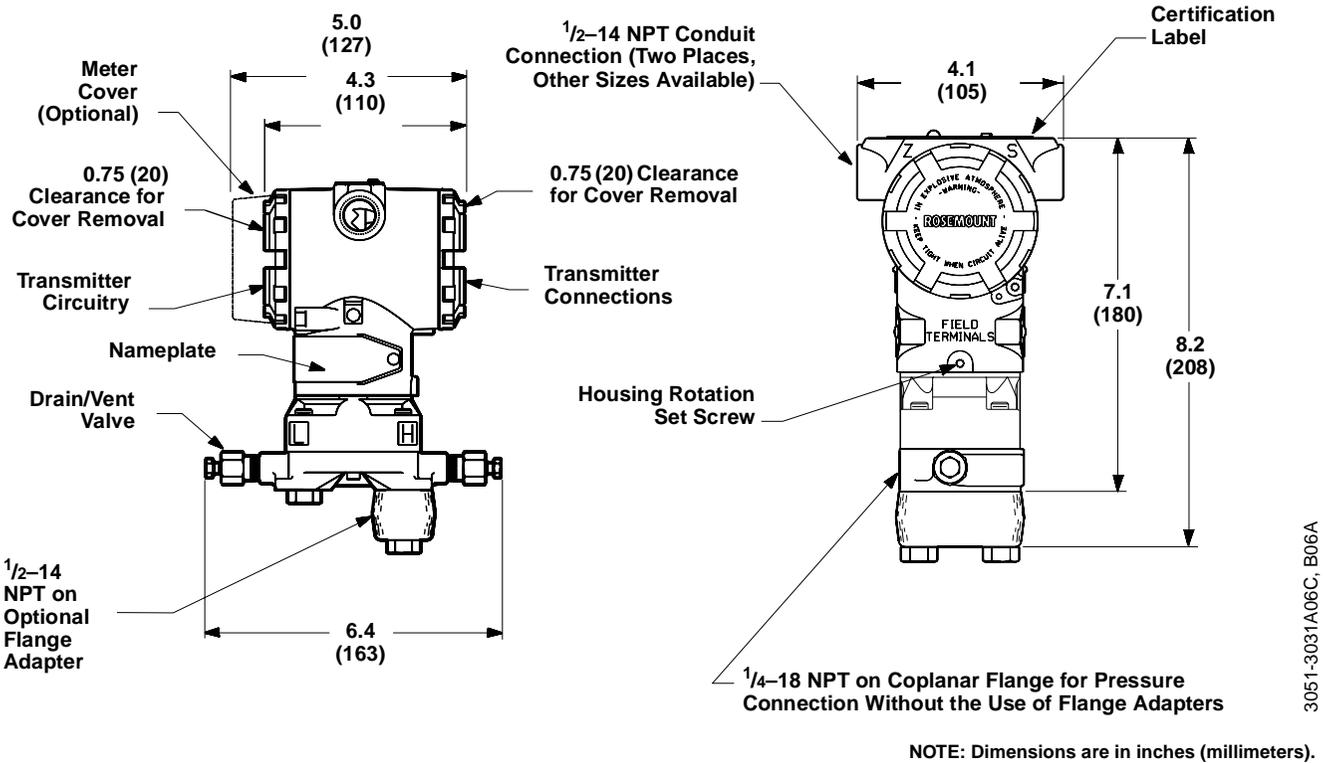


FIGURE 3-4. Model 3051C (Traditional Flange) Dimensional Drawings.


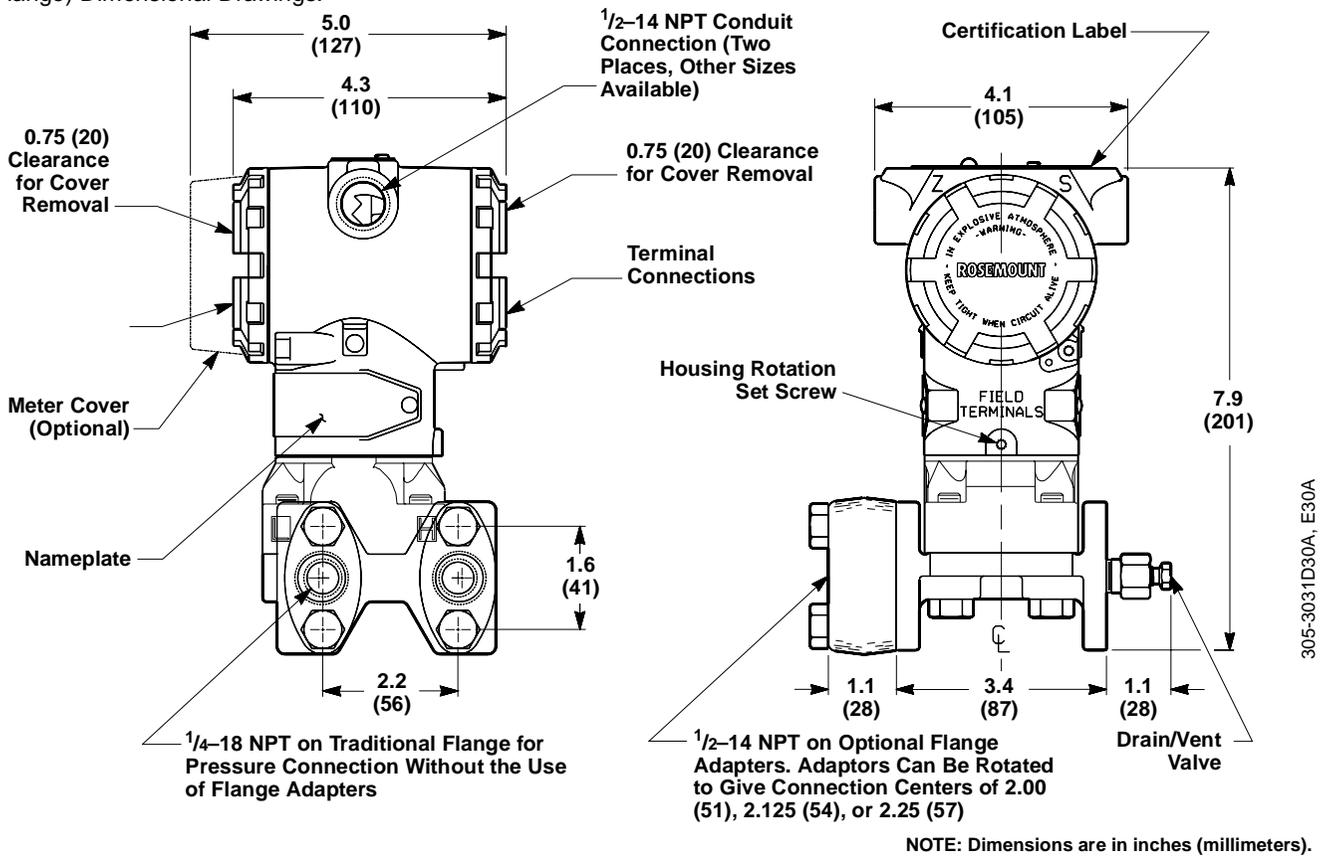


FIGURE 3-5. Model 3051T Dimensional Drawings.

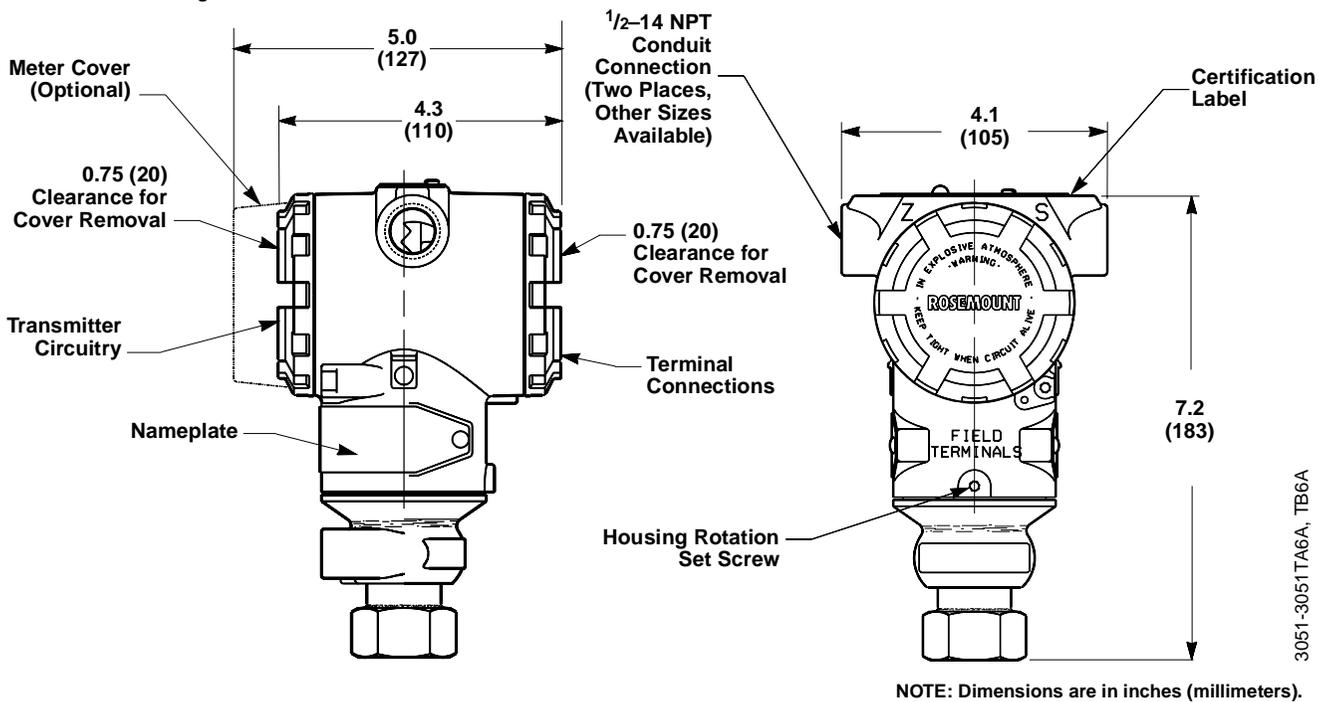

Rosemount Model 3051 Smart Pressure Transmitters

FIGURE 3-6. Model 3051H
Dimensional Drawings.

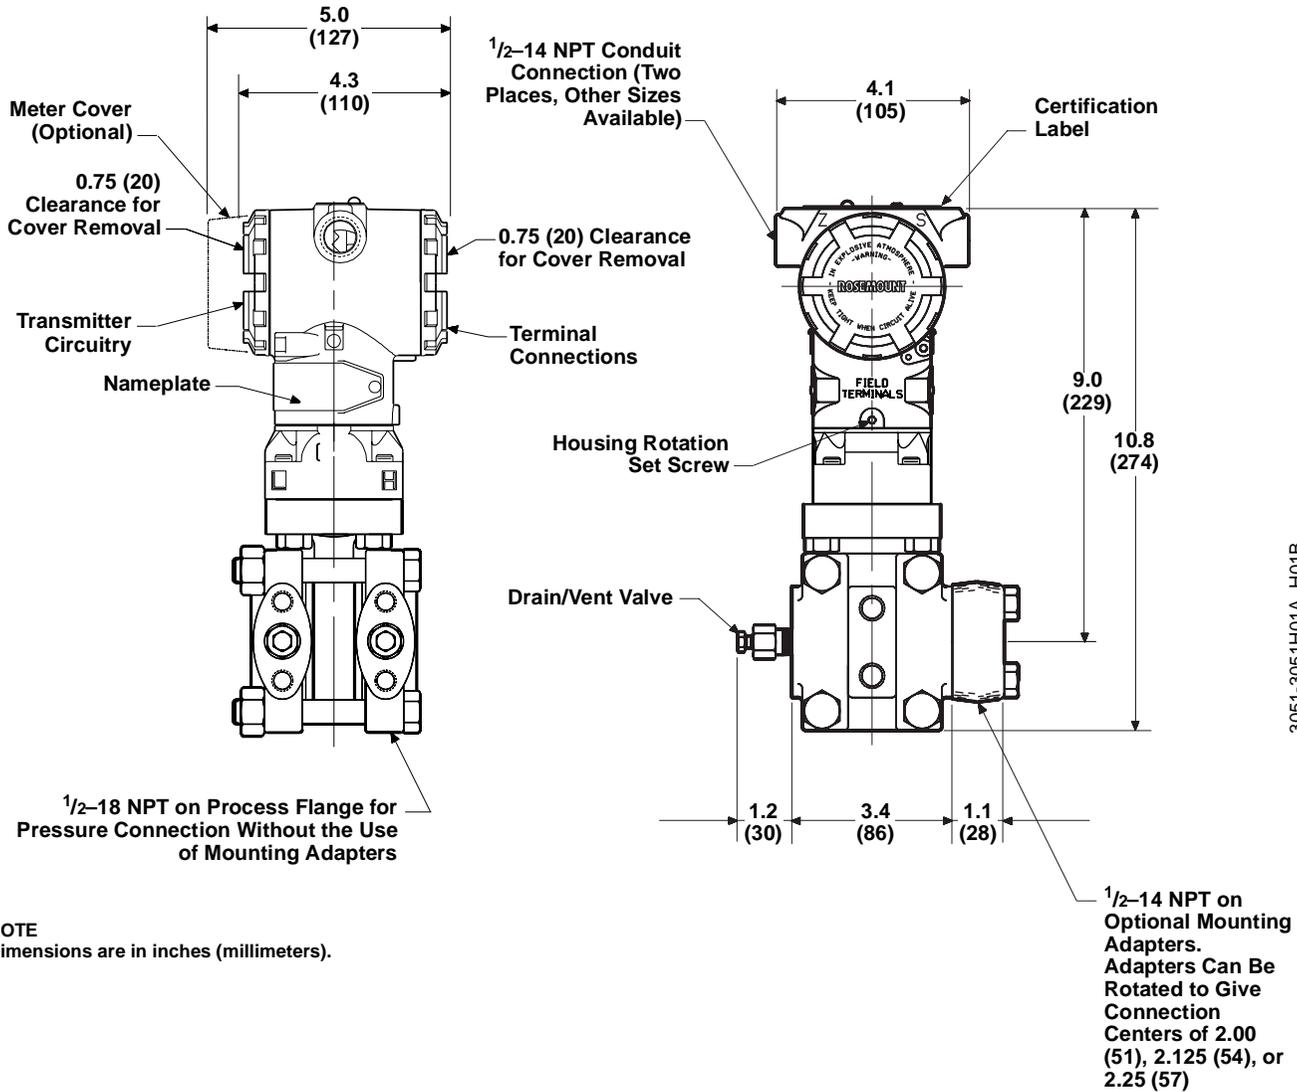


TABLE 3-1. Model 3051L Dimensional Specifications—*Except Where Noted, Dimensions Are in Inches (Millimeters).*


Class	Pipe Size	Flange Thickness	Bolt Diameter	Outside Diameter	No. of Bolts	Bolt Hole Diameter	Exten. Diam. (1)	O.D. Gask. Surf.	Lower Housing	
									Xmtr Side	Proc. Side
		A	B	C			D	E	F	G
ASME B 16.5 (ANSI) 150	2 (51)	1.12 (28)	4.75 (121)	6.0 (152)	4	0.75 (19)	NA	3.75 (95)	2.9 (74)	2.16 (55)
	3 (76)	1.31 (33)	6.0 (152)	7.5 (190)	4	0.75 (19)	2.58 (65)	5.0 (127)	3.11 (79)	3.11 (79)
	4 (102)	1.31 (33)	7.5 (190)	9.0 (228)	8	0.75 (19)	3.5 (89)	6.81 (173)	4.06 (103)	4.06 (103)
ASME B 16.5 (ANSI) 300	2 (51)	1.25 (32)	5.0 (127)	6.5 (165)	8	0.75 (19)	NA	3.75 (95)	2.9 (74)	2.16 (55)
	3 (76)	1.50 (38)	6.62 (168)	8.25 (209)	8	0.88 (22)	2.58 (65)	5.0 (127)	3.11 (79)	3.11 (79)
	4 (102)	1.62 (41)	7.88 (200)	10.0 (254)	8	0.88 (22)	3.5 (89)	6.81 (173)	4.06 (103)	4.06 (103)
ASME B 16.5 (ANSI) 600	2 (51)	1.12 (28)	5.0 (127)	6.5 (165)	8	0.75 (19)	NA	3.75 (95)	2.9 (74)	2.16 (55)
	3 (76)	1.37 (35)	6.62 (168)	6.62 (168)	8	0.88 (22)	2.58 (65)	5.0 (127)	3.11 (79)	3.11 (79)
DIN PN 10–40	DN 50	26 mm	125 mm	165 mm	4	18 mm	NA	95 mm	74 mm	55 mm
DIN PN 25/40	DN 80	30 mm	160 mm	200 mm	8	18 mm	65 mm	127 mm	79 mm	79 mm
	DN 100	30 mm	190 mm	235 mm	8	22 mm	89 mm	173 mm	103 mm	103 mm
DIN PN 10/16	DN 100	26 mm	180 mm	220 mm	8	18 mm	89 mm	173 mm	103 mm	103 mm

(1) Tolerances are 0.040 (1,02), -0.020 (0,51).


NOTE

Use this table in conjunction with Figure 3-7.



FIGURE 3-7. Model 3051L
Dimensional Drawings.

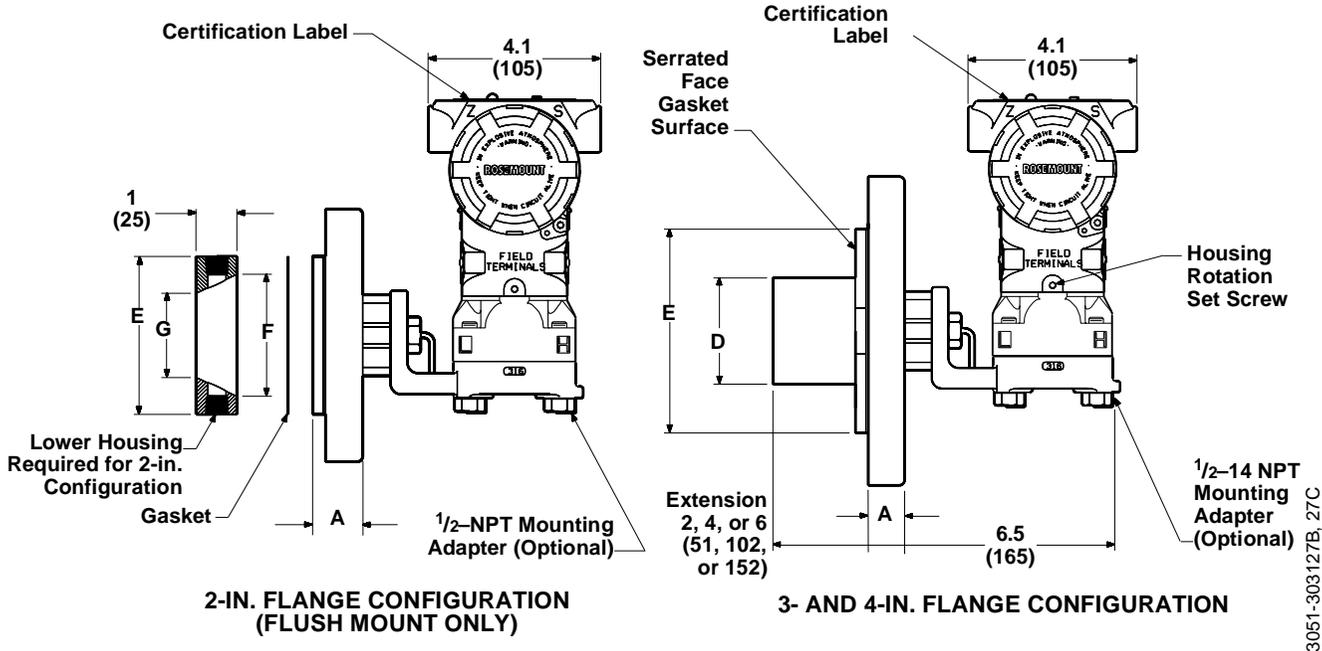

OPTIONAL FLUSHING CONNECTION RING (LOWER HOUSING)

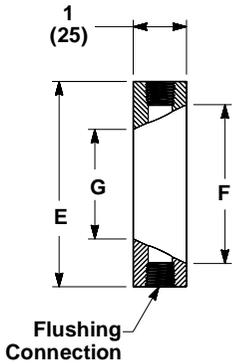


DIAPHRAGM ASSEMBLY AND MOUNTING FLANGE

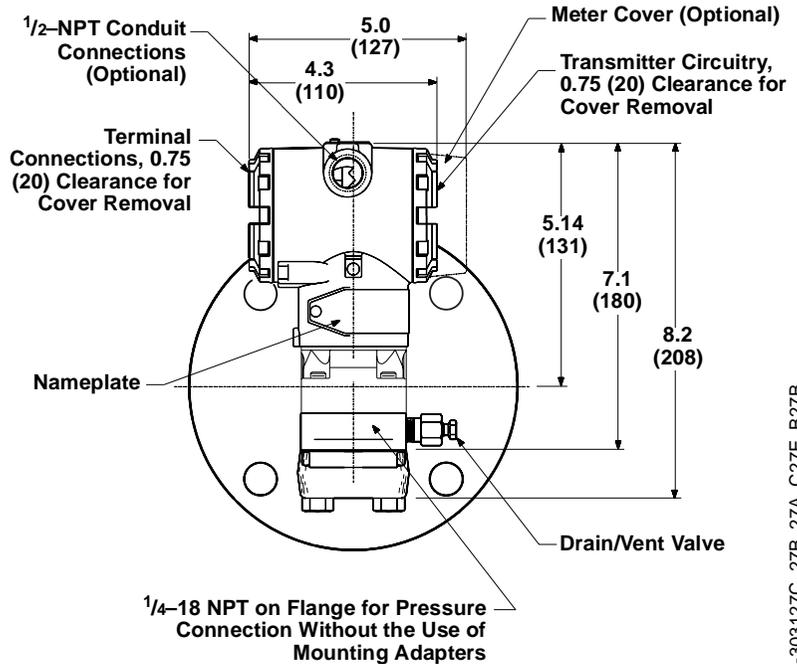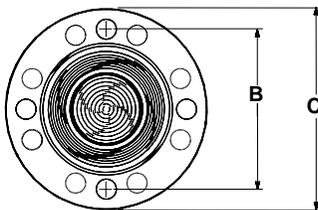

NOTE: Dimensions are in inches (millimeters).

3051-303127C, 27B, 27A, C27E, B27B

FIGURE 3-8. Typical Mounting Configurations for Model 3051 Transmitters with Model 305 and 305 Manifolds.

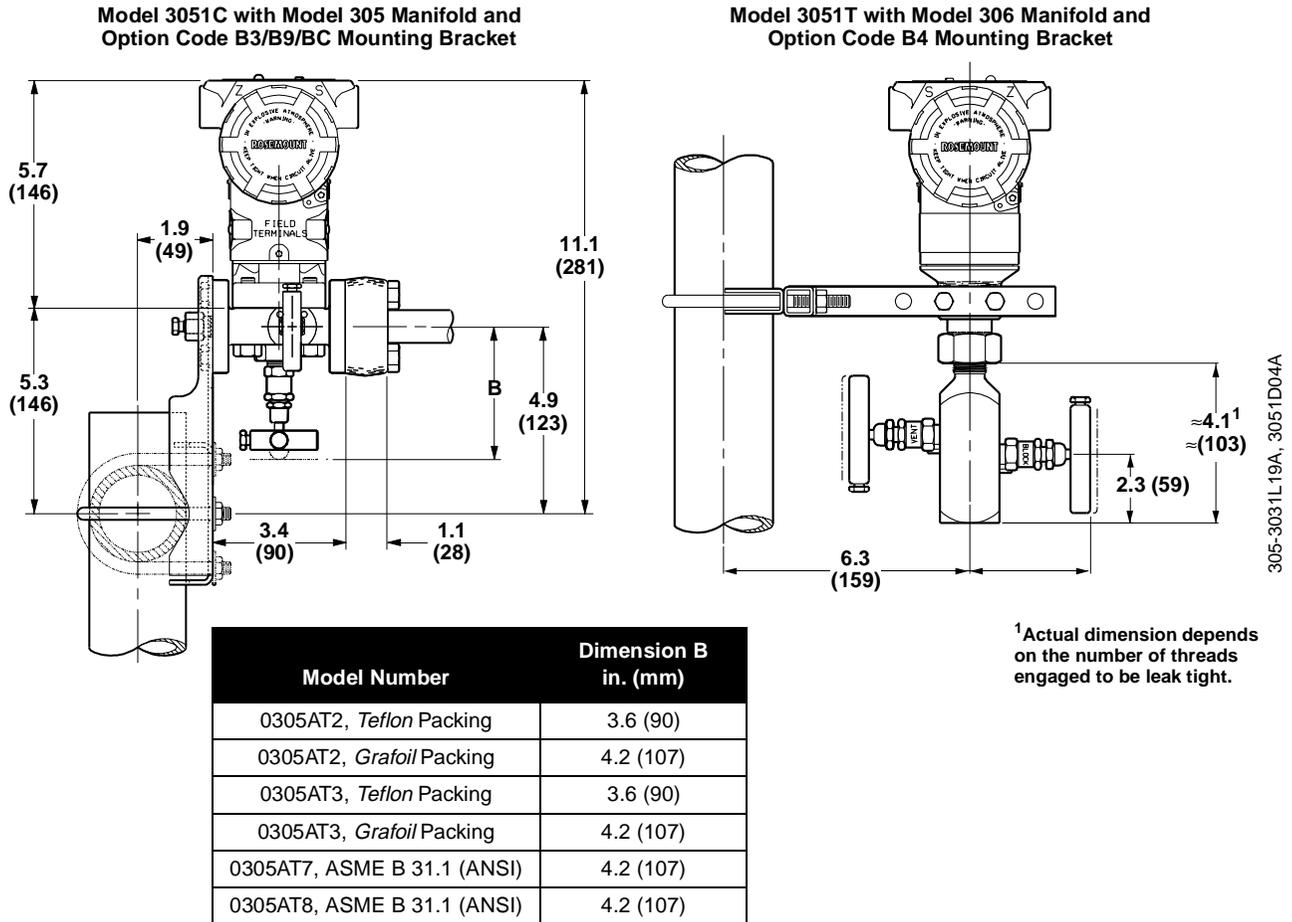

NOTE: Dimensions are in inches (millimeters).

Mounting

The Model 3051C Pressure Transmitter weighs 5.7 lbs (2,6 kg) without additional options. Optional mounting brackets available with the Model 3051 allow mounting to a panel, wall, or 2-inch pipe. The B4 Bracket Option for use with the Coplanar flange and the Model 3051T is 316 SST with 316 SST bolts. Figures 3-10 and 3-11 on pages 3-14 and 3-15 show bracket dimensions and mounting configurations for the B4 Option.

Bracket options B1, B2, B3, B7, B8, and B9 are sturdy polyurethane painted carbon steel brackets designed for use in pipe or panel mounting the traditional flange (H2, H3, H4, or H7 option). The B1–B3 brackets have carbon steel bolts, while the B7–B9 brackets have stainless steel bolts. Bracket options BA and BC are stainless steel with stainless steel bolts. Dimensionally, these brackets are identical to the B1–B3 brackets used with the Rosemount Model 1151 Pressure Transmitter except for the length of the bolts used to mount the transmitter to the bracket. Bracket options B5/B6 are used for Model 3051H transmitters. These bracket styles facilitate multiple mounting configurations (see Figures 3-12 and 3-13 on page 3-16). When installing the transmitter to one of the mounting brackets, torque the bolts to 125 inch-pounds.

NOTE

The transmitter is calibrated in an upright position at the factory. If you mount the transmitter in any other position, the zero point will shift by an amount equivalent to the liquid head caused by the varied mounting position. To reset the zero point, refer to “Sensor Trim” on page 2-24.

Mounting Requirements

Refer to Figure 3-9 for examples of the following mounting configurations:

Liquid Flow Measurement

- Place taps to the side of the line to prevent sediment deposits on the transmitter’s process isolators.
- Mount the transmitter beside or below the taps so gases can vent into the process line.
- Mount drain/vent valve upward to allow gases to vent.

Gas Flow Measurement

- Place taps in the top or side of the line.
- Mount the transmitter beside or above the taps so liquid will drain into the process line.


Steam Flow Measurement

- Place taps to the side of the line.
- Mount the transmitter below the taps to ensure that the impulse piping will stay filled with condensate.
- Fill impulse lines with water to prevent the steam from contacting the transmitter directly and to ensure accurate measurement start-up.

NOTE

In steam or other elevated temperature services, it is important that temperatures at the coplanar process flanges not exceed 250 °F (121 °C) for transmitters with silicone fill or 185 °F (85 °C) for inert fill. In vacuum service, these temperature limits are reduced to 220 °F (104 °C) for silicone fill and 160 °F (71 °C) for inert fill. Models 3051L, 3051H, and the traditional flange allow higher temperatures.

FIGURE 3-9. Installation Examples.

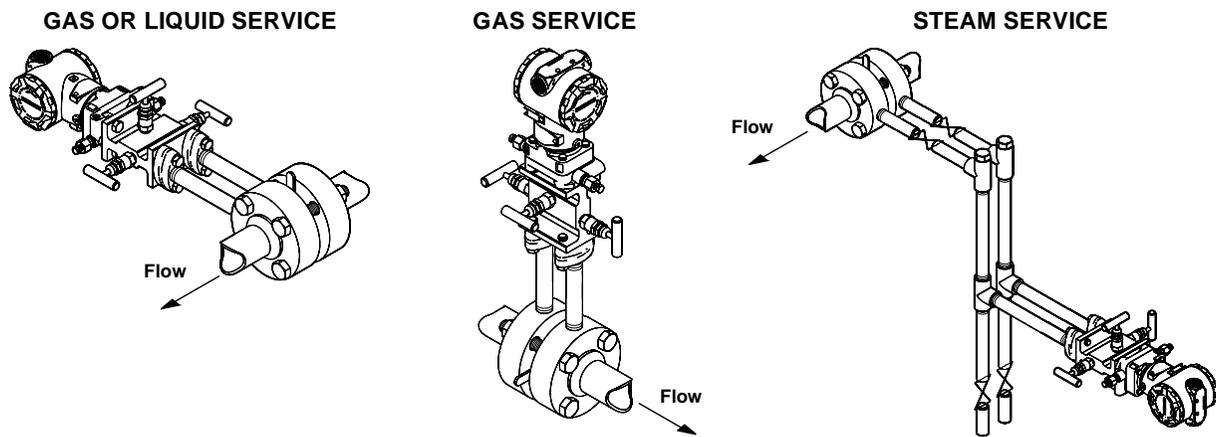

Impulse Piping

The piping between the process and the transmitter must accurately transfer the pressure to obtain accurate measurements. There are five possible sources of error: pressure transfer, leaks, friction loss (particularly if purging is used), trapped gas in a liquid line, liquid in a gas line, and density variations between the legs.

The best location for the transmitter in relation to the process pipe depends on the process itself. Use the following guidelines to determine transmitter location and placement of impulse piping:

- Keep impulse piping as short as possible.
- For liquid service, slope the impulse piping at least 1 inch per foot (8 cm per m) upward from the transmitter toward the process connection.
- For gas service, slope the impulse piping at least 1 inch per foot (8 cm per m) downward from the transmitter toward the process connection.
- Avoid high points in liquid lines and low points in gas lines.
- Make sure both impulse legs are the same temperature.
- Use impulse piping large enough to avoid friction effects and blockage.
- Vent all gas from liquid piping legs.
- When using a sealing fluid, fill both piping legs to the same level.
- When purging, make the purge connection close to the process taps and purge through equal lengths of the same size pipe. Avoid purging through the transmitter.
- Keep corrosive or hot (above 250 °F [121 °C]) process material out of direct contact with the sensor module and flanges.
- Prevent sediment deposits in the impulse piping.
- Keep the liquid head balanced on both legs of the impulse piping.
- Avoid conditions that might allow process fluid to freeze within the process flange.

Process Connections

Model 3051 process connections on the transmitter flange are 1/4–18 NPT. Flange adapter unions with 1/2–14 NPT connections are supplied as standard. The threads are Class 2; use your plant-approved lubricant or sealant when making the process connections. The process connections on the transmitter flange are on 2 1/8-inch (54 mm) centers to allow direct mounting to a three-valve or five-valve manifold. Rotate one or both of the flange adapters to attain connection centers of 2 inches (51 mm), 2 1/8 inches (54 mm), or 2 1/4 inches (57 mm). See page 3-12 for information on the Model 3051T process connection.

⚠ Install and tighten all four flange bolts before applying pressure, or process leakage will result. When properly installed, the flange bolts will protrude through the top of the module housing. Do not attempt to loosen or remove the flange bolts while the transmitter is in service.


To install adapters to a Coplanar flange, perform the following procedure:

1. Remove the flange bolts.
2. Leaving the flange in place, move the adapters into position with the O-ring installed.
3. Clamp the adapters and the Coplanar flange to the transmitter module using the larger of the bolts supplied.
4. Tighten the bolts. Refer to “Mounting Bolts” on page 3-18 for torque specifications.

⚠ WARNING

Failure to install proper flange adapter O-rings can cause process leaks, which can result in death or serious injury.

Each style of Rosemount flange adapters requires a unique O-ring, as shown below. Flange adapters are distinguished by their unique grooves.

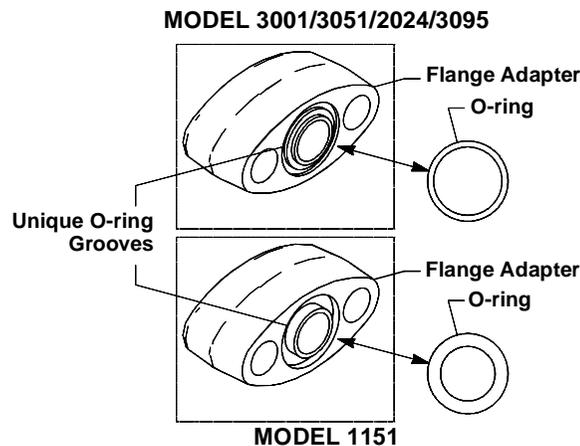


3051-0569A01A

Use only the O-ring designed to seal with an adapter. Refer to the Spare Parts list in Section 5: Specifications and Reference Data for the correct part numbers of the flange adapters and O-rings designed for Model 3051 transmitters.

⚠ See “Safety Messages” on page 3-1 for complete warning information.

When compressed, Teflon® O-rings tend to cold flow, which aids in their sealing capabilities. Whenever you remove flanges or adapters, visually inspect the Teflon O-rings. Replace them if there are any signs of damage, such as nicks or cuts. If they are undamaged, you may reuse them. If you replace the O-rings, retorque the flange bolts after installation to compensate for cold flow. Refer to the process sensor body reassembly procedure in Section 4: Troubleshooting.

Model 3051T Process Connection

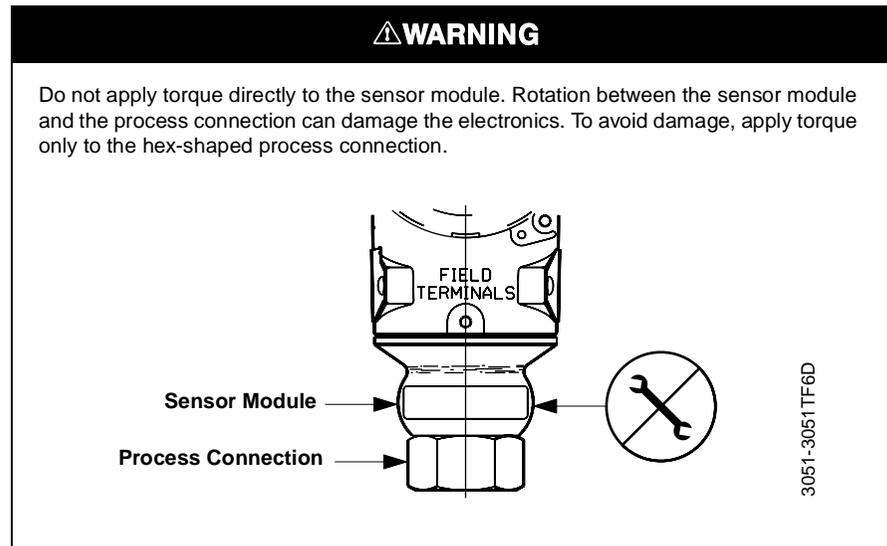



Housing Rotation

The electronics housing can be rotated up to 180 degrees (left or right) to improve field access or to better view the optional LCD meter. To rotate the housing, perform the following procedure:

1. Loosen the housing rotation set screw using a $\frac{9}{64}$ -in. hex wrench.
2. Turn the housing up to 180 degrees to the left or right of its original (as shipped) position. **Do not rotate the housing more than 180 degrees without first performing a disassembly procedure (see “Disassembly Procedures” on page 4-3). Over-rotation will sever the electrical connection between the sensor module and the electronics module.**
3. Retighten the housing rotation set screw.



FIGURE 3-10. Coplanar Flange Mounting Configurations with Optional Bracket (B4) for 2-in. Pipe or Panel Mounting.

PANEL MOUNTING

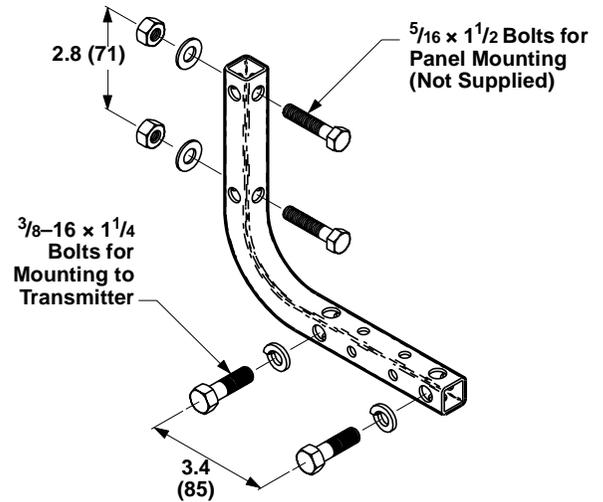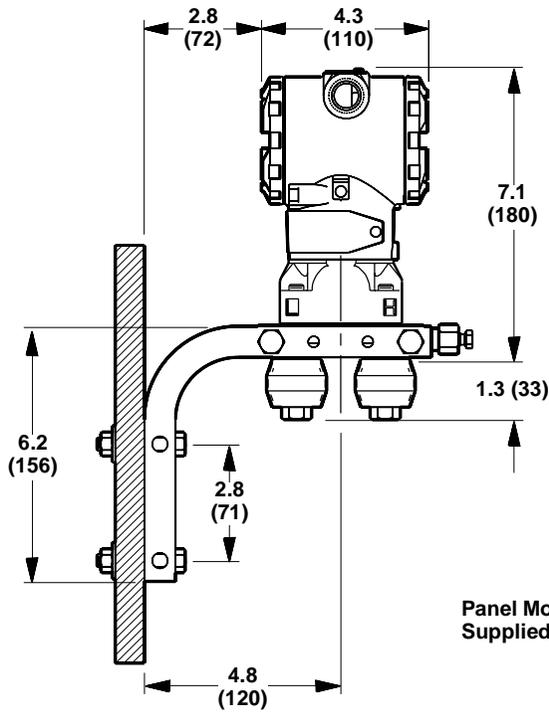

Panel Mounting Configuration 3/8-16 x 1 1/4 Bolts (2) Supplied for Attaching Bracket to Transmitter

PIPE MOUNTING

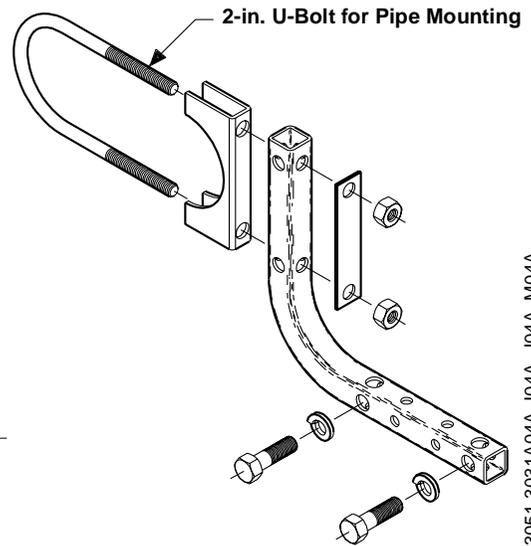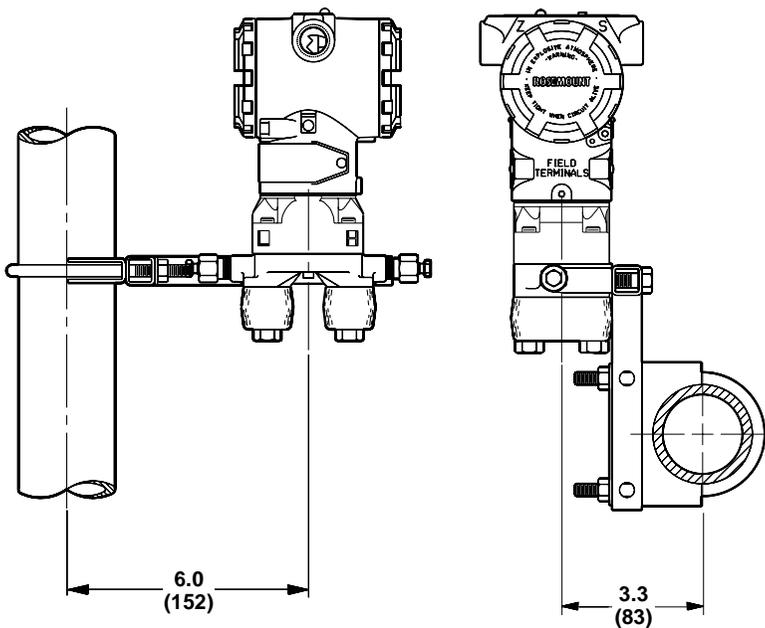


3051-3031A04A, I04A, J04A, M04A


NOTE
Dimensions are in inches (millimeters).

FIGURE 3-11. Model 3051T Mounting Configurations with Optional Bracket (B4) for 2-in. Pipe or Panel Mounting.


PANEL MOUNTING

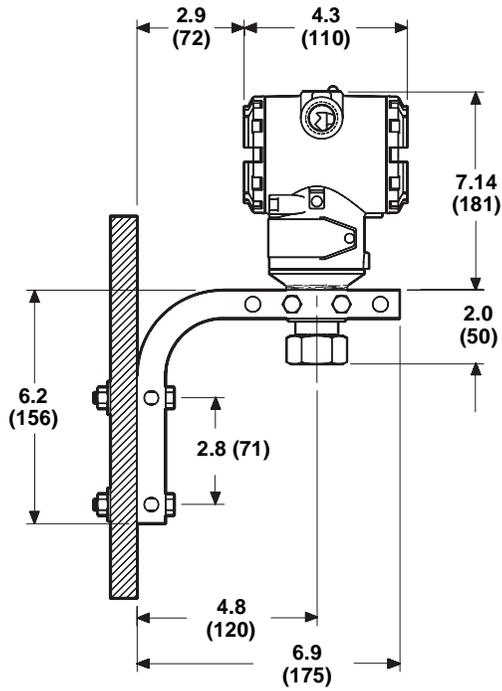


PANEL MOUNTING BRACKET

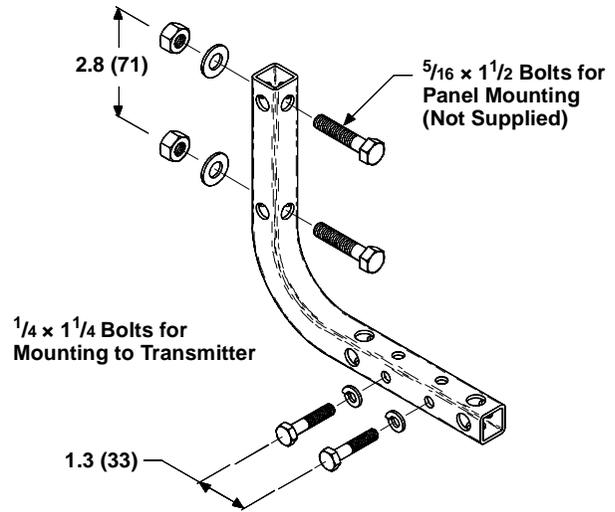

PIPE MOUNTING

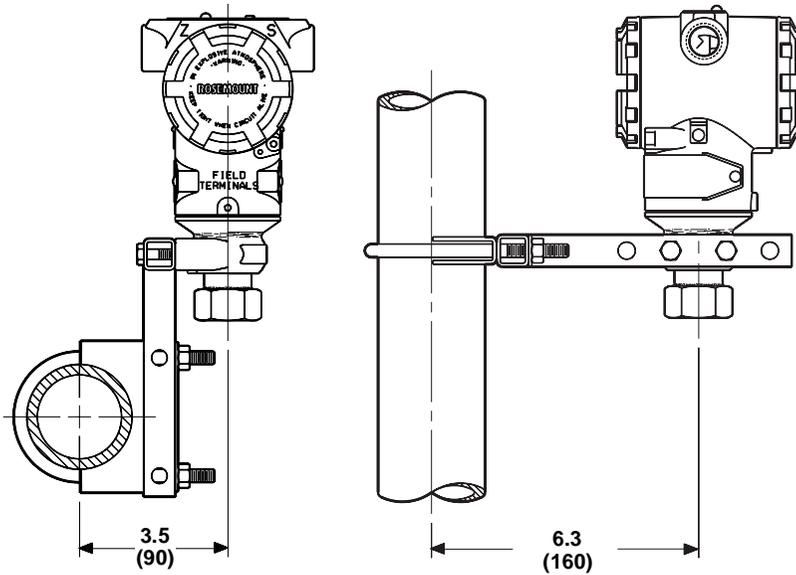

PIPE MOUNTING BRACKET


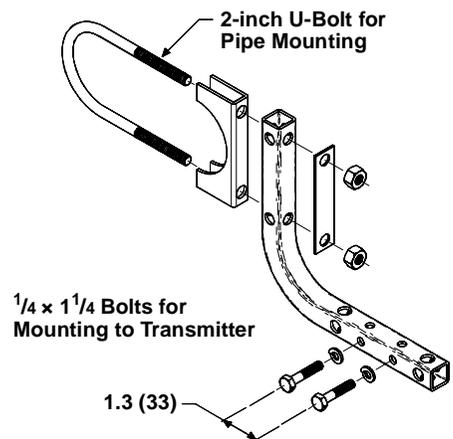


NOTE
Dimensions are in inches (millimeters).

3051-3051TA4A, TB4A, TC4A, TD4A, TE4A

FIGURE 3-12. Optional Mounting Bracket for Traditional Flange Options B1/B7/BA.

OPTION B1/B7/BA: TRADITIONAL FLANGE 2-IN. PIPE MOUNTING BRACKET

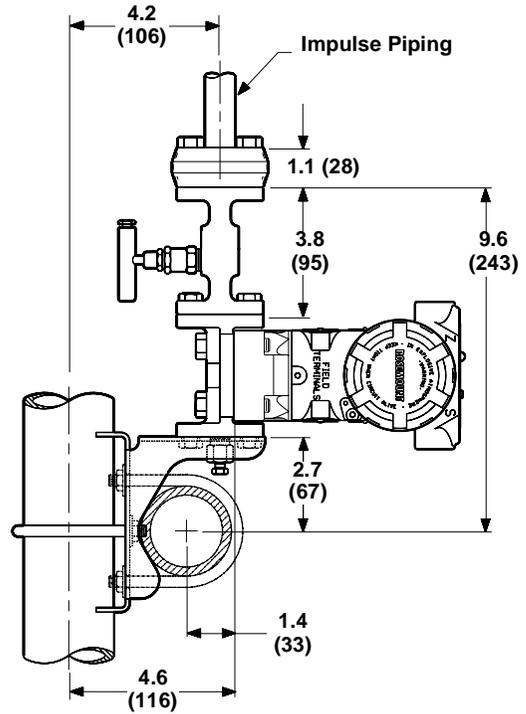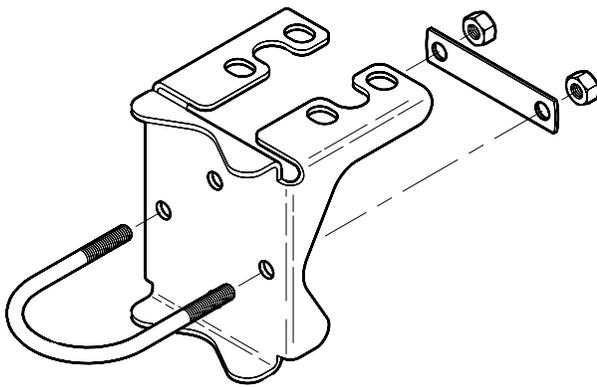


NOTE
Dimensions are in inches (millimeters).


3051-3031C19A, I19A

FIGURE 3-13. Optional Mounting Brackets for Traditional Flange Options B2/B8, B3/B9/BC.

OPTION B2/B8: TRADITIONAL FLANGE PANEL MOUNTING BRACKET

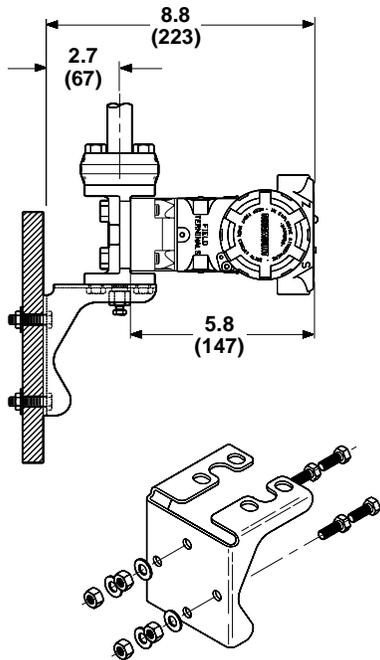

OPTION B3/B9/BC: TRADITIONAL FLANGE

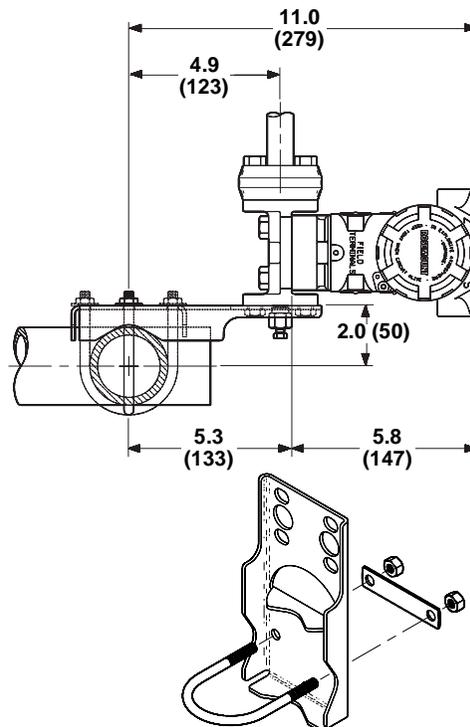


NOTE
Dimensions are in inches (millimeters).


3051-3031E19B, H19A, J19D, J19E

FIGURE 3-14. Optional Mounting Bracket for 3051H Option Codes B5/B6.

2-IN. PIPE MOUNTING CONFIGURATION

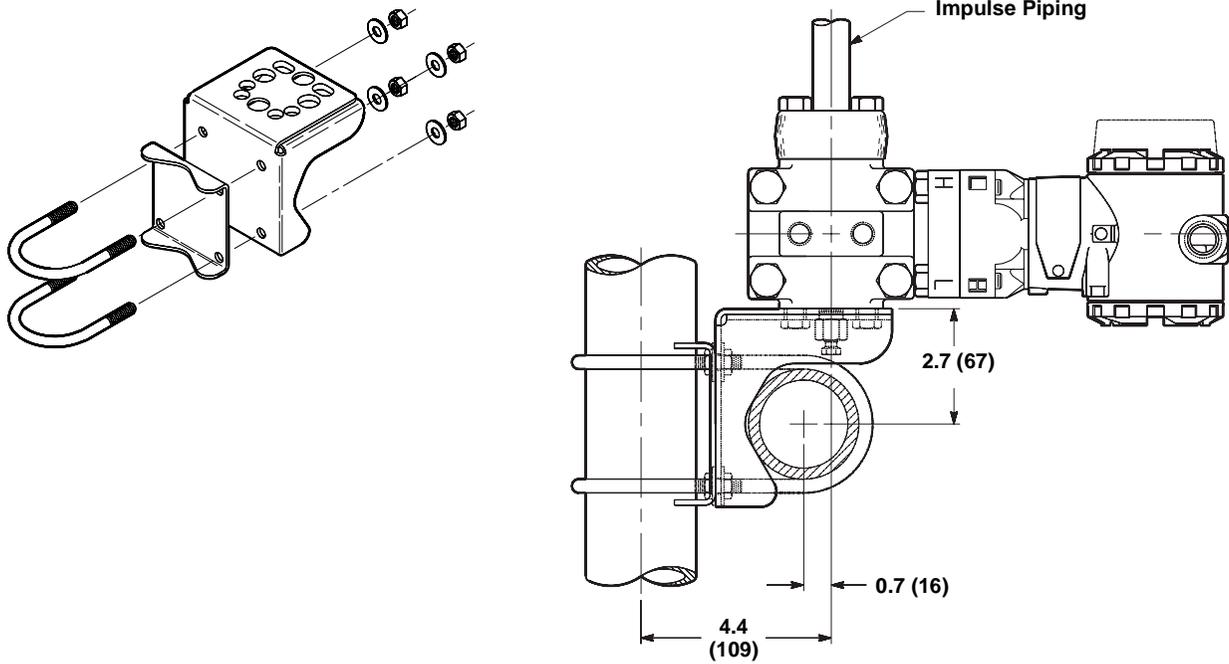

PANEL MOUNTING CONFIGURATION

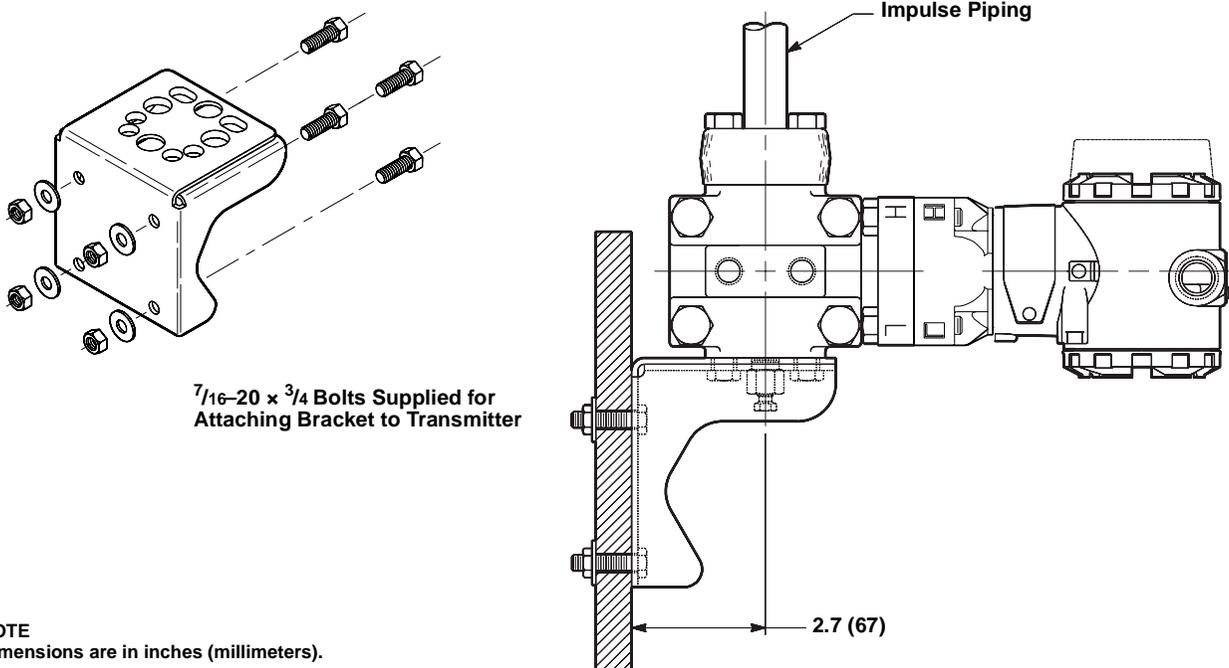

$7/16-20 \times 3/4$ Bolts Supplied for Attaching Bracket to Transmitter

NOTE
Dimensions are in inches (millimeters).

3051-3031F19B, G19A; 3051HA3A, HA3B

Mounting Bolts

The following guidelines have been established to ensure a tight flange, adapter, or manifold seal. The Model 3051 is shipped with the Coplanar flange installed with four 1.75-inch flange bolts. The following bolts also are supplied to facilitate other mounting configurations:

Differential Pressure


- Four 2.88-inch flange/adapter bolts for mounting the flange adapters to the Coplanar flange.
- Four 2.25-inch manifold/flange bolts for mounting the Coplanar flange on a three-valve manifold. In this configuration, the 1.75-inch bolts may be used to mount the flange adapters to the process connection side of the manifold.

Gage/Absolute Pressure

- Two 2.88-inch flange/adapter bolts for mounting the flange adapters to the Coplanar flange.

Figures 3-15 and 3-16 on pages 3-19 and 3-20 show mounting bolts and bolting configurations. See page 6-11 for bolting requirements for alternate mounting configurations. Stainless steel bolts supplied by Rosemount Inc. are coated with a lubricant to ease installation. Carbon steel bolts do not require lubrication. No additional lubricant should be applied when installing either type of bolt. Bolts supplied by Rosemount Inc. are identified by their head markings:

Carbon Steel (CS) Head Markings



Stainless Steel (SST) Head Markings



* The last digit in the F593_ head marking may be any letter between A and M.

Bolt Installation

 Only use bolts supplied with the Model 3051 or sold by Rosemount Inc. as spare parts for the Model 3051 transmitter. Use the following bolt installation procedure:



1. Finger-tighten the bolts.
2. Torque the bolts to the initial torque value using a crossing pattern (see Table 3-2 for torque values).
3. Torque the bolts to the final torque value using the same crossing pattern.

TABLE 3-2. Bolt Installation Torque Values.


Bolt Material	Initial Torque Value	Final Torque Value
CS-ASTM-A445 Standard	300 in.-lb (34 N-m)	650 in.-lb (73 N-m)
316 SST—Option L4	150 in.-lb (17 N-m)	300 in.-lb (34 N-m)
ASTM-A-193-B7M—Option L5	300 in.-lb (34 N-m)	650 in.-lb (73 N-m)
<i>Monel</i> —Option L6	300 in.-lb (34 N-m)	650 in.-lb (73 N-m)

 See “Safety Messages” on page 3-1 for complete warning information.

FIGURE 3-15. Mounting Bolts and Bolt Configurations for Coplanar Flange.

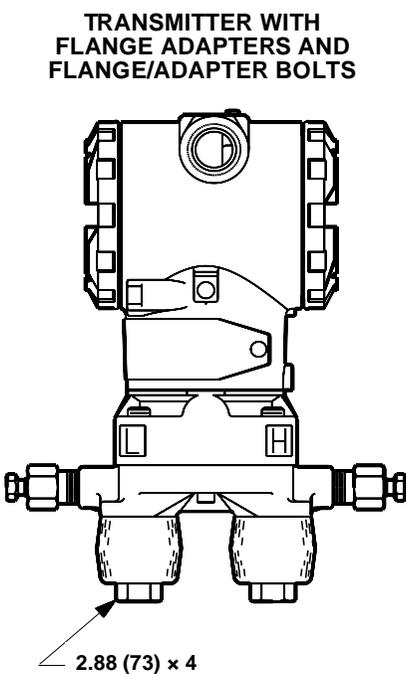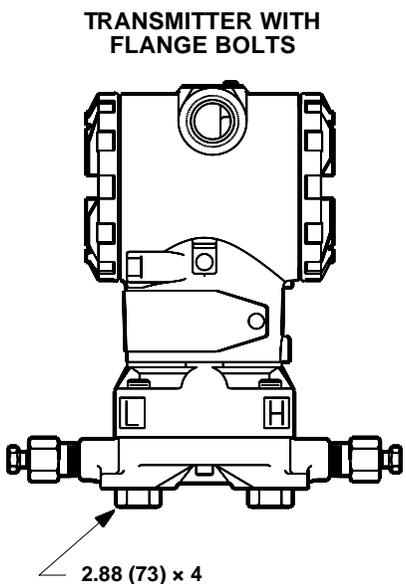

**TRANSMITTER WITH 3-VALVE MANIFOLD
MANIFOLD/FLANGE BOLTS
FLANGE ADAPTERS
AND FLANGE/ADAPTER BOLTS**
(Differential Configuration Shown)

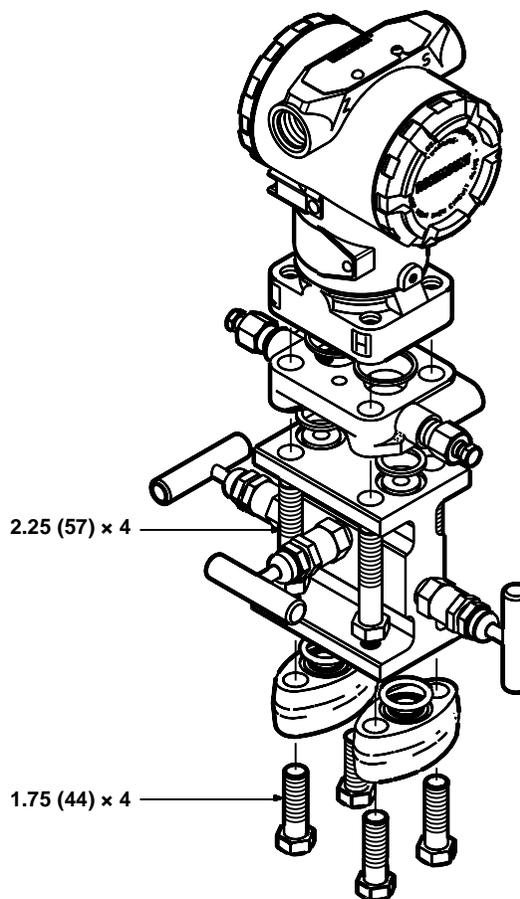


Description	Qty	Size in. (mm)
Differential Pressure		
Flange Bolts	4	1.75 (44)
Flange/Adapter Bolts	4	2.88 (73)
Manifold/Flange Bolts	4	2.25 (57)
Gage/Absolute Pressure ⁽¹⁾		
Flange Bolts	4	1.74 (44)
Flange/Adapter Bolts	2	2.88 (73)

NOTE
Dimensions are in inches (millimeters).

⁽¹⁾ Model 3051 T transmitters are direct mount and do not require bolts for process connection.

3051-3031E06FD E06F; 305-3031A29P

FIGURE 3-16. Traditional Flange Bolt Configurations.

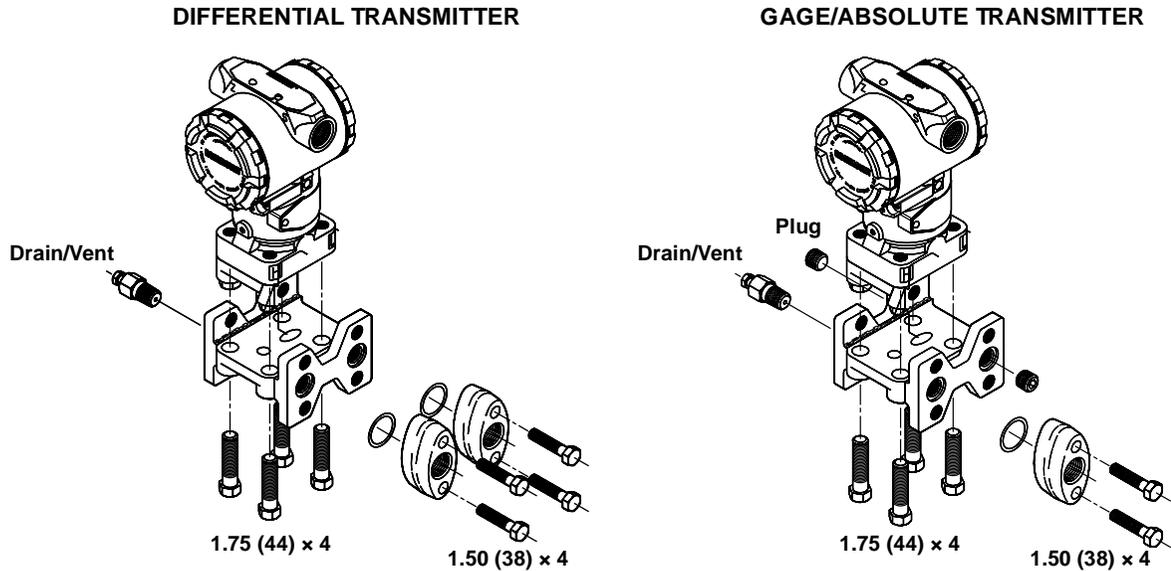

3051-3031B07G, B07I

NOTE
Dimensions are in inches (millimeters).

ELECTRICAL CONSIDERATIONS

The transmitter terminal block is in the compartment of the electronics housing labeled “FIELD TERMINALS.” The other compartment contains the transmitter electronics module. Connections for the HART-based communicator are attached beneath the terminal screws on the terminal block. You can connect the Rosemount Model 272 Field Calibrator at the signal terminals to provide power to the transmitter temporarily for calibration or diagnostic purposes. Or you can attach it to the test connections on the terminal block of the transmitter for indication purposes. Figure 3-17 shows power supply load limitations for the transmitter.

Power Supply

4–20 mA Transmitters

The dc power supply should provide power with less than 2 percent ripple. The total resistance load is the sum of the resistance of the signal leads and the load resistance of the controller, indicator, and related pieces. Note that the resistance of intrinsic safety barriers, if used, must be included.


NOTE

A minimum loop resistance of 250 ohms is required to communicate with a HART-based communicator. With 250 ohms of loop resistance, the transmitter will require a minimum of 16 volts to output 20 mA. If a single power supply is used to power more than one Model 3051 transmitter, the power supply used, and circuitry common to the transmitters, should not have more than 20 ohms of impedance at 1200 Hz.

Low Power Transmitters

Low-power transmitters require a 6–12 V dc external power supply.

FIGURE 3-17. Power Supply Load Limitations, 4–20 mA Transmitters.

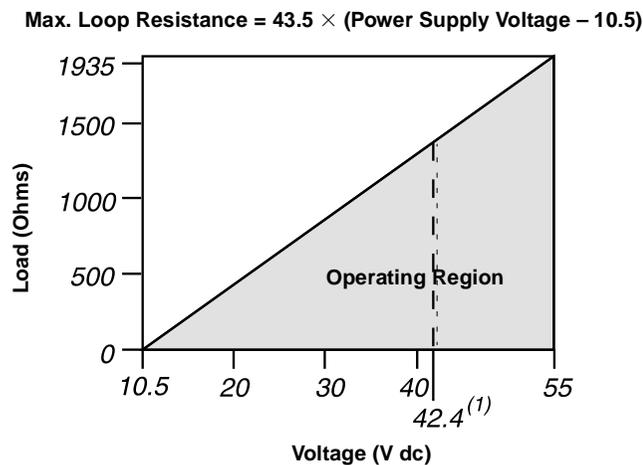

3051-0103A

Communication requires a minimum loop resistance of 250 ohms.

(1) For CSA approval, power supply must not exceed 42.4 V.

Wiring

To make connections, perform the following procedure:

-  1. Remove the housing cover on the side marked “FIELD TERMINALS.” Do not remove the cover in explosive atmospheres when the circuit is alive. All power to the transmitter is supplied over the signal wiring.
-  2. Connect the lead that originates at the positive side of the power supply to the terminal marked “+” and the lead that originates from the negative side of the power supply to the terminal marked “-”. Avoid contact with the leads and terminals. Do not connect the powered signal wiring to the test terminals. Power could damage the test diode in the test connection.
3. Plug and seal unused conduit connections on the transmitter housing to avoid moisture accumulation in the terminal side of the housing. If you do not seal the unused connections, mount the transmitter with the electrical housing positioned downward for drainage. Install wiring with a drip loop. Arrange the drip loop so the bottom is lower than the conduit connections and the transmitter housing.

NOTE

Signal wiring needs to be shielded, but use twisted pairs for best results. In order to ensure proper communication, use 24 AWG or larger wire, and do not exceed 5000 feet (1 500 meters).

Inductive-based transient protectors, including the Rosemount Model 470, can adversely affect the output of Model 3051 4–20 mA transmitters. Do not use the Model 470 for transient protection with the Model 3051. If your application requires transient protection, install the Transient Protection Terminal Block (see “Transient Protection Terminal Block (T1)” on page 6-12).

 See “Safety Messages” on page 3-1 for complete warning information.

Signal Wiring Grounding

Do not run signal wiring in conduit or open trays with power wiring, or near heavy electrical equipment. You may ground the signal wiring at any one point on the signal loop, or leave it ungrounded. The negative terminal of the power supply is a recommended grounding point.

HAZARDOUS LOCATIONS

The Model 3051 has an explosion-proof housing and circuitry suitable for intrinsically safe and non-incendive operation. Individual transmitters are clearly marked with a tag indicating the certifications they carry. See Section 5 Specifications and Reference Data for specific approval categories, and see Appendix C Approval Drawings for installation drawings.

IMPORTANT NOTE

Once a device labeled with multiple approval types is installed, it should not be reinstalled using any other approval types. Permanently mark the approval label to distinguish it from unused approval types.

Grounding the Transmitter Case

The transmitter case should always be grounded in accordance with national and local electrical codes. The most effective transmitter case grounding method is direct connection to earth ground with minimal impedance. Methods for grounding the transmitter case include:

- **Internal Ground Connection:** The Internal Ground Connection screw is inside the FIELD TERMINALS side of the electronics housing. This screw is identified by a ground symbol () and is standard on all Model 3051 transmitters.
- **External Ground Assembly:** This assembly is included with the optional transient protection terminal block (Option Code T1), and it is included with CESI/CENELEC Flameproof Certification (Option Code E8), BASEEFA/CENELEC Intrinsic Safety Certification (Option Code I1), and BASEEFA Type N Certification (Option Code N1). The External Ground Assembly can also be ordered with the transmitter (Option Code V5), or as a spare part (03031-0398-0001).

NOTE

Grounding the transmitter case using the threaded conduit connection may not provide a sufficient ground. The transient protection terminal block (Option Code T1) does not provide transient protection unless the transmitter case is properly grounded. Use the above guidelines to ground the transmitter case. Do not run the transient protection ground wire with signal wiring as the ground wire may carry excessive current if a lightning strike occurs.

ENVIRONMENTAL CONSIDERATIONS

The following guidelines can help optimize transmitter performance. Mount the transmitter to minimize ambient temperature changes, vibration, mechanical shock, and to avoid external contact with corrosive materials. Section 5: Specifications and Reference Data lists the transmitter temperature operating limits.

Access Requirements

When choosing an installation location and position, take into account the need for access to the transmitter.

Process Flange Orientation

Mount the process flanges with sufficient clearance for process connections. For safety reasons, place the drain/vent valves so the process fluid is directed away from technicians when the vents are used. In addition, consider the possible need for a testing or calibration input.

Housing Rotation

See “Housing Rotation” on page 3-13.

Terminal Side of Electronics Housing

Mount the transmitter so that the terminal side is accessible. A 0.75-inch (19 mm) clearance is required for cover removal. Use a conduit plug on the unused side of the conduit opening.

Circuit Side of Electronics Housing

Provide 0.75 inches (19 mm) clearance if possible for cover removal. Three inches of clearance is required for cover removal if a meter is installed.

Exterior of Electronics Housing

The integral span and zero adjustments are located under the certifications plate on the top of the transmitter. Allow a minimum of 1.0 inch of clearance above the transmitter if you intend to use the integral zero and span adjustments.

Cover Installation

Always install the electronics housing covers metal-to-metal to ensure a proper seal.

Troubleshooting

OVERVIEW

Table 4-1 provides summarized troubleshooting suggestions for the most common operating problems.

If you suspect a malfunction despite the absence of any diagnostic messages on the communicator display, follow the procedures described here to verify that transmitter hardware and process connections are in good working order. Always deal with the most likely and easiest-to-check conditions first.

SAFETY MESSAGES

Procedures and instructions in this section may require special precautions to ensure the safety of the personnel performing the operations. Information that raises potential safety issues is indicated by a warning symbol (⚠). Refer to the following safety messages before performing an operation preceded by this symbol.

Warnings (⚠)

⚠ WARNING

Explosions can result in death or serious injury.

- Do not remove the transmitter covers in explosive environments when the circuit is alive.
- Both transmitter covers must be fully engaged to meet explosionproof requirements.
- Before connecting a communicator in an explosive atmosphere, make sure that the instruments in the loop are installed according to intrinsically safe or nonincendive field wiring practices.

⚠ CAUTION

Static electricity can damage sensitive components.

- Observe safe handling precautions for static-sensitive components.


TABLE 4-1. Model 3051 Troubleshooting Chart.

Symptom	Corrective Actions
Milliamp Reading Is Zero	<ul style="list-style-type: none"> • Check if power polarity is reversed. • Verify voltage across terminals (should be 10 to 55 V dc). • Check for bad diode in terminal block. • Replace transmitter terminal block.
Transmitter Not Communicating with HART Communicator	<ul style="list-style-type: none"> • Check power supply voltage at transmitter (minimum 10.5 V). • Verify calibration settings (4 and 20 mA points) • Check load resistance (250 Ω minimum). • Check if unit is addressed properly. • Replace electronics board.
Milliamp Reading Is Low or High	<ul style="list-style-type: none"> • Check pressure variable reading for saturation. • Check if output in alarm condition. • Verify 4 and 20 mA range points. • Perform 4–20 mA output trim. • Replace electronics board.
No Response to Changes in Applied Pressure	<ul style="list-style-type: none"> • Check test equipment. • Check impulse piping for blockage. • Check disabled span adjustment. • Check if output in alarm condition. • Replace sensor module.
Pressure Variable Reading Is Low or High	<ul style="list-style-type: none"> • Check impulse piping for blockage. • Check test equipment. • Perform full sensor trim. • Replace sensor module.
Pressure Variable Reading Is Erratic	<ul style="list-style-type: none"> • Check impulse piping for blockage. • Check damping. • Check for EMF interference. • Replace sensor module.

BEFORE DISASSEMBLING THE TRANSMITTER

Maintenance procedures differ for improved and previous style transmitter housings. Verify the specific physical characteristics of your transmitter before you begin any maintenance procedures. The width of the conduit entries is the most noticeable physical difference between the improved and the previous style housing (see Figure 4-1).

FIGURE 4-1. Improved and Previous Styles of the Model 3051 Transmitter Housing.

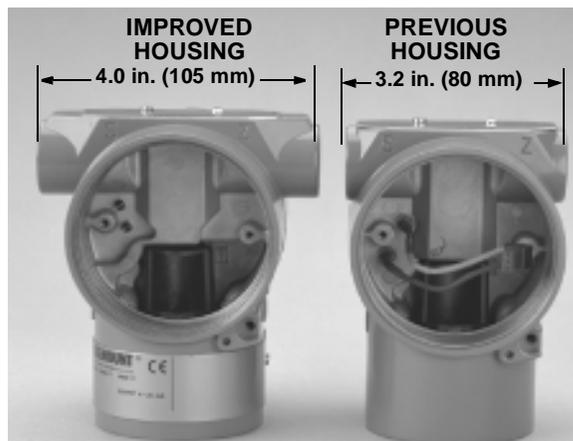

DISASSEMBLY PROCEDURES

Remove the Transmitter from Service



3051-052AB

⚠ Do not remove the instrument cover in explosive atmospheres when the circuit is alive.

NOTE

Once you have determined a transmitter to be inoperable, remove it from service.

Be aware of the following:

- Isolate and vent the process from the transmitter before removing the transmitter from service.
- Remove all electrical leads and conduit.
- Detach the process flange by removing the four flange bolts and the two alignment screws that secure it.
- Do not scratch, puncture, or depress the isolating diaphragms.
- Clean isolating diaphragms with a soft rag and a mild cleaning solution, and rinse with clear water.
- Whenever you remove the process flange or flange adapters, visually inspect the Teflon O-rings. Replace the O-rings if they show any signs of damage, such as nicks or cuts. If they are undamaged, you may reuse them.

The Model 3051C transmitter is attached to the process connection by four bolts and two cap screws. Remove the four bolts and separate the transmitter from the process connection manifold or flange. You can leave the process connection in place and ready for re-installation.

The Model 3051T is attached to the process by a single hex nut process connection. Loosen the hex nut to separate the transmitter from the process.

Remove the Terminal Block

Electrical connections are located on the terminal block in the compartment labelled “FIELD TERMINALS.”

Loosen the two small screws located at the 9 o'clock and 4 o'clock positions, and pull the entire terminal block out to remove it.



NOTE

If removing the terminal block from the housing of a previous version of the transmitter, you will have to manually disconnect the power leads from the rear of the terminal block before completely separating it from the housing.

Remove the Electronics Board

The transmitter electronics board is located in the compartment opposite the terminal side. To remove the electronics board perform the following procedure:

1. Remove the housing cover opposite the field terminal side.

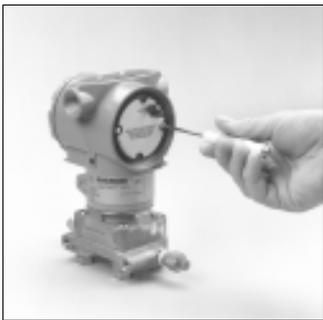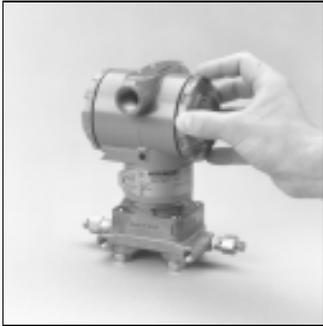

2. Loosen the two captive screws that anchor the board to the housing. The electronics board is electrostatically sensitive; observe handling precautions for static-sensitive components.

NOTE

If you are disassembling a transmitter with a LCD meter, loosen the two captive screws that are visible on the right and left side of the meter display. The two screws anchor the LCD meter to the electronics board and the electronics board to the housing.



3. Slowly pull the electronics board out of the housing. With the two captive screws free of the transmitter housing, only the sensor module ribbon cable holds the board to the housing.

NOTE

Previous versions of the electronics board utilize a snap-in power plug and receptacle. Carefully unsnap the power plug from the receptacle to free the board from the power cord.




4. Disconnect the sensor module ribbon cable to release the electronics board from the transmitter.



See "Safety Messages" on page 4-1 for complete warning information.

Remove the Sensor Module from the Electronics Housing

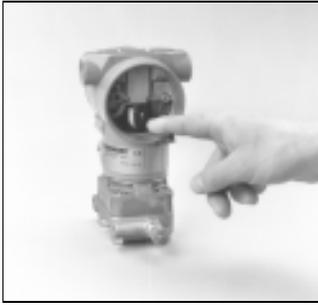


3051-057AB

1. Carefully tuck the cable connector completely inside of the internal shroud.

NOTE

Do not remove the housing until after you tuck the cable connector completely inside of the internal shroud. The shroud protects the cable from damage that can occur when you rotate the housing.

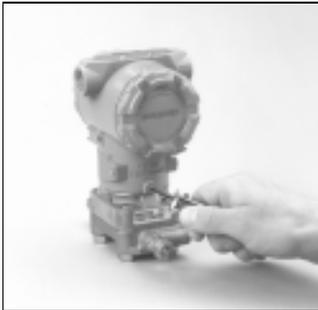


3051-059AB

2. Loosen the housing rotation set screw with a $\frac{9}{64}$ -inch hex wrench, and back off one full turn.

IMPORTANT

To prevent damage to the sensor module ribbon cable, disconnect it from the electronics board before you remove the sensor module from the electrical housing.

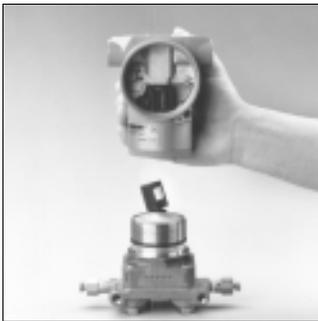

3051-060AB


3. Unscrew the housing from the module, making sure the shroud and sensor cable do not catch on the housing.

IMPORTANT


Make sure the sensor ribbon cable and internal shroud remain completely free of the housing as you rotate it. Damage can occur to the cable if the internal shroud and sensor cable become hung up and rotate with the housing.

REASSEMBLY PROCEDURES

Attach the Sensor Module to the Electronics Housing

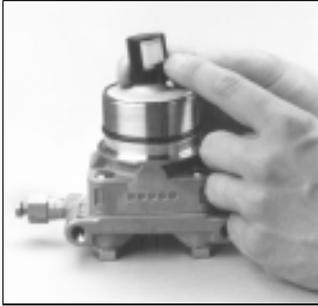

3051-062AB

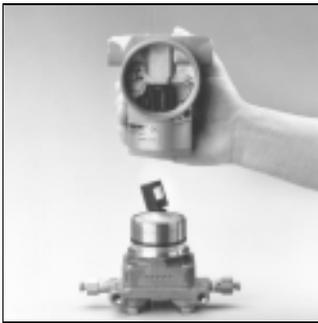

3051-060AB

1. Inspect all cover and housing (non-process wetted) O-rings and replace if necessary. Lightly grease with silicone lubricant to ensure a good seal.
2. Carefully tuck the cable connector completely inside the internal shroud. To do so, turn the shroud and cable counterclockwise one rotation to tighten the cable.

3. Lower the electronics housing onto the module. Guide the internal shroud and cable through the housing and into the external shroud.

4. Turn the housing clockwise to fasten it to the module.

IMPORTANT

To prevent damage to the cable connector, watch the cable and shroud as you attach the housing to the module. Make sure the cable connector does not slip out of the internal shroud and begin to rotate with the housing. Reinsert the cable connector into the shroud if it escapes before the housing is fully fastened.




5. Thread the housing completely onto the sensor module. The housing must be no more than one full turn from flush with the sensor module to comply with explosionproof requirements.

6. Tighten the housing rotation set screw using a $\frac{9}{64}$ -inch hex wrench.

NOTE

Electronics board revision 5.3.163 or later (all shrouded designs) are able to verify alarm current levels. After replacing the transmitter electronics board, sensor module, or LCD meter, an alarm level test is recommended before returning the transmitter to service (see "Alarm Level Verification" on page 2-3).

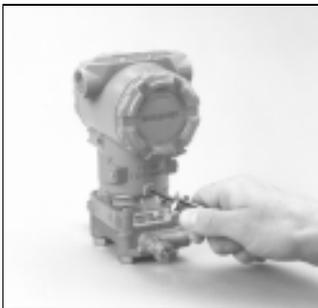

3051-059AB



See "Safety Messages" on page 4-1 for complete warning information.

Attach the Electronics Board



3051-056AB

1. Remove the cable connector from its position inside of the internal shroud and attach it to the electronics board.

2. Insert the electronics board into the housing, making sure that the posts from the electronics housing properly engage the receptacles on the electronics board.


NOTE

If you are reassembling a previous version of the electronics board (or placing a new version of the electronics board in a previous version of the housing), attach the snap-in power connection to the receptacle on the board with the black and red wires routed toward the center of the board and below the white reed switch holder.



3051-054AB

3. Tighten the captive mounting screws.

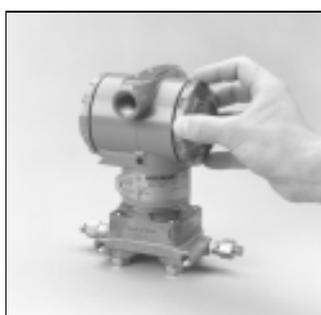

3051-053AB


4. Replace the electronics housing cover. The transmitter covers must be engaged metal-to-metal to ensure a proper seal and to meet explosionproof requirements.

NOTE

Electronics board revision 5.3.163 or later (all shrouded designs) are able to verify alarm current levels. After replacing the transmitter electronics board, sensor module, or LCD meter, an alarm level test is recommended before returning the transmitter to service (see “Alarm Level Verification” on page 2-3).

 See “Safety Messages” on page 4-1 for complete warning information.

Install the Terminal Block

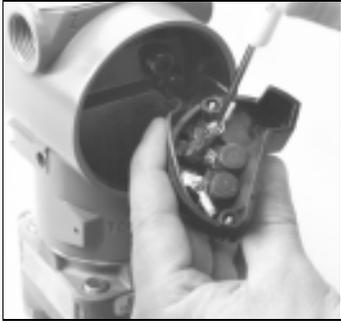

Gently slide the terminal block into place, making sure the posts from the electronics housing properly engage the receptacles on the terminal block. Tighten the captive screws and replace the electronics housing cover. The transmitter covers must be fully engaged to meet explosionproof requirements.

NOTE

If you are reassembling a previous version of the terminal block, attach the black and red wires to the back side of the block before you insert it into the electronics housing.

Reassemble the Process Sensor Body

1. Visually inspect the Teflon sensor module O-rings. If the O-rings are undamaged, you may reuse them. If the O-rings show signs of damage, such as nicks or cuts, or if there is any doubt about their ability to seal properly, replace them with new O-rings.

NOTE

If you are replacing the O-rings, be careful not to scratch the O-ring grooves or the surface of the isolating diaphragm when removing the damaged O-rings.

2. Install the process flange on the sensor module. To hold the process flange in place, install the two hex head alignment screws. These screws are not pressure retaining and need only be finger tight. Do not overtighten; this will affect the module/flange alignment.
3. Install the appropriate flange bolts.
 - a. **IF** the installation requires a 1/4-18 NPT mounting, **THEN** use four 1.75-inch flange bolts. Go to **step f**.
 - b. **IF** the installation requires a 1/2-14 NPT mounting, **THEN** use four 2.88-inch process flange/adaptor bolts. **EXCEPTION:** For gage pressure configurations, use two 2.88-inch bolts and two 1.75-inch bolts. Go to **step d**.
 - c. **IF** the installation uses a three-valve manifold (differential pressure applications only), **THEN** use four 2.25-inch manifold flange bolts. Go to **step e**.
 - d. Hold the flange adapters and adapter O-rings in place while finger-tightening the bolts. Go to **step g**.
 - e. Align the process flange with the three-valve manifold.
 - f. Finger tighten the bolts.
 - g. Tighten the bolts to the initial torque value using a crossed pattern. See Table 4-2 for appropriate torque values.
 - h. Tighten the bolts to the final torque value using a crossed pattern. See Table 4-2 for appropriate torque values. When fully tightened, the bolts should extend through the top of the module housing.
 - i. If the installation uses a three-valve manifold, then install flange adapters on the process end of the manifold using the 1.75-inch flange bolts supplied with the transmitter.

TABLE 4-2. Bolt Installation Torque Values.

Bolt Material	Initial Torque Value	Final Torque Value
CS-ASTM-A445 Standard	300 in.-lb (34 N-m)	650 in.-lb (73 N-m)
316 SST—Option L4	150 in.-lb (17 N-m)	300 in.-lb (34 N-m)
ASTM-A-193-B7M—Option L5	300 in.-lb (34 N-m)	650 in.-lb (73 N-m)
<i>Monel</i> —Option L6	300 in.-lb (34 N-m)	650 in.-lb (73 N-m)

4. **IF** you replaced the Teflon sensor module O-rings, **THEN** re-torque the flange bolts after installation to compensate for cold flow.
5. Install the drain/vent valve.
 - a. Apply sealing tape to the threads on the seat. Starting at the base of the valve with the threaded end pointing toward the installer, apply two clockwise turns of the sealing tape.
 - b. Take care to place the opening on the valve so that process fluid will drain toward the ground and away from personnel when the valve is opened.
 - c. Tighten the drain/vent valve to 250 in.-lb (28.25 N-m).

NOTE

After replacing O-rings on Range 1 transmitters and re-installing the process flange, expose the transmitter to a temperature of 185 °F (85 °C) for two hours. Then re-tighten the flange bolts in a cross pattern, and again expose the transmitter to a temperature of 185 °F (85 °C) for two hours before calibration.

Returning Rosemount Products and Materials

To expedite the return process outside of the United States, contact the nearest Rosemount representative.

Within the United States, call the Rosemount National Response Center using the 1-800-654-RSMT (7768) toll-free number. This center, available 24 hours a day, will assist you with any needed information or materials.

The center will ask for product model and serial numbers, and will provide a Return Material Authorization (RMA) number. The center will also ask for the process material to which the product was last exposed.

⚠ CAUTION

Individuals who handle products exposed to a hazardous substance can avoid injury if they are informed of and understand the hazard. If the product being returned was exposed to a hazardous substance as defined by OSHA, a copy of the required Material Safety Data Sheet (MSDS) for each hazardous substance identified must be included with the returned goods.

Rosemount National Response Center representatives will explain the additional information and procedures necessary to return goods exposed to hazardous substances.

Specifications and Reference Data

PERFORMANCE SPECIFICATIONS

Total Performance is based on combined errors of reference accuracy, ambient temperature effect, and static pressure effect.

For detailed performance specifications, see page 5-2.

Model 3051C (Ranges 2–5), Model 3051T

Reference Accuracy

±0.075% of span.

Total Performance

±0.15% of span for ±50 °F (28 °C) temperature changes, up to 1000 psi (6,9 MPa) line pressure (CD only), from 1:1 to 5:1 rangedown.

Stability

±0.125% of URL for 5 years for ±50 °F (28 °C) temperature changes, and up to 1000 psi (6,9 MPa) line pressure.

Dynamic Performance

Total Response Time ($T_d + T_c$)

100 ms

Model 3051CD, Low/Draft Range (Ranges 0–1)

Reference Accuracy

±0.10% of span.

Stability

±0.20% of URL for 1 year.

Model 3051P—Reference Class

Reference Accuracy

±0.05% of span.

Total Performance

±0.10% of span for ±50 °F (28 °C) temperature changes, up to 1000 psi (6,9 MPa) line pressure, from 1:1 to 5:1 rangedown.

Stability

±0.125% of URL for 5 years for ±50 °F (28 °C) temperature changes, and up to 1000 psi (6,9 MPa) line pressure.

Dynamic Performance

Total Response Time ($T_d + T_c$)

100 ms

Model 3051L—Liquid Level

Reference Accuracy

±0.075% of span.

Model 3051H—High Process Temperature

Reference Accuracy

±0.075% of span.

Stability

±0.1% of URL for 12 months for Ranges 2 and 3.

±0.2% of URL for 12 months for Ranges 4 and 5.

**DETAILED
PERFORMANCE
SPECIFICATIONS**

Zero-based spans, reference conditions, silicone oil fill, 316 SST isolating diaphragms, 4–20 mA analog output, and digital trim values equal to the span set points.

Reference Accuracy

Stated reference accuracy includes hysteresis, terminal-based linearity, setability, and repeatability.

3051CD Ranges 2–5 and 3051CG

±0.075% of span.

For spans less than 10:1, accuracy =

$$\pm \left[0.025 + 0.005 \left(\frac{URL}{Span} \right) \right] \% \text{ of Span}$$

3051CD Range 1

±0.10% of span.

For spans less than 15:1, accuracy =

$$\pm \left[0.025 + 0.005 \left(\frac{URL}{Span} \right) \right] \% \text{ of Span}$$

3051CD Range 0

±0.10% of span.

For spans less than 2:1, accuracy =

±0.05% of URL.

3051T/CA Ranges 1–5

±0.075% of span.

For spans less than 10:1, accuracy =

$$\pm \left[0.0075 \left(\frac{URL}{Span} \right) \right] \% \text{ of Span}$$

3051CA Range 0

±0.075% of span.

For spans less than 5:1, accuracy =

$$\pm \left[0.025 + 0.01 \left(\frac{URL}{Span} \right) \right] \% \text{ of Span}$$

3051H/3051L

±0.075% of span. For spans less than 10:1, accuracy =

$$\pm \left[0.025 + 0.005 \left(\frac{URL}{Span} \right) \right] \% \text{ of Span}$$

3051P

±0.05% of span.

**Ambient Temperature
Effect per 50 °F (28 °C)**

3051CD/CG

±(0.0125% URL + 0.0625% span) from 1:1 to 5:1

±(0.025% URL + 0.125% span) from 5:1 to 100:1

Range 0: ±(0.25% URL + 0.05% span)

Range 1: ±(0.1% URL + 0.25% span)

3051P

±(0.006% URL + 0.03% span)

3051H

±(0.025% URL + 0.125% span + 0.35 inH₂O)

For spans below 30:1 rangedown:

±(0.035% URL + 0.125% span + 0.35 inH₂O)

3051L

See the Rosemount Instrument Toolkit™ or SOAP 2000 software.

3051T and 3051CA

±(0.025% URL + 0.125% span) from 1:1 to 30:1

±(0.035% URL + 0.125% span) from 30:1 to 100:1

Range 0: ±(0.1% URL + 0.25% span)

Range 5: ±(0.1% URL + 0.15% span)

Model 3051T Range 1:

±(0.025% URL + 0.125% span) from 1:1 to 10:1

±(0.05% URL + 0.125% span) from 10:1 to 100:1

**Static Pressure Effect per
1000 psi (6,9 MPa)**

Zero Error (can be calibrated out at line pressure)

Zero line pressure effect per 1000 psi (6,9 MPa).

Model	Range	Zero Effect with Static Pressure	
		≤ 2000 psi (13,7 MPa)	Pressure > 2000 psi (13,7 MPa)
3051CD	0 ⁽¹⁾	±0.125% URL	N/A
	1	±0.25% URL	N/A
	2,3	±0.05% URL	[0.20 + 0.20 (Pressure – 2)]%
	4,5	±0.10% URL	[0.10 + 0.10 (Pressure – 2)]%
3051PD	2,3	±0.04% URL	N/A
3051HD	2–5	±0.10% URL	[0.20 + 0.20 (Pressure – 2)]%

(1) Specification expressed in Percent/100 psi (0,69 MPa) up to 750 psi (5,17 MPa).

Span Error

Span line pressure effect per 1000 psi (6,9 MPa).

Model	Range	Span Effect
3051CD	0 ⁽¹⁾	±0.15% of reading
	1	±0.40% of reading
	2,3	±0.10% of reading
	4,5 ⁽²⁾	±0.20% of reading
3051PD	2,3	±0.10% of reading
3051HD	2,3	±0.10% of reading
	4,5 ⁽²⁾	±0.20% of reading

(1) Specification expressed in Percent/100 psi (0,69 MPa) up to 750 psi (5,17 MPa).

(2) Accuracy listed is after correction of systematic span effect. Refer to page 2-28 for line pressure compensation procedure.

Dynamic Performance

Dead Time and Update Rate applies to all models and ranges, analog output only.

Dead Time (T_d):45 milliseconds (nominal)

Update Rate:22 times per second

Total Response Time (T_d + T_c):

3051C/P

100 milliseconds for ranges 2–5

255 milliseconds for range 1

700 milliseconds for range 0

3051T

100 milliseconds for ranges 1–5

3051H/3051L

Consult factory

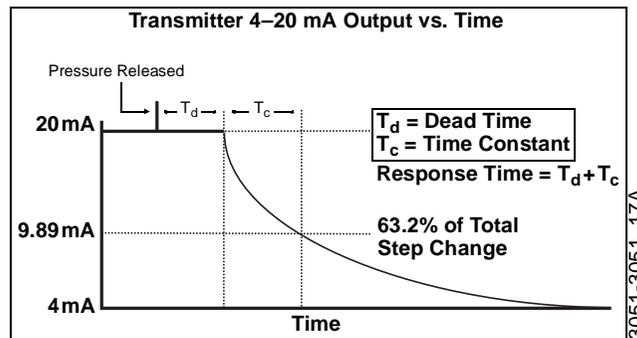


Figure 5-1. Typical Smart Transmitter Response Time

Mounting Position Effects

3051C/P

Zero shifts up to ±1.25 inH₂O (0,31 kPa), which can be calibrated out. No span effect.

3051H

Zero shifts up to ±5 inH₂O (127 mmH₂O), which can be calibrated out. No span effect.

3051L

With liquid level diaphragm in vertical plane, zero shift of up to 1 inH₂O (25,4 mmH₂O).

With diaphragm in horizontal plane, zero shift of up to 5 inH₂O (127 mmH₂O) plus extension length on extended units. All zero shifts can be calibrated out. No span effect.

3051T/CA

Zero shifts up to 2.5 inH₂O (63,5 mmH₂O), which can be calibrated out. No span effect.

Vibration Effect

All Models

Measurement effect due to vibrations is negligible except at resonance frequencies. When at resonance frequencies, vibration effect is less than ±0.1% of URL per g when tested between 15 and 2000 Hz in any axis relative to pipe-mounted process conditions.

Power Supply Effect

All Models

Less than ±0.005% of calibrated span per volt.

RFI Effects

All Models

±0.1% of span from 20 to 1000 MHz and for field strength up to 30 V/m.

**Transient Protection
(Option Code T1)**

All Models

Meets IEEE Standard 587, Category B

1 kV crest (10 × 1000 microseconds)

3 kV crest (8 × 20 microseconds)

6 kV crest (1,2 × 50 microseconds)

**Meets IEEE Standard 472,
Surge Withstand Capability**

SWC 2,5 kV crest, 1 MHz wave form

General Specifications:

Response Time:	< 1 nanosecond
Peak Surge Current:	5000 amps to housing
Peak Transient Voltage:	100 V dc
Loop Impedance:	< 25 ohms
Applicable Standards:	IEC 801-4, IEC 801-5

NOTE:

Calibrations at 68 °F (20 °C) per ASME Z210.1 (ANSI).

FUNCTIONAL SPECIFICATIONS

Range and Sensor Limits

TABLE 5-1. Model 3051CD, 3051CG, 3051P, 3051L, and 3051H Range and Sensor Limits

Range	Minimum Span		Range and Sensor Limits								
	Model 3051 CD, CG, L, H	Model 3051P	Upper (URL)	Lower (LRL)							
				3051C Differential	3051C/P Gage	3051P Differential	3051L Differential	3051L Gage	3051H Differential	3051H Gage	
0	0.1 inH ₂ O (25 Pa)	NA	3.0 inH ₂ O (750 Pa)	-3.0 inH ₂ O (-750 Pa)	NA						
1	0.5 inH ₂ O (0,12 kPa)	NA	25 inH ₂ O (6,22 kPa)	-25 inH ₂ O (-6,22 kPa)	NA						
2	2.5 inH ₂ O (0,62 kPa)	25 inH ₂ O (6,22 kPa)	250 inH ₂ O (62,2 kPa)	-250 inH ₂ O (-62,2 kPa)							
3	10 inH ₂ O (2,48 kPa)	100 inH ₂ O (24,8 kPa)	1000 inH ₂ O (248 kPa)	-1000 inH ₂ O (-248 kPa)	0.5psia (3,5 kPa abs)	-1000 inH ₂ O (-248 kPa)	-1000 inH ₂ O (-248 kPa)	0.5 psia (3,5 kPa abs)	-1000 inH ₂ O (-248 kPa)	0.5 psia (3,5 kPa abs)	
4	3 psi (20,7 kPa)	30 psi (207 kPa)	300 psi (2 070 kPa)	-300 psi (-2 070 kPa)	0.5psia (3,5 kPa abs)	-300 psi (-2 070 kPa)	-300 psi (-2 070 kPa)	0.5 psia (3,5 kPa abs)	-300 psi (-2 070 kPa)	0.5 psia (3,5 kPa abs)	
5	20 psi (138 kPa)	200 psi (1 380 kPa)	2000 psi (13 800 kPa)	-2000 psi (-13 800 kPa)	0.5 psia (3,5 kPa abs)	-2000 psi (-13 800 kPa)	NA	NA	-2000 psi (-13 800 kPa)	0.5 psia (3,5 kPa abs)	

TABLE 5-2. Model 3051CA Range and Sensor Limits

Range	Minimum Span	Range and Sensor Limits	
		Upper (URL)	Lower (LRL)
0	0.167 psia (8,6 mmHga)	5 psia (260 mmHga)	0 psia (0 mmHga)
1	0.3 psia (2,07 kPa)	30 psia (206,8 kPa)	0 psia (0 kPa)
2	1.5 psia (10,34 kPa)	150 psia (1 034,2 kPa)	0 psia (0 kPa)
3	8 psia (55,16 kPa)	800 psia (5 515,8 kPa)	0 psia (0 kPa)
4	40 psia (275,8 kPa)	4000 psia (27 580 kPa)	0 psia (0 kPa)

TABLE 5-3. Model 3051T Range and Sensor Limits

Range	Minimum Span	Range and Sensor Limits		
		Upper (URL)	Lower (LRL) (Abs.)	Lower ⁽¹⁾ (LRL) (Gage)
1	0.3 psi (2 kPa)	30 psi (207 kPa)	0 psia (0 kPa)	-14.7 psig (-101 kPa)
2	1.5 psi (10 kPa)	150 psi (1 034 kPa)	0 psia (0 kPa)	-14.7 psig (-101 kPa)
3	8 psi (55 kPa)	800 psi (5 516 kPa)	0 psia (0 kPa)	-14.7 psig (-101 kPa)
4	40 psi (276 kPa)	4000 psi (27 579 kPa)	0 psia (0 kPa)	-14.7 psig (-101 kPa)
5	2000 psi (13 790 kPa)	10000 psi (68 948 kPa)	0 psia (0 kPa)	-14.7 psig (-101 kPa)

(1) Assumes atmospheric pressure of 14.7 psig.

Zero and Span Adjustment Requirements

- Zero and span values can be set anywhere within the range limits stated in Table 5-1 through 5-3.
- Span must be greater than or equal to the minimum span stated in Table 5-1 through 5-3.

Service

Liquid, gas, and vapor applications.

4–20 mA (Output Code A)

Output

Two-wire 4–20 mA, user-selectable for linear or square root output. Digital process variable superimposed on 4–20 mA signal, available to any host that conforms to the HART protocol.


Power Supply

External power supply required. Standard transmitter (4–20 mA) operates on 10.5 to 55 V dc with no load.

Load Limitations

Maximum loop resistance is determined by the voltage level of the external power supply, as described by:

Max. Loop Resistance = $43.5(\text{Power Supply Voltage} - 10.5)$

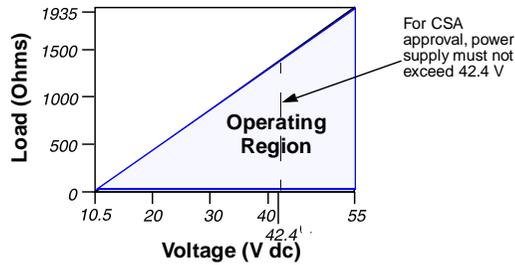

Communication requires a minimum loop resistance of 250 ohms.

Low Power (Output Code M)

Output

Three wire 1–5 V dc or 0.8–3.2 V dc (Option Code C2) user-selectable output. Also user selectable for linear or square root output configuration. Digital process variable superimposed on voltage signal, available to any host conforming to the HART protocol. Low-power transmitter operates on 6–12 V dc with no load.

Power Consumption

3,0 mA, 18–36 mW

Minimum Load Impedance

100 kΩ (V_{out} wiring)

Indication

Optional 5-digit LCD meter

Overpressure Limits

Transmitters withstand the following limits without damage:

Model 3051CD/CG

- Range 0: 750 psi (5 171 kPa)
- Range 1: 2000 psig (13,8 MPa)
- Ranges 2–5: 3626 psig (25 MPa)

Model 3051CA

- Range 0: 60 psia (413,7 kPa)
- Range 1: 120 psia (827,4 kPa)
- Range 2: 300 psia (2 070 kPa)
- Range 3: 1600 psia (11 030 kPa)
- Range 4: 6000 psia (41 370 kPa)

Model 3051H

All Ranges: 3626 psig (25 MPa)

Model 3051TG/TA

- Range 1: 750 psi (5,2 MPa)
- Range 2: 1500 psi (10,3 MPa)
- Range 3: 1600 psi (11,0 MPa)
- Range 4: 6000 psi (41,4 MPa)
- Range 5: 15000 psi (103,4 MPa)

Model 3051PG

Ranges 2-5: 3626 psig (25 MPa)

Model 3051 PD

Ranges 2 and 3: 2000 psig (13,8 MPa)

For Model 3051L or Level Flange Option Codes FA, FB, FC, and FD, limit is 0 psia to the flange rating or sensor rating, whichever is lower.

TABLE 5-4. Model 3051L and Level Flange Rating Limits

Standard	Type	CS Rating	SST Rating
ANSI/ASME	Class 150	285 psig	275 psig
ANSI/ASME	Class 300	740 psig	720 psig
ANSI/ASME	Class 600	1480 psig	1440 psig
<i>At 100 °F (38 °C), rating decreases with increasing temperature.</i>			
DIN	PN 10–40	40 bar	40 bar
DIN	PN 10/16	16 bar	16 bar
DIN	PN 25/40	40 bar	40 bar
<i>At 248 °F (120 °C), rating decreases with increasing temperature.</i>			

Static Pressure Limit

Model 3051CD Only

Operates within specifications between static line pressures of 0.5 psia and 3626 psig (4500 psig for Option Code P9).

- Range 0: 0.5 psia and 750 psig
- Range 1: 0.5 psia and 2000 psig

Model 3051PD Only

Operates within specifications between static line pressures of 0.5 psia and 2000 psig.

Burst Pressure Limits

Burst pressure on Coplanar, traditional, or Model 3051H process flange is 10000 psig (69 MPa).

Burst pressure for the Model 3051T is

Ranges 1–4: 11000 psi (75,8 MPa)

Range 5: 26000 psig (179 MPa)

Failure Mode Alarm

Output Code A

If self-diagnostics detect a gross transmitter failure, the analog signal will be driven ≤ 3.75 mA or ≥ 21.75 mA to alert the user. Also, NAMUR-Compliant alarm limits are installed through the C4 or CN option. NAMUR-Compliant limits are ≤ 3.6 mA for low alarm, and ≥ 22.5 mA for high alarm. High or low alarm signal is user-selectable by internal jumper.

Output Code M

If self-diagnostics detect a gross transmitter failure, the analog signal will be driven either below 0.94 V or above 5.4 V to alert the user (below 0.75 V or above 4.4 V for Option C2). High or low alarm signal is user-selectable by internal jumper.

Temperature Limits

Ambient

–40 to 185 °F (–40 to 85 °C).

With integral meter: –4 to 175 °F (–20 to 80 °C)

Storage

–50 to 230 °F (–46 to 110 °C)

With integral meter: –40 to 185 °F (–40 to 85 °C)

Process

At atmospheric pressures and above. See Table 5-5.

TABLE 5-5. Model 3051 Process Temperature Limits

Model 3051CD, 3051CG, 3051CA, 3051P	
Silicone Fill Sensor ⁽¹⁾	
with Coplanar Flange	–40 to 250 °F (–40 to 121 °C) ⁽²⁾
with Traditional Flange	–40 to 300 °F (–40 to 149 °C) ⁽²⁾
with Level Flange	–40 to 300 °F (–40 to 149 °C) ⁽²⁾
with Model 305 Integral Manifold	–40 to 300 °F (–40 to 149 °C) ⁽²⁾
Inert Fill Sensor ⁽¹⁾	0 to 185 °F (–18 to 85 °C) ⁽³⁾⁽⁴⁾
Model 3051H (Process Fill Fluid)	
D.C. Silicone 200 ⁽¹⁾	–40 to 375 °F (–40 to 191 °C)
Inert ⁽¹⁾	–50 to 350 °F (–45 to 177 °C)
Neobee M-20 ^{®(1)}	0 to 375 °F (–18 to 191 °C)
Model 3051T (Process Fill Fluid)	
Silicone Fill Sensor ⁽¹⁾	–40 to 250 °F (–40 to 121 °C) ⁽²⁾
Inert Fill Sensor ⁽¹⁾	–22 to 250 °F (–30 to 121 °C) ⁽²⁾
Model 3051L Low-Side Temperature Limits	
Silicone Fill Sensor ⁽¹⁾	–40 to 250 °F (–40 to 121 °C) ⁽²⁾
Inert Fill Sensor ⁽¹⁾	0 to 185 °F (–18 to 85 °C) ⁽²⁾

TABLE 5-5. Model 3051 Process Temperature Limits

Model 3051L High-Side Temperature Limits (Process Fill Fluid)	
Syltherm® XLT	-100 to 300 °F (-73 to 149 °C)
D.C. Silicone 704 ^{®(5)}	60 to 600 °F (15 to 315 °C)
D.C. Silicone 200	-40 to 400 °F (-40 to 205 °C)
Inert	-50 to 350 °F (-45 to 177 °C)
Glycerin and Water	0 to 200 °F (-18 to 93 °C)
Neobee M-20	0 to 400 °F (-18 to 205 °C)
Propylene Glycol and Water	0 to 200 °F (-18 to 93 °C)
Syltherm 800	-50 to 400 °F (-45 to 205 °C)

- (1) Process temperatures above 185 °F (85 °C) require derating the ambient limits by a 1.5:1 ratio (0.6:1 ratio for the Model 3051H).
- (2) 220 °F (104 °C) limit in vacuum service; 130 °F (54 °C) for pressures below 0.5 psia.
- (3) 160 °F (71 °C) limit in vacuum service.
- (4) Not available for Model 3051CA.
- (5) Upper limit is for seal assemblies mounted away from the transmitter with the use of capillaries.

Humidity Limits

0–100% relative humidity

Turn-On Time

Performance within specifications less than 2.0 seconds after power is applied to the transmitter

Volumetric Displacement

Less than 0.005 in³ (0,08 cm³)

Damping

Analog output response to a step input change is user-selectable from 0 to 36 seconds for one time constant. This software damping is in addition to sensor module response time.

PHYSICAL SPECIFICATIONS

Electrical Connections

1/2–14 NPT, PG 13.5, G1/2, and M20 × 1.5 (CM20) conduit. HART interface connections fixed to terminal block.

Process Connections

All Models except 3051L and 3051T

1/4–18 NPT on 2 1/8-in. centers

1/2–14 NPT on 2-, 2 1/8-, or 2 1/4-in. centers

Model 3051L

High pressure side: 2-, 3-, or 4-in., ASME B 16.5 (ANSI) Class 150, 300 or 600 flange; 50, 80 or 100 mm, PN 40 or 10/16 flange

Low pressure side: 1/4–18 NPT on flange

1/2–14 NPT on adapter

Model 3051T

1/4–18 NPT, 1/2–14 NPT female, G1/2 A DIN 16288 Male (available in SST for Range 1–4 transmitters only), or Autoclave type F-250-C (Pressure relieved 9/16–18 gland thread; 1/4 OD high pressure tube 60° cone; available in SST for Range 5 transmitters only).

Process-Wetted Parts

Process Isolating Diaphragms

Isolating Diaphragm Material	3051CD/CG	3051T	3051CA	3051P	3051H	3051L
316L SST	•	•	•	•	•	See Below
Hastelloy C-276	•	•	•		•	
Monel	•		•		•	
Tantalum	•				•	
Gold-plated Monel	•		•			
Gold-plated SST	•		•			

Drain/Vent Valves

316 SST, Hastelloy C, or Monel material (Monel not available with Model 3051L or 3051H)

Process Flanges and Adapters

Plated carbon steel, CF-8M (Cast version of 316 SST, material per ASTM-A743), Hastelloy C, or Monel

Wetted O-rings

Glass-filled TFE (Graphite-filled TFE with isolating diaphragm Option Code C6)

Model 3051L Process Wetted Parts

**Flanged Process Connection
(Transmitter High Side)**

**Process Diaphragms, Including Process
Gasket Surface:**

316L SST, Hastelloy C-276, or Tantalum

Extension

CF-3M (Cast version of 316L SST, material per ASTM-A743), or Hastelloy C. Fits schedule 40 and 80 pipe.

Mounting Flange

Zinc-cobalt plated CS or SST

**Reference Process Connection
(Transmitter Low Side)**

Isolating Diaphragms

316L SST or Hastelloy C-276

Reference Flange and Adapter

CF-3M (Cast version of 316L SST, material per ASTM-A743)

Non-Wetted Parts

Electronics Housing

Low-copper aluminum or CF-8M (Cast version of 316 SST, material per ASTM-A743). NEMA 4X, IP 65, IP 66

Coplanar Sensor Module Housing

CF-3M (Cast version of 316L SST, material per ASTM-A743)

Bolts

Plated carbon steel per ASTM A449, Type 1: Austenitic 316 SST, ASME B 16.5 (ANSI)/ASTM-A-193-B7M, or Monel

Sensor Module Fill Fluid

Silicone or inert halocarbon (inert not available with Model 3051CA or Model 3051H). Model 3051T uses Fluorinert® FC-43

Process Fill Fluid (Model 3051L and 3051H only)

3051L: Syltherm XLT, D.C. Silicone 704, D.C. Silicone 200, inert, glycerin and water, Neobee M-20, propylene glycol and water, or Syltherm 800
 3051H: inert, Neobee M-20, or D.C. Silicone 200

Paint

Polyurethane

Cover O-rings

Buna-N

Shipping Weights

“Shipping Weights” on page 5-28.

CERTIFICATIONS

Stainless steel certification tag provided when optional approval is specified.

Factory Mutual (FM) Approvals

- E5** Explosion proof for Class I, Division 1, Groups B, C, and D. Dust-Ignition Proof for Class II and Class III, Division 1, Groups E, F, and G. Suitable for indoor and outdoor (NEMA 4X) hazardous locations. Factory Sealed.
- I5** Intrinsically Safe for use in Class I, Division 1, Groups A, B, C, and D; Class II, Division 1, Groups E, F, and G; Class III, Division 1 when connected in accordance with Rosemount drawings 03031-1019 and 00275-0081 (when used with HART Communicator Model 275), or 00268-0031 (when used with Rosemount Model 268 Communicator). Temperature Code T4. Non-incendive for Class I, Division 2, Groups A, B, C, and D. NEMA 4X. Factory Sealed.

FM Approved Entity Parameters for Model 3051C	FM Approved for Class I, II, III, Division 1 and 2, Groups:
$V_{max} = 40 \text{ V dc}$	A-G
$I_{max} = 165 \text{ mA}$	A-G
$I_{max} = 225 \text{ mA}$	C-G
$I_{max} = 160 \text{ mA (Option Code T1)}$	A-G
$P_{max} = 1 \text{ W}$	A-G
$C_i = 0.01 \text{ }\mu\text{F (Output Code A)}$	A-G
$C_i = 0.042 \text{ }\mu\text{F (Output Code M)}$	A-G
$L_i = 10 \text{ }\mu\text{H}$	A-G
$L_i = 1,05 \text{ mH (Output Code A with T1)}$	A-G
$L_i = 0,75 \text{ mH (Output Code M with T1)}$	A-G

BASEEFA/CENELEC Intrinsic Safety Certification

- I1** EEx ia IIC T5 ($T_{amb} = -60$ to $+40$ °C)
EEx ia IIC T4 ($T_{amb} = -60$ to $+70$ °C)

CENELEC Approved Entity Parameters

- $U_{Max:in} = 30$ V
- $I_{Max:in} = 200$ mA
- $W_{Max:in} = 0.9$ W
- $C_{eq} = 0.012$ μ F

BASEEFA Non-incendive/Type N Certification

- N1** Ex N IIC T5 ($T_{amb} = -40$ to $+70$ °C)

Special Conditions for Safe Use:

When the optional transient protection terminal block is installed, the apparatus is not capable of withstanding a 500 V rms test to case. This must be taken into account in installations in which the transient protection terminal block is used. One method of taking this into account is to ensure that the supply to the apparatus is galvanically isolated.

CESI/CENELEC Flameproof Certification

- E8** EEx d IIC T6 ($T_{amb} = 40$ °C)
EEx d IIC T5 ($T_{amb} = 70$ °C)

Japanese Industrial Standard (JIS) Flameproof Certification

- E4** (3051C/H/L/P) Ex d IIC T5 + G5
(3051T) Ex d IIC T5

Canadian Standards Association (CSA) Approvals

- C6** Explosion Proof for Class I, Division 1, Groups B, C, and D.
Dust-Ignition Proof for Class II and Class III, Division 1, Groups E, F, and G. Suitable for indoor and outdoor hazardous locations, CSA Enclosure Type 4X. Factory Sealed.

Intrinsically Safe for Class I, Division 1, Groups A, B, C, and D when connected in accordance with Rosemount drawings 03031-1024 and 00275-0082 (when used with the Model 275 HART Communicator). Temperature Code T3C.

	CSA Approved Barriers for Model 3051C	CSA Approved for Class I, Division 1 and 2, Groups:
Output Code A	≤ 30 V, ≥ 330 Ω	A–D
	≤ 28 V, ≥ 300 Ω	
Output Code M	≤ 25 V, ≥ 200 Ω	C–D
	≤ 22 V, ≥ 180 Ω	
	≤ 30 V, ≥ 150 Ω	
	Supply ≤ 28 V, ≥ 300 Ω Return ≤ 10 V, ≥ 47 Ω	
Output Code M	Supply ≤ 30 V, ≥ 150 Ω Return ≤ 10 V, ≥ 47 Ω	C–D

Standards Association of Australia (SAA)

Intrinsic Safety Certification

- I7** Ex ia IIC T4 ($T_{amb} = 70\text{ }^{\circ}\text{C}$)
Ex ia IIC T5 ($T_{amb} = 40\text{ }^{\circ}\text{C}$)

Special Conditions for Safe Use

Observe barriers/entity parameters during installation. Connect per Rosemount drawing 03031 1026.

SAA Approved Entity Parameters

$$U_{Max} = 30\text{ V}$$

$$I_{Max} = 200\text{ mA}$$

$$I_{Max} = 160\text{ mA (Option Code T1)}$$

$$P_{Max} = 0.9\text{ W}$$

$$C_i = 0.01\text{ }\mu\text{F (Output Code A)}$$

$$C_i = 0.042\text{ }\mu\text{F (Output Code M)}$$

$$L_i = 10\text{ }\mu\text{H}$$

$$L_i = 1,05\text{ mH (Output Code A with T1)}$$

$$L_i = 0,75\text{ mH (Output Code M with T1)}$$

Explosion Proof (Flameproof) Certification

- E7** Ex d IIC T6 ($T_{amb} = 40\text{ }^{\circ}\text{C}$)
Ex d IIC T5 ($T_{amb} = 80\text{ }^{\circ}\text{C}$)
DIP T6 ($T_{amb} = 40\text{ }^{\circ}\text{C}$)
DIP T5 ($T_{amb} = 80\text{ }^{\circ}\text{C}$)

Type N (Non-sparking) Certification

- N7** Ex n IIC T4 ($T_{amb} = 70\text{ }^{\circ}\text{C}$)
Ex n IIC T5 ($T_{amb} = 40\text{ }^{\circ}\text{C}$)

Combinations of Approvals

- K5** Combination of **E5** and **I5**
KB Combination of **K5** and **C6**
FM and CSA Explosionproof and Intrinsic Safety.
K6 Combination **C6**, **I1**, and **E8**

ORDERING INFORMATION

TABLE 5-6. Model 3051C Differential, Gage, and Absolute Pressure Transmitters
 — = Not Applicable • = Applicable

Model	Transmitter Type (Select One)					CD	CG	CA	
3051CD	Differential Pressure Transmitter					•	—	—	
3051CG	Gage Pressure Transmitter					—	•	—	
3051CA	Absolute Pressure Transmitter					—	—	•	
Pressure Ranges and Minimum Spans—English Units (SI Units)									
Code	Model 3051CD		Model 3051CG		Model 3051CA		CD	CG	CA
	Range	Min. Span	Range	Min. Span	Range	Min. Span			
0 ⁽¹⁾	–3 to 3 inH ₂ O (–747 to 747 Pa)	0.1 inH ₂ O (25 Pa)	Not Applicable		0 to 5 psia (0 to 259 mmHg)	0.167 psia (8,6 mmHg)	•	—	•
1	–25 to 25 inH ₂ O (–6,22 to 6,22 kPa)	0.5 inH ₂ O (0,12 kPa)	Not Applicable		0 to 30 psia (0 to 207 kPa)	0.3 psia (2,1 kPa)	•	—	•
2	–250 to 250 inH ₂ O (–62,2 to 62,2 kPa)	2.5 inH ₂ O (0,6 kPa)	–250 to 250 inH ₂ O (–62,2 to 62,2 kPa)	2.5 inH ₂ O (0,6 kPa)	0 to 150 psia (0 to 1 034 kPa)	1.5 psia (10,34 kPa)	•	•	•
3	–1000 to 1000 inH ₂ O (–248 to 248 kPa)	10 inH ₂ O (2,5 kPa)	–407 to 1000 inH ₂ O (–101 to 249 kPa)	10 inH ₂ O (2,5 kPa)	0 to 800 psia (0 to 5 516 kPa)	8 psia (55,16 kPa)	•	•	•
4	–300 to 300 psi (–2070 to 2070 kPa)	3 psi (20,7 kPa)	–14.7 to 300 psi (–101 to 2 070 kPa)	3 psi (20,7 kPa)	0 to 4000 psia (0 to 27 580 kPa)	40 psia (276 kPa)	•	•	•
5	–2000 to 2000 psi (– 13800 to 13800 kPa)	20 psi (138 kPa)	–14.7 to 2000 psig (–101 to 13800 kPa)	20 psi (138 kPa)	Not Applicable		•	•	—
<i>NOTE: 3051CG lower range limit varies with atmospheric pressure.</i>									
Code	Output					CD	CG	CA	
A	4–20 mA with Digital Signal Based on HART Protocol					•	•	•	
M	Low-Power, 1–5 V dc with Digital Signal Based on HART Protocol (See Option C2 for 0.8–3.2 V dc)					•	•	•	
<i>NOTE: Not available with hazardous locations certification Options Codes I1, N1, E4, and K6.</i>									
Materials of Construction									
Code	Process Flange Type	Flange Material	Drain/Vent	Flange Adapters	CD	CG	CA		
2	Coplanar	SST	SST	SST	•	•	•		
3	Coplanar	Hastelloy C	Hastelloy C	Hastelloy C	•	•	•		
4	Coplanar	Monel	Monel	Monel	•	•	•		
5	Coplanar	Plated CS	SST	Plated CS	•	•	•		
7	Coplanar	SST	Hastelloy C	SST	•	•	•		
8	Coplanar	Plated CS	Hastelloy C	Plated CS	•	•	•		
0	Alternate Flange—See Options H2, H3, H4, H7, F1, G1, G2, FA, FB, FC, FD, or S5					•	•	•	
<i>NOTE: Materials of Construction Codes 3, 7, and 8 meet NACE material recommendations per MR 01-75.</i>									
Code	Isolating Diaphragm					CD	CG	CA	
2	316L SST					•	•	•	
3	Hastelloy C-276 (Meets NACE material recommendations per MR 01-75)					•	•	•	
4	Monel					•	•	•	
5	Tantalum (Available on Model 3051CD and CG, Ranges 2–5 only. Not available on Model 3051CA)					•	•	•	
6	Gold-plated Monel (Use in combination with O-ring Option Code B.)					•	•	•	
7	Gold-plated SST					•	•	•	
Code	O-ring					CD	CG	CA	
A	Glass-filled TFE					•	•	•	
B	Graphite-filled TFE					•	•	•	
Code	Fill Fluid					CD	CG	CA	
1	Silicone					•	•	•	
2	Inert fill (Halocarbon)					•	•	•	
Code	Housing Material		Conduit Entry Size		CD	CG	CA		
A	Polyurethane-covered Aluminum		½–14 NPT		•	•	•		
B	Polyurethane-covered Aluminum		M20 × 1.5 (CM20)		•	•	•		
C	Polyurethane-covered Aluminum		PG 13.5		•	•	•		
D	Polyurethane-covered Aluminum		G½		•	•	•		
J	SST		½–14 NPT		•	•	•		
K	SST		M20 × 1.5 (CM20)		•	•	•		
L	SST		PG 13.5		•	•	•		

Rosemount Model 3051 Transmitter for Flow, Level, and Pressure Measurement

TABLE 5-6. Model 3051C Differential, Gage, and Absolute Pressure Transmitters (continued)
 — = Not Applicable • = Applicable

Code	Alternate Flange Options (Requires Materials of Construction Code 0)	CD	CG	CA
H2	Traditional Flange, 316 SST, SST Drain/Vent, SST Flange Adapter	•	•	•
H3	Traditional Flange, <i>Hastelloy C</i> , <i>Hastelloy C</i> Drain/Vent, <i>Hastelloy C</i> Flange Adapter	•	•	•
H4	Traditional Flange, <i>Monel</i> , <i>Monel</i> Drain/Vent, <i>Monel</i> Flange Adapter	•	•	•
H7	Traditional Flange, 316 SST, <i>Hastelloy C</i> Drain/Vent, 316 SST Flange Adapter	•	•	•
HJ	DIN Compliant Traditional Flange, SST, 7/16 in. Adapter/Manifold Bolting	•	•	•
HK	DIN Compliant Traditional Flange, SST, 10 mm Adapter/Manifold Bolting	•	•	•
HL	DIN Compliant Traditional Flange, SST, 12mm Adapter/Manifold Bolting	•	•	•
FA	Level Flange, SST, 2 in., ANSI Class 150, Vertical Mount	•	•	•
FB	Level Flange, SST, 2 in., ANSI Class 300, Vertical Mount	•	•	•
FC	Level Flange, SST, 3 in., ANSI Class 150, Vertical Mount	•	•	•
FD	Level Flange, SST, 3 in., ANSI Class 300, Vertical Mount	•	•	•
FP	DIN Level Flange, SST, DN 50, PN 40, Vertical Mount	•	•	•
FQ	DIN Level Flange, SST, DN 80, PN 40, Vertical Mount	•	•	•
<i>NOTE: Option Codes H3 and H7 meet NACE material recommendations per MR 01-75.</i>				
Code	Integral Mount Manifold Options	CD	CG	CA
S5	Assemble to Model 305 Integral Manifold	•	•	•
Code	Integral Mount Primary Elements (Optional)	CD	CG	CA
S4	Factory Assembly to Rosemount Primary Element (<i>Annubar</i> or Model 1195 Integral Orifice) <i>NOTE: With the primary element installed, the maximum operating pressure will equal the lesser of either the transmitter or the primary element. Option is available for factory assembly to range 1–4 transmitters only.</i>	•	•	•
Code	Diaphragm Seal Assemblies (Optional) <i>NOTE: Standard flange and adapter bolts are austenitic 316 SST.</i>	CD	CG	CA
S1	One Diaphragm Seal (Direct Mount or Capillary Connection Type)	•	•	•
S2	Two Diaphragm Seals (Direct Mount or Capillary Connection Type)	•	•	•
Code	Optional All Welded Diaphragm Seal Systems (for high vacuum applications) <i>NOTE: Standard flange and adapter bolts are austenitic 316 SST.</i>	CD	CG	CA
S7	One Diaphragm Seal, All-Welded System (Capillary Connection Type)	•	•	•
S8	Two Diaphragm Seals, All-Welded System (Capillary Connection Type)	•	•	•
S0	One Diaphragm Seal, All-Welded System (Direct Mount Connection Type)	•	•	•
S9	Two Diaphragm Seals, All-Welded System (One Direct Mount and One Capillary Connection Type)	•	•	•
Code	Mounting Bracket Options	CD	CG	CA
B4	<i>Coplanar</i> Flange Bracket for 2-in. Pipe or Panel Mounting, all SST	•	•	•
B1	Traditional Flange Bracket for 2-in. Pipe Mounting, CS Bolts	•	•	•
B2	Traditional Flange Bracket for Panel Mounting, CS Bolts	•	•	•
B3	Traditional Flange Flat Bracket for 2-in. Pipe Mounting, CS Bolts	•	•	•
B7	B1 Bracket with Series 300 SST Bolts	•	•	•
B8	B2 Bracket with Series 300 SST Bolts	•	•	•
B9	B3 Bracket with Series 300 SST Bolts	•	•	•
BA	SST B1 Bracket with Series 300 SST Bolts	•	•	•
BC	SST B3 Bracket with Series 300 SST Bolts	•	•	•
Code	Hazardous Locations Certification Options	CD	CG	CA
E5	FM Explosionproof Approval	•	•	•
I5	FM Non-incendive and Intrinsic Safety Approval	•	•	•
K5	FM Explosionproof and Intrinsic Safety Approval	•	•	•
I1	BASEEFA/CENELEC Intrinsic Safety Certification <i>NOTE: Not available with low-power Option Code M.</i>	•	•	•
N1	BASEEFA Type N Certification <i>NOTE: Not available with low-power Option Code M.</i>	•	•	•
E8	CESI/CENELEC Flameproof Certification	•	•	•
E4	JIS Flameproof Certification <i>NOTE: Not available with low-power Option Code M.</i>	•	•	•
C6	Canadian Standards Association (CSA) Explosionproof and Intrinsic Safety Approval (Requires 42.4 V dc maximum power supply)	•	•	•
K6	Combination of CSA and CENELEC Explosionproof and Intrinsic Safety Approval <i>NOTE: Not available with low-power Option Code M.</i>	•	•	•
KB	Combination of FM and CSA Explosionproof and Intrinsic Safety Approvals <i>NOTE: Not available with low-power Option Code M.</i>	•	•	•
I7	SAA Intrinsic Safety Certification	•	•	•
E7	SAA Flameproof Certification	•	•	•
N7	SAA Type N Certification	•	•	•

TABLE 5-6. Model 3051C Differential, Gage, and Absolute Pressure Transmitters (continued)
 — = Not Applicable • = Applicable

Code	Bolting Options	CD	CG	CA
L4	Austenitic 316 SST Bolts	•	•	•
L5	ANSI/ASTM-A-193-B7M Bolts	•	•	•
L6	Monel Bolts	•	•	•
Code	Meters (Optional)	CD	CG	CA
M5	LCD Meter for Aluminum Housing (Housing Codes A, B, C, and D only)	•	•	•
M6	LCD Meter for SST Housing (Housing Codes J, K, and L only)	•	•	•
Code	Other Options	CD	CG	CA
Q4	Calibration Data Sheet	•	•	•
Q8	Material Traceability Certification per EN 10204 3.1B <i>NOTE: This option is available for the sensor module housing and Coplanar or traditional flanges and adapters (Model 3051C), and for the sensor module housing and low-volume Coplanar flange and adapter (Model 3051C with Option Code S1).</i>	•	•	•
J1	Local Zero Adjustment Only <i>NOTE: Local zero and span adjustments are standard unless Option Code J1 or J3 is specified.</i>	•	•	•
J3	No Local Zero or Span Adjustment <i>NOTE: Local zero and span adjustments are standard unless Option Code J1 or J3 is specified.</i>	•	•	•
T1	Transient Protection Terminal Block <i>NOTE: Not available with hazardous locations certification Option Code I1 or K6.</i>	•	•	•
C1	Custom Software Configuration (Completed CDS 00806-0100-4001 required with order)	•	•	•
C2	0.8–3.2 V dc Output with Digital Signal Based on HART Protocol (Output Code M only)	•	•	•
C3	Gage Calibration (Model 3051CA4 only)	•	•	•
C4	Analog Output Levels Compliant with NAMUR Recommendation NE43, 27-June-1996 <i>NOTE: NAMUR-Compliant operation is pre-set at the factory and cannot be changed to standard operation in the field.</i>	•	•	•
CN	Analog Output Levels Compliant with NAMUR Recommendation NE43, 27-June-1996: Alarm Configuration—Low <i>NOTE: NAMUR-Compliant operation is pre-set at the factory and cannot be changed to standard operation in the field.</i>	•	•	•
P1	Hydrostatic Testing	•	•	•
P2	Cleaning for Special Service	•	•	•
P3	Cleaning for <1 PPM Chlorine/Fluorine	•	•	•
D3	¼–18 NPT Process Connections (No flange adapters)	•	•	•
D7	Coplanar Flange Without Drain/Vent Ports	•	•	•
D8	Ceramic Ball Drain/Vents	•	•	•
D9	JIS Process Connection—RC ¼ Flange with RC ½ Flange Adapter	•	•	•
P9	4500 psig Static Pressure Limit (Model 3051CD Ranges 2–5 only)	•	•	•
V5	External Ground Screw Assembly	•	•	•
Typical Model Number: 3051CD 2 A 2 2 A 1 A B4				

(1) *NOTE: Model 3051CD0 is available only with Output Code A, Process Flange Code 0 (Alternate Flange H2), Isolating Diaphragm Code 2, O-ring Code A, and Bolting Option L4. For Multiple Options selections, contact your Rosemount representative or see Rosemount PDS 00813-0600-4001.*

Rosemount Model 3051 Transmitter for Flow, Level, and Pressure Measurement

TABLE 5-7. Model 3051T Gage and Absolute Pressure Transmitter

Model	Transmitter Type		Available
3051T	Pressure Transmitter		•
Code	Pressure Type		
G	Gage		•
A	Absolute		•
PRESSURE RANGES (RANGE/MIN. SPAN)			
Code	3051TG	3051TA	Available
1	-14.7 to 30 psi/0.3 psi (-101 to 207 kPa/2,1 kPa)	0 to 30 psia/0.3 psia (0 to 207 kPa/2,1 kPa)	•
2	-14.7 to 150 psi/1.5 psi (-101 to 1 034 kPa/10,3 kPa)	0 to 150 psia/1.5 psia (0 to 1 034 kPa/10,3 kPa)	•
3	-14.7 to 800 psi/8 psi (-101 to 5 516 kPa/55 kPa)	0 to 800 psia/8 psia (0 to 5 516 kPa/55 kPa)	•
4	-14.7 to 4000 psi/40 psi (-101 to 27 580 kPa/276 kPa)	0 to 4000 psia/40 psia (0 to 27 580 kPa/276 kPa)	•
5	-14.7 to 10000 psi/2000 psi (-101 to 68 900 kPa/13 800 kPa)	0 to 10000 psia/2000 psia (0 to 68 900 kPa/13 790 kPa)	•
<i>NOTE: 3051TG lower range limit varies with atmospheric pressure.</i>			
Code	Output		Available
A	4–20 mA with Digital Signal Based on <i>HART</i> Protocol		•
M	Low-Power 1–5 V dc with Digital Signal Based on <i>HART</i> Protocol (See Option Code C2 for 0.8–3.2 V dc Output)		•
<i>NOTE: Not available with hazardous certification Option Codes I1 or N1.</i>			
Code	Process Connection Style		Available
2A	¼–18 NPT Female		•
2B	½–14 NPT Female		•
2C	G½ A DIN 16288 Male (Available in SST for Range 1–4 only)		•
2F	Coned and Threaded, Compatible with Autoclave Type F-250-C <i>(Includes Gland and Collar, Available in SST for Range 5 only)</i>		•
Code	Isolating Diaphragm	Process Connection Wetted Parts Material	Available
2	316L SST	316L SST	•
3	Hastelloy	Hastelloy	•
<i>NOTE: Meets NACE requirements per MR 01-75.</i>			
Code	Fill Fluid		Available
1	Silicone		•
2	Inert		•
Code	Housing Material	Conduit Entry Size	Available
A	Polyurethane-covered Aluminum	½–14 NPT	•
B	Polyurethane-covered Aluminum	M20 × 1.5 (CM20)	•
C	Polyurethane-covered Aluminum	PG 13.5	•
D	Polyurethane-covered Aluminum	G½	•
J	SST	½–14 NPT	•
K	SST	M20 × 1.5 (CM20)	•
L	SST	PG 13.5	•
Code	Integral Mount Manifold (Optional)		Available
S5	Assemble to Model 306 Integral Manifold (Requires ½ in. process connection code 2B—Refer to PPL 00814-0100-4733)		•
Code	Remote Diaphragm Seal Assemblies (Optional)		Available
S1	One Remote Diaphragm Seal (Direct Mount or Capillary Connection Type)		•
Code	Mounting Brackets (Optional)		Available
B4	Bracket for 2-in. Pipe or Panel Mounting, All SST		•

TABLE 5-7. (continued) Model 3051T Gage and Absolute Pressure Transmitter

Code	Hazardous Locations Certifications (Optional)	Available
E5	FM Explosionproof Approval	•
I5	FM Non-incendive and Intrinsic Safety Approval	•
K5	FM Explosionproof and Intrinsic Safety Approval	•
C6	CSA Explosionproof and Intrinsic Safety Approval (Requires 42.4 V dc maximum power supply)	•
K6	Combination of CSA and CENELEC Explosionproof and Intrinsic Safety Approval <i>NOTE: Not available with low-power Option Code M.</i>	•
KB	Combination of FM and CSA Explosionproof and Intrinsic Safety Approvals <i>NOTE: Not available with low-power Option Code M.</i>	•
I7	SAA Intrinsic Safety Certification	•
E7	SAA Flameproof Certification	•
N7	SAA Type N Certification	•
I1	BASEEFA/CENELEC Intrinsic Safety Certification <i>NOTE: Not available with low-power Option Code M.</i>	•
N1	BASEEFA Type N Certification <i>NOTE: Not available with low-power Option Code M.</i>	•
E8	CESI/CENELEC Flameproof Certification	•
Code	Other Options	Available
Q4	Calibration Data Sheet	•
Q8	Material Traceability Certification per EN 10204 3.1B <i>NOTE: This option applies to the threaded process connection only.</i>	•
J1	Local Zero Adjustment Only <i>NOTE: Local zero and span adjustments are standard unless Option Code J1 or J3 is specified.</i>	•
J3	No Local Zero or Span Adjustment <i>NOTE: Local zero and span adjustments are standard unless Option Code J1 or J3 is specified.</i>	•
M5	LCD Meter for Aluminum Housing (Housing Codes A, B, C, and D only)	•
M6	LCD Meter for SST Housing (Housing Codes J, K, and L only)	•
T1	Transient Protection Terminal Block <i>NOTE: Not available with hazardous locations certification Option Code I1 or K6.</i>	•
C1	Custom Software Configuration (Completed CDS 00806-0100-4001 required with order)	•
C2	0.8–3.2 V dc Output with Digital Signal Based on HART Protocol (Output Code M only)	•
C4	Analog Output Levels Compliant with NAMUR Recommendation NE43, 27-June-1996 <i>NOTE: NAMUR-Compliant operation is pre-set at the factory and cannot be changed to standard operation in the field.</i>	•
CN	Analog Output Levels Compliant with NAMUR Recommendation NE43, 27-June-1996: Low Alarm Configuration <i>NOTE: NAMUR-Compliant operation is pre-set at the factory and cannot be changed to standard operation in the field.</i>	•
P1	Hydrostatic Testing	•
P2	Cleaning for Special Service	•
P3	Cleaning for <1 PPM Chlorine/Fluorine	•
V5	External Ground Screw Assembly	•
Typical Model Number: 3051T G 5 F 2A 2 1 A B4		

TABLE 5-8. Model 3051L Flange-Mounted Liquid Level Transmitter

Model	Transmitter Type			Available	
3051L	Flange-Mounted Liquid Level Transmitter			•	
Code	PRESSURE RANGES (RANGE/MIN. SPAN)			Available	
2	-250 to 250 inH ₂ O/2.5 inH ₂ O (-62,2 to 62,2 kPa/0,62 kPa)			•	
3	-1000 to 1000 inH ₂ O/10 inH ₂ O (-248 to 248 kPa/2,5 kPa)			•	
4	-8310 to 8310 inH ₂ O/83.1 inH ₂ O (-2 070 to 2 070 Pa/20,7 kPa)			•	
Code	Output			Available	
A	4–20 mA with Digital Signal Based on HART Protocol			•	
M	Low-Power 1–5 V dc with Digital Signal Based on HART Protocol (See Option Code C2 for 0.8–3.2 V dc Output) <i>NOTE: Not available with hazardous certification Option Codes I1, N1, E4, and K6.</i>			•	
HIGH PRESSURE SIDE					
Code	Diaphragm Size	Material	Extension Length	Available	
G0	2 in./DN 50	316L SST	Flush Mount Only	• • • When specifying this option code, a lower housing must be selected from the flushing connection options table.	
H0	2 in./DN 50	Hastelloy	Flush Mount Only		
J0	2 in./DN 50	Tantalum	Flush Mount Only		
A0	3 in./DN 80	316L SST	Flush Mount	• • • NOTE Extension diameters are sized to fit Schedule 80 pipe. • • • • • • • • • • • • • • •	
A2	3 in./DN 80	316L SST	2 in./50 mm		
A4	3 in./DN 80	316L SST	4 in./100 mm		
A6	3 in./DN 80	316L SST	6 in./150 mm		
B0	4 in./DN 100	316L SST	Flush Mount		
B2	4 in./DN 100	316L SST	2 in./50 mm		
B4	4 in./DN 100	316L SST	4 in./100 mm		
B6	4 in./DN 100	316L SST	6 in./150 mm		
C0	3 in./DN 80	Hastelloy	Flush Mount		
C2	3 in./DN 80	Hastelloy	2 in./50 mm		
C4	3 in./DN 80	Hastelloy	4 in./100 mm		
C6	3 in./DN 80	Hastelloy	6 in./150 mm		
D0	4 in./DN 100	Hastelloy	Flush Mount		
D2	4 in./DN 100	Hastelloy	2 in./50 mm		
D4	4 in./DN 100	Hastelloy	4 in./100 mm		
D6	4 in./DN 100	Hastelloy	6 in./150 mm		
E0	3 in./DN 80	Tantalum	Flush Mount Only		
F0	4 in./DN 100	Tantalum	Flush Mount Only		
MOUNTING FLANGE					
Code	Size	ASME B 16.5 (ANSI) or DIN Flange Rating	Material	Applicable With These High Pressure Side Diaphragm Sizes	Available
M	2 in.	Class 150	CS	2 in./DN 50	•
A	3 in.	Class 150	CS	3 in./DN 80	•
B	4 in.	Class 150	CS	4 in./DN 100	•
N	2 in.	Class 300	CS	2 in./DN 50	•
C	3 in.	Class 300	CS	3 in./DN 80	•
D	4 in.	Class 300	CS	4 in./DN 100	•
P	2 in.	Class 600	CS	2 in./DN 50	•
E	3 in.	Class 600	CS	3 in./DN 80	•
X	2 in.	Class 150	SST	2 in./DN 50	•
F	3 in.	Class 150	SST	3 in./DN 80	•
G	4 in.	Class 150	SST	4 in./DN 100	•
Y	2 in.	Class 300	SST	2 in./DN 50	•
H	3 in.	Class 300	SST	3 in./DN 80	•
J	4 in.	Class 300	SST	4 in./DN 100	•
Z	2 in.	Class 600	SST	2 in./DN 50	•
L	3 in.	Class 600	SST	3 in./DN 80	•
Q	DIN DN 50	PN 10–40	CS	2 in./DN 50	•
R	DIN DN 80	PN 40	CS	3 in./DN 80	•
S	DIN DN 100	PN 40	CS	4 in./DN 100	•
V	DIN DN 100	PN 10/16	CS	4 in./DN 100	•
K	DIN DN 50	PN 10–40	SST	2 in./DN 50	•
T	DIN DN 80	PN 40	SST	3 in./DN 80	•
U	DIN DN 100	PN 40	SST	4 in./DN 100	•
W	DIN DN 100	PN 10/16	SST	4 in./DN 100	•

TABLE 5-8. (continued) Model 3051L Flange-Mounted Liquid Level Transmitter

Code	Process Fill-High Pressure Side	Temperature Limits			Available
A	<i>Syltherm</i> XLT	-100 to 300 °F (-73 to 135 °C)			•
C	<i>D. C. Silicone 704</i>	60 to 600 °F (15 to 316 °C)			•
D	<i>D. C. Silicone 200</i>	-40 to 400 °F (-40 to 205 °C)			•
H	Inert (Halocarbon)	-50 to 350 °F (-45 to 177 °C)			•
G	Glycerine and Water	0 to 200 °F (-17 to 93 °C)			•
N	<i>Neobee M-20</i>	0 to 400 °F (-17 to 205 °C)			•
P	Propylene Glycol and Water	0 to 200 °F (-17 to 93 °C)			•
LOW PRESSURE SIDE					
Code	Configuration	Flange Adapter	Diaphragm Material	Sensor Fill Fluid	Available
11	Gage	SST	316L SST	Silicone	•
21	Differential	SST	316L SST	Silicone	•
22	Differential	SST	<i>Hastelloy C-276</i>	Silicone	•
2A	Differential	SST	316L SST	Inert (Halocarbon)	•
2B	Differential	SST	<i>Hastelloy C-276</i>	Inert (Halocarbon)	•
31	Remote Seal	SST	316L SST	Silicone (Requires Option Code S1)	•
Code	O-ring Material				Available
A	Glass-filled TFE				•
Code	Housing Material	Conduit Entry Size			Available
A	Polyurethane-covered Aluminum	½-14 NPT			•
B	Polyurethane-covered Aluminum	M20 × 1.5 (CM20)			•
C	Polyurethane-covered Aluminum	PG 13.5			•
D	Polyurethane-covered Aluminum	G½			•
J	SST	½-14 NPT			•
K	SST	M20 × 1.5 (CM20)			•
L	SST	PG 13.5			•
Code	Diaphragm Seal Assemblies (Optional)				Available
S1	One Diaphragm Seal (requires low pressure side Option Code 31 capillary connection type)				•
Code	Hazardous Locations Certification Options				Available
E5	FM Explosionproof Approval				•
I5	FM Non-incendive and Intrinsic Safety Approval				•
K5	FM Explosionproof and Intrinsic Safety Approval				•
I1	BASEEFA/CENELEC Intrinsic Safety Certification (<i>NOTE: Not available with low-power Option Code M.</i>)				•
N1	BASEEFA Type N Certification (<i>NOTE: Not available with low-power Option Code M.</i>)				•
E8	CESI/CENELEC Flameproof Certification				•
E4	JIS Flameproof Certification (<i>NOTE: Not available with low-power Option Code M.</i>)				•
C6	CSA Explosionproof and Intrinsic Safety Approval (Requires 42.4 V dc maximum power supply)				•
K6	Combination of CSA and CENELEC Explosionproof and Intrinsic Safety Approval <i>NOTE: Not available with low-power Option Code M.</i>				•
KB	Combination of FM and CSA Explosionproof and Intrinsic Safety Approvals <i>NOTE: Not available with low-power Option Code M.</i>				•
I7	SAA Intrinsic Safety Certification				•
E7	SAA Flameproof Certification				•
N7	SAA Type N Certification				•
Code	Bolt for Flange and Adapters (Optional)				Available
L4	Austenitic 316 SST Bolts				•
L5	ASME B 16.5 (ANSI)/ASTM-A-193-B7M Bolts				•
Code	Meter Options				Available
M5	LCD Meter for Aluminum Housing (Housing Codes A, B, C, and D only)				•
M6	LCD Meter for SST Housing (Housing Codes J, K, and L only)				•

Rosemount Model 3051 Transmitter for Flow, Level, and Pressure Measurement

TABLE 5-8. (continued) Model 3051L Flange-Mounted Liquid Level Transmitter

Code	Other Options	Available				
Q4	Calibration Data Sheet	•				
Q8	Material Traceability Certification per EN 10204 3.1B <i>NOTE: This options is available with the diaphragm, upper housing, Coplanar flange, adapter, sensor module housing, lower housing/flushing connection, and extension.</i>	•				
J1	Local Zero Adjustment Only <i>NOTE: Local zero and span adjustments are standard unless Option Code J1 or J3 is specified.</i>	•				
J3	No Local Zero or Span Adjustment <i>NOTE: Local zero and span adjustments are standard unless Option Code J1 or J3 is specified.</i>	•				
T1	Transient Protection Terminal Block <i>NOTE: Not available with hazardous locations certification Option Code I1 or K6.</i>	•				
C1	Custom Software Configuration (Completed CDS 00806-0100-4001 required with order)	•				
C2	0.8–3.2 V dc Output with Digital Signal Based on HART Protocol (Output Code M only)	•				
C4	Analog Output Levels Compliant with NAMUR Recommendation NE43, 27-June-1996 <i>NOTE: NAMUR-Compliant operation is pre-set at the factory and cannot be changed to standard operation in the field.</i>	•				
CN	Analog Output Levels Compliant with NAMUR Recommendation NE43, 27-June-1996: Alarm Configuration–Low <i>NOTE: NAMUR-Compliant operation is pre-set at the factory and cannot be changed to standard operation in the field.</i>	•				
D8	Ceramic Ball Drain/Vents	•				
V5	External Ground Screw Assembly	•				
Lower Housing Flushing Connections						
Code	Ring Material	Number	Size	Diaphragm Size		
				2 in.	3 in.	4 in.
F1	SST	1	¼	•	•	•
F2	SST	2	¼	•	•	•
F3	Hastelloy	1	¼	•	•	•
F4	Hastelloy	2	¼	•	•	•
FA	SST	0	—	•		
FC	Hastelloy	0	—	•		
F7	SST	1	½	•	•	•
F8	SST	2	½	•	•	•
F9	Hastelloy	1	½	•	•	•
F0	Hastelloy	2	½	•	•	•
<i>NOTE: Flushing Codes F3 and F4 are not available with Option Codes A0, B0, and G0.</i>						
<i>NOTE: Flushing Code FC is not available with Option Code G0.</i>						

TABLE 5-9. Model 3051H Pressure Transmitter for High-Temperature Processes

Model	Transmitter Type (Select One)	Available			
		HD	HG		
3051HD	Differential Pressure Transmitter for High-Temperature Processes	•			
3051HG	Gage Pressure Transmitter for High-Temperature Processes		•		
PRESSURE RANGES (RANGE/MIN. SPAN)					
Code	3051HD	3051HG			
2	-250 to 250 inH ₂ O/2.5 inH ₂ O (-62,2 to 62,2 kPa/0,62 kPa)	-250 to 250 inH ₂ O/2.5 inH ₂ O (-62,2 to 62,2 kPa/0,6 kPa)	•	•	
3	-1000 to 1000 inH ₂ O/10 inH ₂ O (-248 to 248 kPa/2,5 kPa)	-407 to 1000 inH ₂ O/10 in H ₂ O (-101 to 249 kPa/2,5 kPa)	•	•	
4	-300 to 300 inH ₂ O/3 psi (-13 800 to 13 800 kPa/20,1 kPa)	-14.7 to 300 psi/3 psi (-101 to 2 070 kPa/20,7 kPa)	•	•	
5	-2000 to 2000 psi/20 psi (-207 to 207 kPa/2,5 kPa)	-14.7 to 2000 psig/20 psi (-101 to 13 800 kPa/138 kPa)	•	•	
<i>NOTE: 3051HG lower range limit varies with atmospheric pressure.</i>					
Code	Output	HD	HG		
A	4-20 mA with Digital Signal Based on HART Protocol	•	•		
M	Low-Power 1-5 V dc with Digital Signal Based on HART Protocol (See Option Code C2 for 0.8-3.2 V dc Output) <i>NOTE: Not available with hazardous certification Option Codes I1, N1, E4, and K6.</i>	•	•		
PROCESS CONNECTION					
Code	Process Flange Material	Drain/Vent	Flange Adapters	HD	HG
2	SST	SST	SST	•	•
7	SST	Hastelloy	SST	•	•
<i>NOTE: Process Connection Code 7 meets NACE material recommendations per MR 01-75.</i>					
Code	Process Isolating Diaphragm	HD	HG		
2	316L SST	•	•		
3	Hastelloy C-276 (Meets NACE material recommendations per MR 01-75)	•	•		
5	Tantalum	•	•		
Code	O-ring Material	HD	HG		
A	Glass-Filled TFE	•	•		
Code	Process Fill Fluid	HD	HG		
D	D.C. 200 Silicone	•	•		
H	Inert	•	•		
N	Neobee M-20	•	•		
Code	Sensor Module Isolator Material	HD	HG		
2	SST	•	•		
Code	Sensor Module Fill Fluid	HD	HG		
1	Silicone	•	•		
2	Inert (Halocarbon)	•	•		
Code	Housing Material	Conduit Entry Size	HD	HG	
A	Polyurethane-covered Aluminum	½-14 NPT	•	•	
B	Polyurethane-covered Aluminum	M20 × 1.5 (CM20)	•	•	
C	Polyurethane-covered Aluminum	PG 13.5	•	•	
D	Polyurethane-covered Aluminum	G½	•	•	
J	SST	½-14 NPT	•	•	
K	SST	M20 × 1.5 (CM20)	•	•	
L	SST	PG 13.5	•	•	
Code	Integral Mount Manifold Options	HD	HG		
S4	Factory Assembly to Rosemount Primary Element (Diamond II+Annubar/Model 1195 Integral Orifice) <i>NOTE: With the primary element installed, the maximum operating pressure will equal the lesser of either the transmitter or the primary element. Option is available for factory assembly to range 1-4 transmitters only.</i>	•			
Code	Mounting Bracket Options	HD	HG		
B5	Universal Mounting Bracket for 2-in. Pipe or Panel Mount, CS Bolts	•	•		
B6	Universal Mounting Bracket for 2-in. Pipe or Panel Mount, SST Bolts	•	•		

Rosemount Model 3051 Transmitter for Flow, Level, and Pressure Measurement

TABLE 5-9. (continued) Model 3051H Pressure Transmitter for High-Temperature Processes

Code	Hazardous Locations Certification Options	HD	HG
E5	FM Explosionproof Approval	•	•
I5	FM Non-incendive and Intrinsic Safety Approval	•	•
K5	FM Explosionproof and Intrinsic Safety Approval	•	•
I1	BASEEFA/CENELEC Intrinsic Safety Certification (<i>NOTE: Not available with low-power Option Code M.</i>)	•	•
N1	BASEEFA Type N Certification (<i>NOTE: Not available with low-power Option Code M.</i>)	•	•
E8	CESI/CENELEC Flameproof Certification	•	•
E4	JIS Flameproof Certification (<i>NOTE: Not available with low-power Option Code M.</i>)	•	•
C6	CSA Explosionproof and Intrinsic Safety Approval (Requires 42.4 V dc maximum power supply)	•	•
K6	Combination of CSA and CENELEC Explosionproof and Intrinsic Safety Approval <i>NOTE: Not available with low-power Option Code M.</i>	•	•
KB	Combination of FM and CSA Explosionproof and Intrinsic Safety Approvals <i>NOTE: Not available with low-power Option Code M.</i>	•	•
I7	SAA Intrinsic Safety Certification	•	•
E7	SAA Flameproof Certification	•	•
N7	SAA Type N Certification	•	•
Code	Bolt for Flange and Adapter Options	HD	HG
L4	Austenitic 316 SST Bolts	•	•
Code	Meter Options	HD	HG
M5	LCD Meter for Aluminum Housing (Housing Codes A, B, C, and D only)	•	•
M6	LCD Meter for SST Housing (Housing Codes J, K, and L only)	•	•
Code	Other Options	HD	HG
Q4	Calibration Data Sheet	•	•
J1	Local Zero Adjustment Only <i>NOTE: Local zero and span adjustments are standard unless Option Code J1 or J3 is specified.</i>	•	•
J3	No Local Zero or Span Adjustment <i>NOTE: Local zero and span adjustments are standard unless Option Code J1 or J3 is specified.</i>	•	•
T1	Transient Protection Terminal Block <i>NOTE: Not available with hazardous locations certification Option Code I1 or K6.</i>	•	•
C1	Custom Software Configuration (Completed CDS 00806-0100-4001 required with order)	•	•
C2	0.8–3.2 V dc Output with Digital Signal Based on HART Protocol (Output Code M only)	•	•
C4	Analog Output Levels Compliant with NAMUR Recommendation NE43, 27-June-1996 <i>NOTE: NAMUR-Compliant operation is pre-set at the factory and cannot be changed to standard operation in the field.</i>	•	•
CN	Analog Output Levels Compliant with NAMUR Recommendation NE43, 27-June-1996: Alarm Configuration–Low <i>NOTE: NAMUR-Compliant operation is pre-set at the factory and cannot be changed to standard operation in the field.</i>	•	•
P1	Hydrostatic Testing	•	•
P2	Cleaning for Special Service	•	•
P3	Cleaning for <1 PPM Chlorine/Fluorine	•	•
D3	¼–18 NPT Process Connections (No flange adapters)	•	•
D8	Ceramic Ball Drain/Vents	•	•
V5	External Ground Screw Assembly	•	•
Typical Model Number: 3051HG 2 A 2 2 A H 2 1 A B5			

TABLE 5-10. Model 3051P Reference Class Transmitter

Model	Transmitter Type (Select One)				PD	PG
3051PD	Model 3051P Reference Class Differential Pressure Transmitter				•	
3051PG	Model 3051P Reference Class Gage Pressure Transmitter					•
PRESSURE RANGES (RANGE/MIN. SPAN)						
Code	3051PD	3051PG			PD	PG
2	-250 to 250 inH ₂ O/25 inH ₂ O (-62,2 to 62,2 kPa/6,2 kPa)	-250 to 250 inH ₂ O/2.5 inH ₂ O (-62,2 to 62,2 kPa/0,6 kPa)			•	•
3	-1000 to 1000 inH ₂ O/100 inH ₂ O (-248 to 248 kPa/25 kPa)	-407 to 1000 inH ₂ O/10in H ₂ O (-101 to 249 kPa/2,5 kPa)			•	•
4	Not Applicable	-14.7 to 300 psi/3 psi (-101 to 2 070 kPa/20,7 kPa)				•
5	Not Applicable	-14.7 to 2000 psig/20 psi (-101 to 13 800 kPa/138 kPa)				•
<i>NOTE: 3051PG lower range limit varies with atmospheric pressure.</i>						
Code	Output				PD	PG
A	4–20 mA with Digital Signal Based on HART Protocol				•	•
MATERIALS OF CONSTRUCTION						
Code	Process Flange Type	Flange Material	Drain/Vent	Flange Adapters	PD	PG
2	Coplanar	SST	SST	SST	•	•
0 ⁽¹⁾	Alternate Flange—See Option H2, HJ, HK, HL, FA, FB, FC, FD, FP, FQ, S5				•	•
Code	Isolating Diaphragm				PD	PG
2	316L SST				•	•
Code	O-ring Material				PD	PG
A	Glass-Filled TFE				•	•
Code	Fill Fluid				PD	PG
1	Silicone				•	•
2	Inert (Halocarbon)				•	•
Code	Housing Material	Conduit Entry Size			PD	PG
A	Polyurethane-covered Aluminum	½–14 NPT			•	•
B	Polyurethane-covered Aluminum	M20 x 1.5 (CM20)			•	•
C	Polyurethane-covered Aluminum	PG 13.5			•	•
D	Polyurethane-covered Aluminum	G½			•	•
J	SST	½–14 NPT			•	•
K	SST	M20 x 1.5 (CM20)			•	•
L	SST	PG 13.5			•	•
Code	Alternate Flange Options (Requires Materials of Construction Code 0)				PD	PG
H2	Traditional Flange, 316 SST Drain/Vent, SST Flange Adapter				•	•
HJ	DIN Compliant Traditional Flange, SST, 7/16 in. Adapter/Manifold Bolting				•	•
HK	DIN Compliant Traditional Flange, SST, 10 mm Adapter/Manifold Bolting				•	•
HL	DIN Compliant Traditional Flange, SST, 12mm Adapter/Manifold Bolting				•	•
FA	Level Flange, SST, 2 in., ANSI Class 150, Vertical Mount				•	•
FB	Level Flange, SST, 2 in., ANSI Class 300, Vertical Mount				•	•
FC	Level Flange, SST, 3 in., ANSI Class 150, Vertical Mount				•	•
FD	Level Flange, SST, 3 in., ANSI Class 300, Vertical Mount				•	•
FP	DIN Level Flange, SST, DN 50, PN 40, Vertical Mount				•	•
FQ	DIN Level Flange, SST, DN 80, PN 40, Vertical Mount				•	•
Code	Integral Mount Manifold Options				PD	PG
S5	Assemble to Model 305 Integral Manifold (Refer to PPL 00814-0100-4733 for Pricing Information)				•	•
Code	Integral Mount Primary Elements (Optional)				PD	PG
S4	Factory Assembly to Rosemount Primary Element (Diamond II+Annubar/Model 1195 Integral Orifice)				•	•
<i>NOTE: With the primary element installed, the maximum operating pressure will equal the lesser of either the transmitter or the primary element. Option is available for factory assembly to range 2–3 transmitters only.</i>						

Rosemount Model 3051 Transmitter for Flow, Level, and Pressure Measurement

TABLE 5-10. (continued) Model 3051P Reference Class Transmitter

Code	Mounting Bracket Options	PD	PG
B4	Coplanar Flange Bracket for 2-in. Pipe or Panel Mounting, All SST	•	•
B1	Traditional Flange Bracket for 2-in. Pipe or Panel Mounting, CS Bolts	•	•
B2	Traditional Flange Bracket for Panel Mounting, CS Bolts	•	•
B7	B1 Bracket with Series 300 SST Bolts	•	•
B8	B2 Bracket with Series 300 SST Bolts	•	•
BA	SST B1 Bracket with Series 300 SST Bolts	•	•
BC	SST B3 Bracket with Series 300 SST Bolts	•	•
Code	Hazardous Locations Certification Options	PD	PG
E5	FM Explosionproof Approval	•	•
I5	FM Non-incendive and Intrinsic Safety Approval	•	•
K5	FM Explosionproof and Intrinsic Safety Approval	•	•
I1	BASEEFA/CENELEC Intrinsic Safety Certification <i>NOTE: Not available with low-power Option Code M.</i>	•	•
N1	BASEEFA Type N Certification <i>NOTE: Not available with low-power Option Code M.</i>	•	•
E8	CESI/CENELEC Flameproof Certification	•	•
E4	JIS Flameproof Certification <i>NOTE: Not available with low-power Option Code M.</i>	•	•
C6	Canadian Standards Association (CSA) Explosionproof and Intrinsic Safety Approval (Requires 42.4 V dc maximum power supply)	•	•
K6	Combination of CSA and CENELEC Explosionproof and Intrinsic Safety Approval <i>NOTE: Not available with low-power Option Code M.</i>	•	•
KB	Combination of FM and CSA Explosionproof and Intrinsic Safety Approvals <i>NOTE: Not available with low-power Option Code M.</i>	•	•
I7	SAA Intrinsic Safety Certification	•	•
E7	SAA Flameproof Certification	•	•
N7	SAA Type N Certification	•	•
Code	Other Options	PD	PG
Q4	Calibration Data Sheet	•	•
Q8	Material Traceability Certification per EN 10204 3.1B <i>NOTE: This option is available for the sensor module housing and Coplanar or traditional flanges and adapters.</i>	•	•
L4	Austenitic 316 SST Bolts	•	•
L5	ANSI/ASTM-A-193-B7M Bolts	•	•
L6	Monel Bolts	•	•
M5	LCD Meter for Aluminum Housing (Housing Codes A, B, C, and D only)	•	•
M6	LCD Meter for SST Housing (Housing Codes J, K, and L only)	•	•
J1	Local Zero Adjustment Only <i>NOTE: Local zero and span adjustments are standard unless Option Code J1 or J3 is specified.</i>	•	•
J3	No Local Zero or Span Adjustment <i>NOTE: Local zero and span adjustments are standard unless Option Code J1 or J3 is specified.</i>	•	•
T1	Transient Protection Terminal Block <i>NOTE: Not available with hazardous locations certification Option Code I1.</i>	•	•
C1	Custom Software Configuration (Completed CDS 00806-0100-4001 required with order)	•	•
C4	Analog Output Levels Compliant with NAMUR Recommendation NE43, 27-June-1996 <i>NOTE: NAMUR-Compliant operation is pre-set at the factory and cannot be changed to standard operation in the field.</i>	•	•
CN	Analog Output Levels Compliant with NAMUR Recommendation NE43, 27-June-1996: Alarm Configuration—Low <i>NOTE: NAMUR-Compliant operation is pre-set at the factory and cannot be changed to standard operation in the field.</i>	•	•
P1	Hydrostatic Testing	•	•
P2	Cleaning for Special Service	•	•
P3	Cleaning for <1 PPM Chlorine/Fluorine	•	•
D3	¼–18 NPT Process Connections (No flange adapters)	•	•
D7	Coplanar Flange Without Drain/Vent Ports	•	•
V5	External Ground Screw Assembly	•	•
Typical Model Number: 3051PD 3 A 2 2 A 1 A B4			

(1) *NOTE: May impact temperature performance under certain conditions.*

CONFIGURATION INFORMATION

Standard Configuration

Unless otherwise specified, transmitter is shipped as follows:

Engineering Units

Differential/Gage:	inH ₂ O (Range 0, 1, 2, and 3) psi (Range 4 and 5)
Absolute/3051T:	psi (all ranges)
4 mA (1 V dc):	0 (engineering units above)
20 mA (5 V dc):	Upper range limit
Output:	Linear
Flange type:	Specified model code option
Flange material:	Specified model code option
O-ring material:	Specified model code option
Drain/vent:	Specified model code option
Integral meter:	Installed or none
Alarm:	Upscale
Software tag:	(Blank)

Custom Configuration (Option Code C1)

If Option Code C1 is ordered, the customer may specify the following data in addition to the standard configuration parameters.

- Output Information
- Transmitter Information
- LCD Meter Configuration
- Hardware Selectable Information
- Signal Selection

Refer to Configuration Data Sheet 00806-0100-4001.

Tagging

Three customer tagging options are available:

1. Standard SST hardware tag is wired to the transmitter. Tag character height is 0.125 in. (3,18 mm), 56 characters maximum.
2. Tag may be permanently stamped on transmitter nameplate upon request, 56 characters maximum.
3. Tag may be stored in transmitter memory (30 characters maximum). Software tag is left blank unless specified.

Optional Model 305 or Model 306 Integral Manifolds

Factory assembled to Model 3051C and Model 3051T transmitters. Refer to the following Rosemount documents for more information:

Product Data Sheet 00813-0100-4773

Product Data Sheet 00813-0200-4733

Optional Conventional Manifolds (Packaged Separately)

A wide offering of two-, three-, and five-valve manifolds manufactured by Anderson Greenwood and PGI International are available.

Part No. 01151-0150-0001

3-Valve Manifold, Carbon Steel
(Anderson, Greenwood & Co., M4AVIC)

Part No. 01151-0150-0002

3-Valve Manifold, 316 SST
(Anderson, Greenwood & Co., M4AVIS)

Please consult your Rosemount representative.

Optional Diaphragm and Sanitary Seals

Refer to Product Data Sheet 00813-0100-4016 or 00813-0201-4016.

Output Information

Output range points must be the same unit of measure. Available units of measure include:

inH ₂ O	inH ₂ O@4 °C ⁽¹⁾	psi	Pa
inHg	ftH ₂ O	bar	kPa
mmH ₂ O	mmH ₂ O@4 °C ⁽¹⁾	mbar	torr
mmHg	g/cm ²	kg/cm ²	atm

(1) Not available on low power or previous versions.

Shipping Weights

TABLE 5-11. Transmitter Weights without Options

Transmitter	Add Weight In lb (kg)
Model 3051C/P	6.0 (2,7)
Model 3051L	See Table 5-12
Model 3051H	13.6 (6,2)
Model 3051T	3.0 (1,4)

TABLE 5-12. Model 3051L Weights without Options

Flange	Flush lb. (kg)	2-in. Ext. lb (kg)	4-in. Ext. lb (kg)	6-in. Ext. lb (kg)
2-in., 150	12.5 (5,7)	—	—	—
3-in., 150	17.5 (7,9)	19.5 (8,8)	20.5 (9,3)	21.5 (9,7)
4-in., 150	23.5 (10,7)	26.5 (12,0)	28.5 (12,9)	30.5 (13,8)
2-in., 300	17.5 (7,9)	—	—	—
3-in., 300	22.5 (10,2)	24.5 (11,1)	25.5 (11,6)	26.5 (12,0)
4-in., 300	32.5 (14,7)	35.5 (16,1)	37.5 (17,0)	39.5 (17,9)
2-in., 600	15.3 (6,9)	—	—	—
3-in., 600	25.2 (11,4)	27.2 (12,3)	28.2 (12,8)	29.2 (13,2)
DN 50 / PN 40	13.8 (6,2)	—	—	—
DN 80 / PN 40	19.5 (8,8)	21.5 (9,7)	22.5 (10,2)	23.5 (10,6)
DN 100 / PN 10/16	17.8 (8,1)	19.8 (9,0)	20.8 (9,5)	21.8 (9,9)
DN 100 / PN 40	23.2 (10,5)	25.2 (11,5)	26.2 (11,9)	27.2 (12,3)

TABLE 5-13. Transmitter Options Weights

Code	Option	Add lb (kg)
J, K, L	Stainless Steel Housing (T)	3.9 (1,8)
J, K, L	Stainless Steel Housing (C, L, H, P)	3.1 (1,4)
M5	LCD Meter for Aluminum Housing	0.5 (0,2)
M6	LCD Meter for SST Housing	1.25 (0,6)
B4	SST Mounting Bracket for <i>Coplanar</i> Flange	1.0 (0,5)
B1, B2, B3	Mounting Bracket for Traditional Flange	2.3 (1,0)
B7, B8, B9	Mounting Bracket for Traditional Flange	2.3 (1,0)
BA, BC	SST Bracket for Traditional Flange	2.3 (1,0)
B5, B6	Mounting Bracket for Model 3051H	2.9 (1,3)
H2	Traditional Flange	2.4 (1,1)
H3	Traditional Flange	2.7 (1,2)
H4	Traditional Flange	2.6 (1,2)
H7	Traditional Flange	2.5 (1,1)
F1, G1, FC	Level Flange—3 in., 150	10.8 (4,9)
F2, G2, FD	Level Flange—3 in., 300	14.3 (6,5)
FA	Level Flange—2 in., 150	10.7 (4,8)
FB	Level Flange—2 in., 300	14.0 (6,3)
FP	DIN Level Flange, SST, DN 50, PN 40	8.3 (3,8)
FQ	DIN Level Flange, SST, DN 80, PN 40	13.7 (6,2)

ROSEMOUNT SMART FAMILY® INSTRUMENTS

Rosemount SMART FAMILY® instruments may be installed in pressure, temperature, level, and flow applications.

All SMART FAMILY instruments are designed to communicate using Highway Addressable Remote Transducer (HART) protocol with the hand-held HART Communicator and Fisher-Rosemount Control Systems.

Related Product Data Sheets

Model 1195 Integral Orifice: PDS 00813-0100-4686

Model 305/Model 306 Integral Manifolds: PDS 00813-0100-4733 and PDS 00813-0200-4733

Model 1199 Diaphragm Seals: PDS 00813-0100-4016 (Worldwide) and PDS 00813-0201-4016 (European)

Diamond II+Annubar: PDS 00813-0100-4760

Model 3051 with FOUNDATION fieldbus: PDS 00813-0100-4774

Model 3051 Draft Range Transmitter (CD0): PDS 00813-0600-4001

PARTS LIST

Item numbers are references to figure callouts (pages 42–46).

TABLE 5-14. Model 3051C Differential Sensor Modules .

Model 3051C Sensor Modules (Min. Span/Range)	Silicone Fill		Inert Fill	
	Part Number		Part Number	
<i>Note: One spare part is recommended for every 50 transmitters.</i>				
<i>Note: Listed by Range and Process Isolator Order Numbers.</i>				
-3 to 3/0.1 inH₂O, Range 0 (includes Traditional SST flange and SST bolts).				
316L SST	03031-1045-0002	•	03031-1145-0002	•
-25 to 25 inH₂O/0.5 inH₂O, Range 1				
316L SST	03031-1045-0012	•	03031-1145-0012	•
Hastelloy C-276	03031-1045-0013	•	03031-1145-0013	•
Monel	03031-1045-0014	•	03031-1145-0014	•
Gold-plated Monel	03031-1045-0016	•	03031-1145-0016	•
Gold-plated 316 SST	03031-1045-0017	•	03031-1145-0017	•
-250 to 250 inH₂O/2.5 inH₂O, Range 2				
316L SST	03031-1045-0022	•	03031-1145-0022	•
Hastelloy C-276	03031-1045-0022	•	03031-1145-0022	•
Monel	03031-1045-0024	•	03031-1145-0024	•
Tantalum	03031-1045-0025	•	03031-1145-0025	•
Gold-plated Monel	03031-1045-0026	•	03031-1145-0026	•
Gold-plated 316 SST	03031-1045-0027	•	03031-1145-0027	•
-1000 to 1000 inH₂O/10 inH₂O, Range 3				
316L SST	03031-1045-0032	•	03031-1145-0032	•
Hastelloy C-276	03031-1045-0033	•	03031-1145-0033	•
Monel	03031-1045-0034	•	03031-1145-0034	•
Tantalum	03031-1045-0035	•	03031-1145-0035	•
Gold-plated Monel	03031-1045-0036	•	03031-1145-0036	•
Gold-plated 316 SST	03031-1045-0037	•	03031-1145-0037	•
-300 to 300 psi/3 psi, Range 4				
316L SST	03031-1045-2042	•	03031-1145-2042	•
Hastelloy C-276	03031-1045-2043	•	03031-1145-2043	•
Monel	03031-1045-2044	•	03031-1145-2044	•
Tantalum	03031-1045-2045	•	03031-1145-2045	•
Gold-plated Monel	03031-1045-2046	•	03031-1145-2046	•
Gold-plated 316 SST	03031-1045-2047	•	03031-1145-2047	•
-2000 to 2000/20 psi, Range 5				
316L SST	03031-1045-2052	•	03031-1145-2052	•
Hastelloy C-276	03031-1045-2053	•	03031-1145-2053	•
Monel	03031-1045-2054	•	03031-1145-2054	•
Tantalum	03031-1045-2055	•	03031-1145-2055	•
Gold-plated Monel	03031-1045-2056	•	03031-1145-2056	•
Gold-plated 316 SST	03031-1045-2057	•	03031-1145-2057	•

TABLE 5-15. Model 3051C Gage Sensor Modules

Model 3051C Gage Modules (Min. Span/Range)	Silicone Fill		Inert Fill	
	Part Number		Part Number	
Note: One spare part is recommended for every 50 transmitters.				
Note: Listed by Range and Process Isolator Order Numbers.				
-250 to 250 inH₂O/2.5 inH₂O, Range 2				
316L SST	03031-1045-0022	•	03031-1145-0022	•
<i>Hastelloy C-276</i>	03031-1045-0023	•	03031-1145-0023	•
<i>Monel</i>	03031-1045-0024	•	03031-1145-0024	•
Tantalum	03031-1045-0025	•	03031-1145-0025	•
Gold-plated <i>Monel</i>	03031-1045-0026	•	03031-1145-0026	•
Gold-plated 316 SST	03031-1045-0027	•	03031-1145-0027	•
-335 to 1000 inH₂O/10 inH₂O, Range 3				
316L SST	03031-1045-0032	•	03031-1145-0032	•
<i>Hastelloy C-276</i>	03031-1045-0033	•	03031-1145-0033	•
<i>Monel</i>	03031-1045-0034	•	03031-1145-0034	•
Tantalum	03031-1045-0035	•	03031-1145-0035	•
Gold-plated <i>Monel</i>	03031-1045-0036	•	03031-1145-0036	•
Gold-plated 316 SST	03031-1045-0037	•	03031-1145-0037	•
-12 to 300 psi/3 psi, Range 4				
316L SST	03031-1045-1042	•	03031-1145-1042	•
<i>Hastelloy C-276</i>	03031-1045-1043	•	03031-1145-1043	•
<i>Monel</i>	03031-1045-1044	•	03031-1145-1044	•
Tantalum	03031-1045-1045	•	03031-1145-1045	•
Gold-plated <i>Monel</i>	03031-1045-1046	•	03031-1145-1046	•
Gold-plated 316 SST	03031-1045-1047	•	03031-1145-1047	•
-12 to 2000 psi/20 psi, Range 5				
316L SST	03031-1045-1052	•	03031-1145-1052	•
<i>Hastelloy C-276</i>	03031-1045-1053	•	03031-1145-1053	•
<i>Monel</i>	03031-1045-1054	•	03031-1145-1054	•
Tantalum	03031-1045-1055	•	03031-1145-1055	•
Gold-plated <i>Monel</i>	03031-1045-1056	•	03031-1145-1056	•
Gold-plated 316 SST	03031-1045-1057	•	03031-1145-1057	•

TABLE 5-16. Model 3051C Absolute Sensor Modules

Model 3051C Absolute Sensor Modules (Min. Span/Range)	Silicone Fill		Inert Fill	
	Part Number		Part Number	
Note: One spare part is recommended for every 50 transmitters.				
Note: Listed by Range and Process Isolator Order Numbers.				
0 to 0.167 psia/5 psia, Range 0 (includes Traditional SST flange and SST bolts).				
316L SST	03031-2020-0002	•	—	—
<i>Hastelloy C-276</i>	03031-2020-0003	•	—	—
<i>Monel</i>	03031-2020-0004	•	—	—
Gold-plated <i>Monel</i>	03031-2020-0006	•	—	—
Gold-plated 316 SST	03031-2020-0007	•	—	—
0 to 30 psia/0.3 psia, Range 1				
316L SST	03031-2020-0012	•	—	—
<i>Hastelloy C-276</i>	03031-2020-0013	•	—	—
<i>Monel</i>	03031-2020-0014	•	—	—
Gold-plated <i>Monel</i>	03031-2020-0016	•	—	—
Gold-plated 316 SST	03031-2020-0017	•	—	—
0 to 150/1.5 psia, Range 2				
316L SST	03031-2020-0022	•	—	—
<i>Hastelloy C-276</i>	03031-2020-0023	•	—	—
<i>Monel</i>	03031-2020-0024	•	—	—
Gold-plated <i>Monel</i>	03031-2020-0026	•	—	—
Gold-plated 316 SST	03031-2020-0027	•	—	—
0 to 800 psia/8 psia, Range 3				
316L SST	03031-2020-0032	•	—	—
<i>Hastelloy C-276</i>	03031-2020-0033	•	—	—
<i>Monel</i>	03031-2020-0034	•	—	—
Gold-plated <i>Monel</i>	03031-2020-0036	•	—	—
Gold-plated 316 SST	03031-2020-0037	•	—	—

TABLE 5-17. Model 3051T Gage and Absolute Pressure Transmitters.

Item No.	Model 3051T Sensor Modules ⁽¹⁾	Isolating Diaphragm	Housing Material	Silicone Fill		Inert Fill																																							
				Part Number		Part Number																																							
8	Gage Sensor Module⁽²⁾ 0-0.3/30 psig, Range 1 1/4-18 NPT Female 1/4-18 NPT Female 1/2-14 NPT Female 1/2-14 NPT Female G1/2A DIN 16288 Male 1/4-18 NPT Female 1/4-18 NPT Female 1/2-14 NPT Female 1/2-14 NPT Female	316L SST <i>Hastelloy C</i> 316L SST <i>Hastelloy C</i> 316L SST	Aluminum Aluminum Aluminum Aluminum Aluminum	03031-3112-3112 03031-3112-3113 03031-3102-3112 03031-3102-3113 03031-3132-3112	• • • • •	03031-3112-1112 03031-3112-1113 03031-3102-1112 03031-3102-1113 03031-3132-1112	• • • • •																																						
								316L SST <i>Hastelloy C</i> 316L SST <i>Hastelloy C</i> 316L SST <i>Hastelloy C</i>	SST SST SST SST	03031-3111-3112 03031-3111-3113 03031-3101-3112 03031-3101-3113	• • • • • • • • •	03031-3111-1112 03031-3111-1113 03031-3101-1112 03031-3101-1113	• • • • • • • • •																																
														8	Gage Sensor Module⁽²⁾ 0-1.5/150 psig, Range 2 1/4-18 NPT Female 1/4-18 NPT Female 1/2-14 NPT Female 1/2-14 NPT Female G1/2A DIN 16288 Male 1/4-18 NPT Female 1/4-18 NPT Female 1/2-14 NPT Female 1/2-14 NPT Female	316L SST <i>Hastelloy C</i> 316L SST <i>Hastelloy C</i> 316L SST	Aluminum Aluminum Aluminum Aluminum Aluminum	03031-3112-3122 03031-3112-3123 03031-3102-3122 03031-3102-3123 03031-3132-3122	• • • • •	03031-3112-1122 03031-3112-1123 03031-3102-1122 03031-3102-1123 03031-3132-1122	• • • • •																								
																						316L SST <i>Hastelloy C</i> 316L SST <i>Hastelloy C</i>	SST SST SST SST	03031-3111-3122 03031-3111-3123 03031-3101-3122 03031-3101-3123	• • • • • • • • •	03031-3111-1122 03031-3111-1123 03031-3101-1122 03031-3101-1123	• • • • • • • • •																		
																												8	Gage Sensor Module⁽²⁾ 0-8/800 psig, Range 3 1/4-18 NPT Female 1/4-18 NPT Female 1/2-14 NPT Female 1/2-14 NPT Female G1/2A DIN 16288 Male 1/4-18 NPT Female 1/4-18 NPT Female 1/2-14 NPT Female 1/2-14 NPT Female	316L SST <i>Hastelloy C</i> 316L SST <i>Hastelloy C</i> 316L SST	Aluminum Aluminum Aluminum Aluminum Aluminum	03031-3112-3132 03031-3112-3133 03031-3102-3132 03031-3102-3133 03031-3132-3132	• • • • •	03031-3112-1132 03031-3112-1133 03031-3102-1132 03031-3102-1133 03031-3132-1132	• • • • •										
		316L SST <i>Hastelloy C</i> 316L SST <i>Hastelloy C</i>	SST SST SST SST	03031-3111-3132 03031-3111-3133 03031-3101-3132 03031-3101-3133	• • • • • • • • •	03031-3111-1132 03031-3111-1133 03031-3101-1132 03031-3101-1133	• • • • • • • • •																																						
																																				8	Gage Sensor Module⁽²⁾ 0-40/4000 psig, Range 4 1/4-18 NPT Female 1/4-18 NPT Female 1/2-14 NPT Female 1/2-14 NPT Female G1/2A DIN 16288 Male 1/4-18 NPT Female 1/4-18 NPT Female 1/2-14 NPT Female 1/2-14 NPT Female	316L SST <i>Hastelloy C</i> 316L SST <i>Hastelloy C</i> 316L SST	Aluminum Aluminum Aluminum Aluminum Aluminum	03031-3112-3142 03031-3112-3143 03031-3102-3142 03031-3102-3143 03031-3132-3142	• • • • •	03031-3112-1142 03031-3112-1143 03031-3102-1142 03031-3102-1143 03031-3132-1142	• • • • •		
																316L SST <i>Hastelloy C</i> 316L SST <i>Hastelloy C</i>	SST SST SST SST	03031-3111-3142 03031-3111-3143 03031-3101-3142 03031-3101-3143	• • • • • • • • •	03031-3111-1142 03031-3111-1143 03031-3101-1142 03031-3101-1143	• • • • • • • • •																								
																																												8	Absolute Sensor Module⁽²⁾ 0-0.3/30 psig, Range 1 1/4-18 NPT Female 1/4-18 NPT Female 1/2-14 NPT Female 1/2-14 NPT Female G1/2A DIN 16288 Male 1/4-18 NPT Female 1/4-18 NPT Female 1/2-14 NPT Female 1/2-14 NPT Female
																														316L SST <i>Hastelloy C</i> 316L SST <i>Hastelloy C</i>	SST SST SST SST	03031-3111-3012 03031-3111-3013 03031-3101-3012 03031-3101-3013	• • • • • • • • •	03031-3111-1012 03031-3111-1013 03031-3101-1012 03031-3101-1013	• • • • • • • • •										

Rosemount Model 3051 Transmitter for Flow, Level, and Pressure Measurement

TABLE 5-17. (continued) Model 3051T Gage and Absolute Pressure Transmitters.


		Silicone Fill				Inert Fill			
Item No.	Model 3051T Sensor Modules ⁽¹⁾	Isolating Diaphragm	Housing Material	Part Number		Part Number			
8	Absolute Sensor Module⁽²⁾ 0-1.5/150 psig, Range 2 1/4-18 NPT Female 1/4-18 NPT Female 1/2-14 NPT Female 1/2-14 NPT Female G 1/2A DIN 16288 Male 1/4-18 NPT Female 1/4-18 NPT Female 1/2-14 NPT Female 1/2-14 NPT Female	316L SST	Aluminum	03031-3112-3022	•	03031-3112-1022	•		
		Hastelloy C	Aluminum	03031-3112-3023	•	03031-3112-1023	•		
		316L SST	Aluminum	03031-3102-3022	•	03031-3102-1022	•		
		Hastelloy C	Aluminum	03031-3102-3023	•	03031-3102-1023	•		
		316L SST	Aluminum	03031-3132-3022	•	03031-3132-1022	•		
		316L SST	SST	03031-3111-3022	•	03031-3111-1022	•		
		Hastelloy C	SST	03031-3111-3023	•	03031-3111-1023	•		
		316L SST	SST	03031-3101-3022	•	03031-3101-1022	•		
		Hastelloy C	SST	03031-3101-3023	•	03031-3101-1023	•		
		8	Absolute Sensor Module⁽²⁾ 0-8/800 psig, Range 3 1/4-18 NPT Female 1/4-18 NPT Female 1/2-14 NPT Female 1/2-14 NPT Female G 1/2A DIN 16288 Male 1/4-18 NPT Female 1/4-18 NPT Female 1/2-14 NPT Female 1/2-14 NPT Female	316L SST	Aluminum	03031-3112-3032	•	03031-3112-1032	•
				Hastelloy C	Aluminum	03031-3112-3033	•	03031-3112-1033	•
				316L SST	Aluminum	03031-3102-3032	•	03031-3102-1032	•
Hastelloy C	Aluminum			03031-3102-3033	•	03031-3102-1033	•		
316L SST	Aluminum			03031-3132-3032	•	03031-3132-1032	•		
316L SST	SST			03031-3111-3032	•	03031-3111-1032	•		
Hastelloy C	SST			03031-3111-3033	•	03031-3111-1033	•		
316L SST	SST			03031-3101-3032	•	03031-3101-1032	•		
Hastelloy C	SST			03031-3101-3033	•	03031-3101-1033	•		
8	Absolute Sensor Module⁽²⁾ 0-40/4000 psig, Range 4 1/4-18 NPT Female 1/4-18 NPT Female 1/2-14 NPT Female 1/2-14 NPT Female G 1/2A DIN 16288 Male 1/4-18 NPT Female 1/4-18 NPT Female 1/2-14 NPT Female 1/2-14 NPT Female			316L SST	Aluminum	03031-3112-3042	•	03031-3112-1042	•
				Hastelloy C	Aluminum	03031-3112-3043	•	03031-3112-1043	•
				316L SST	Aluminum	03031-3102-3042	•	03031-3102-1042	•
		Hastelloy C	Aluminum	03031-3102-3043	•	03031-3102-1043	•		
		316L SST	Aluminum	03031-3132-3042	•	03031-3132-1042	•		
		316L SST	SST	03031-3111-3042	•	03031-3111-1042	•		
		Hastelloy C	SST	03031-3111-3043	•	03031-3111-1043	•		
		316L SST	SST	03031-3101-3042	•	03031-3101-1042	•		
		Hastelloy C	SST	03031-3101-3043	•	03031-3101-1043	•		
		8	Absolute Sensor Module⁽²⁾ 0-2000/10000 psig, Range 5 1/4-18 NPT Female 1/4-18 NPT Female 1/2-14 NPT Female 1/2-14 NPT Female G 1/2A DIN 16288 Male 1/4-18 NPT Female 1/4-18 NPT Female 1/2-14 NPT Female 1/2-14 NPT Female	316L SST	Aluminum	03031-3112-3052	•	03031-3112-1052	•
				Hastelloy C	Aluminum	03031-3112-3053	•	03031-3112-1053	•
				316L SST	Aluminum	03031-3102-3052	•	03031-3102-1052	•
Hastelloy C	Aluminum			03031-3102-3053	•	03031-3102-1053	•		
316L SST	Aluminum			03031-3122-3052	•	03031-3122-1052	•		
316L SST	SST			03031-3111-3052	•	03031-3111-1052	•		
Hastelloy C	SST			03031-3111-3053	•	03031-3111-1053	•		
316L SST	SST			03031-3101-3052	•	03031-3101-1052	•		
Hastelloy C	SST			03031-3121-3053	•	03031-3121-1053	•		

(1) For Model 3051TG Range 5 spare module, order absolute configuration and perform zero trim for gage calibrations.

(2) One spare part is recommended for every 50 transmitters.

TABLE 5-18. Model 3051C Differential, Gage, Absolute, and Liquid Level Transmitters.

Item No.	Part Description	Part Number						
Electronics Board—Assembly Required			CD	CG	CA	L	H	T
6	Improved Standard (4–20 mA/HART protocol) ⁽¹⁾	03031-0001-0002	•	•	•	•	•	•
6	Improved NAMUR Compliant (4–20 mA/HART protocol) ⁽¹⁾	03031-0001-0003	•	•	•	•	•	•
6	Low Power (1–5/0.8–3.2 Volts) ⁽¹⁾	03031-0001-1001	•	•	•	•	•	•

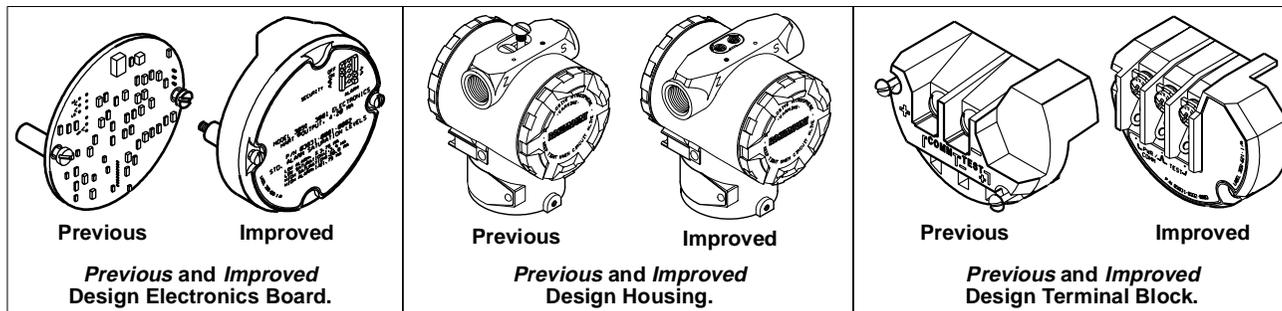

Electronics Board, Housing, and Terminal Block, Previous and Improved Design.

3051-OVERG01A, N01A, E01A

Rosemount Model 3051 Transmitter for Flow, Level, and Pressure Measurement

TABLE 5-18. (continued) Model 3051C Differential, Gage, Absolute, and Liquid Level Transmitters.

Item No.	Part Description	Part Number	CD	CG	CA	L	H	T
Electronics Housing, Covers, Terminal Block								
<i>NOTE: See drawings below for Previous and Improved Electronics Boards, Housings, and Terminal Blocks. For information on ordering "Previous Design" spare parts, contact your local Rosemount office. In the U.S., call the Response Center at 1-800-654-7768.</i>								
Improved Standard (4–20 mA) Aluminum Housing								
4	Electronics Housing without Terminal Block							
	½–14 NPT conduit, Includes RFI Filters	03031-0635-0001	•	•	•	•	•	•
	M20×1.5 (CM20) conduit, Includes RFI filters	03031-0635-0002	•	•	•	•	•	•
	PG 13.5 conduit, Includes RFI Filters	03031-0635-0003	•	•	•	•	•	•
	G½ conduit, Includes RFI Filters	03031-0635-0004	•	•	•	•	•	•
1	Electronics Cover (Includes wiring label) ⁽²⁾	03031-0292-0001	•	•	•	•	•	•
3	Standard Terminal Block Assembly ⁽¹⁾	03031-0332-0003	•	•	•	•	•	•
3	Transient Terminal Block Assy. (Option T1) ⁽²⁾	03031-0332-0004	•	•	•	•	•	•
5	Local Zero and Span Kit ⁽¹⁾	03031-0293-0002	•	•	•	•	•	•
	External Ground Assembly (Option V5) ⁽¹⁾	03031-0398-0001	•	•	•	•	•	•
Improved Standard (4–20 mA) 316 SST Housing								
4	Electronics Housing without Terminal Block							
	½–14 NPT conduit, Includes RFI Filters	03031-0635-0041	•	•	•	•	•	•
	M20×1.5 (CM20) conduit, Includes RFI Filters	03031-0635-0042	•	•	•	•	•	•
	PG 13.5 conduit, Includes RFI Filters	03031-0635-0043	•	•	•	•	•	•
1	Electronics Cover (Includes wiring label) ⁽²⁾	03031-0292-0002	•	•	•	•	•	•
3	Standard Terminal Block Assembly ⁽¹⁾	03031-0332-0003	•	•	•	•	•	•
3	Transient Terminal Block Assy. (Option T1) ⁽²⁾	03031-0332-0004	•	•	•	•	•	•
5	Local Zero and Span Kit ⁽¹⁾	03031-0293-0002	•	•	•	•	•	•
	External Ground Assembly (Option V5) ⁽¹⁾	03031-0398-0001	•	•	•	•	•	•
Improved Low Power Aluminum Housing								
4	Electronics Housing without Terminal Block							
	½–14 NPT conduit, Includes RFI Filters	03031-0635-0101	•	•	•	•	•	•
1	Electronics Cover (Includes wiring label) ⁽²⁾	03031-0292-0001	•	•	•	•	•	•
3	Low Power Terminal Block Assembly ⁽¹⁾	03031-0332-1001	•	•	•	•	•	•
3	Low Power Transient Terminal Block Assembly (Option T1) ⁽²⁾	03031-0332-1002	•	•	•	•	•	•
5	Local Zero and Span Kit ⁽¹⁾	03031-0293-0002	•	•	•	•	•	•
	External Ground Assembly (Option V5) ⁽¹⁾	03031-0398-0001	•	•	•	•	•	•
Improved Low Power 316 SST Housing								
4	Electronics Housing without Terminal Block							
	½–14 NPT conduit, Includes RFI Filters	03031-0635-0141	•	•	•	•	•	•
1	Electronics Cover (Includes wiring label) ⁽²⁾	03031-0292-0002	•	•	•	•	•	•
3	Low Power Terminal Block Assembly ⁽¹⁾	03031-0332-1001	•	•	•	•	•	•
3	Low Power Transient Terminal Block Assembly (Option T1) ⁽²⁾	03031-0332-1002	•	•	•	•	•	•
5	Local Zero and Span Kit ⁽¹⁾	03031-0293-0002	•	•	•	•	•	•
	External Ground Assembly (Option V5) ⁽¹⁾	03031-0398-0001	•	•	•	•	•	•

TABLE 5-18. (continued) Model 3051C Differential, Gage, Absolute, and Liquid Level Transmitters.

Item No.	Part Description	Part Number	CD	CG	CA	L	H	T
Flanges			CD	CG	CA	L	H	T
11	Process Flanges							
	Differential Coplanar Flange							
	Nickel-plated Carbon Steel	03031-0388-0025	•	—	—	—	—	—
	316 SST	03031-0388-0022	•	—	—	—	—	—
11	Gage/Absolute Coplanar Flange							
	Nickel-plated Carbon Steel	03031-0388-1025	—	•	•	—	—	—
	316 SST	03031-0388-1022	—	•	•	—	—	—
	Hastelloy C	03031-0388-1023	—	•	•	—	—	—
11	Monel	03031-0388-1024	—	•	•	—	—	—
	Coplanar Flange Alignment Screw	03031-0309-0001	•	•	•	—	—	—
	(package of 2 screws)							
	Traditional Flange							
35	316 SST	03031-0320-0002	•	•	•	—	—	—
	Hastelloy C	03031-0320-0003	•	•	•	—	—	—
	Monel	03031-0320-0004	•	•	•	—	—	—
22	Level Flange, Vertical Mount							
	2 in., Class 150, SST	03031-0393-0221	•	•	•	—	—	—
	2 in., Class 300, SST	03031-0393-0222	•	•	•	—	—	—
	3 in., Class 150, SST	03031-0393-0231	•	•	•	—	—	—
	3 in., Class 300, SST	03031-0393-0232	•	•	•	—	—	—
	DIN, DN 50, PN 40	03031-0393-1002	•	•	•	—	—	—
35	DIN, DN 80, PN 40	03031-0393-1012	•	•	•	—	—	—
	3051H Flanges							
35	Process Flange	02051-0072-0002	—	—	—	—	•	—
	Blank Flange (GP Low Side)	02051-0236-0002	—	—	—	—	•	—
Flange Adapter Union			CD	CG	CA	L	H	T
15	Nickel-plated Carbon Steel	02024-0069-0005	•	•	•	—	—	—
	316 SST	02024-0069-0002	•	•	•	—	—	—
	Hastelloy C	02024-0069-0003	•	•	•	—	—	—
	Monel	02024-0069-0004	•	•	•	—	—	—
Drain/Vent Valve Kits			CD	CG	CA	L	H	T
9	Differential Drain/Vent Kits⁽¹⁾							
	316 SST Stem and Seat Kit	01151-0028-0022	•	—	—	—	•	—
	Hastelloy C Stem and Seat Kit	01151-0028-0023	•	—	—	—	•	—
	Monel Stem and Seat Kit	01151-0028-0024	•	—	—	—	•	—
	316 SST Ceramic Ball Drain/Vent Kit	01151-0028-0122	•	—	—	—	•	—
	Hastelloy C Ceramic Ball Drain/Vent Kit	01151-0028-0123	•	—	—	—	•	—
9	Gage/Absolute Drain/Vent Kits⁽¹⁾							
	316 SST Stem and Seat Kit	01151-0028-0012	—	•	•	•	•	—
	Hastelloy C Stem and Seat Kit	01151-0028-0013	—	•	•	•	•	—
	Monel Stem and Seat Kit	01151-0028-0014	—	•	•	•	•	—
	316 SST Ceramic Ball Drain/Vent Kit	01151-0028-0112	—	•	•	•	•	—
	Hastelloy C Ceramic Ball Drain/Vent Kit	01151-0028-0113	—	•	•	•	•	—
38	Monel Ceramic Ball Drain/Vent Kit	01151-0028-0114	—	•	•	•	•	—
	(Each kit contains parts for one transmitter.)							
	O-Ring Packages							
	Electronic Housing, Cover (Std. and Meter) ⁽¹⁾	03031-0232-0001	•	•	•	•	•	•
7	Electronics Housing, Module ⁽¹⁾	03031-0233-0001	•	•	•	•	•	•
10	Process Flange, Glass-filled Teflon ⁽¹⁾	03031-0234-0001	•	•	•	—	—	—
	Process Flange, Graphite-filled Teflon ⁽¹⁾	03031-0234-0002	•	•	•	—	—	—
12	Flange Adapter, Glass-filled Teflon ⁽¹⁾	03031-0242-0001	•	•	•	—	—	—
	Flange Adapter, Graphite-filled Teflon ⁽¹⁾	03031-0242-0002	•	•	•	—	—	—
38	3051H Process Flange, TFE	02051-0167-0001	—	—	—	—	•	—

Rosemount Model 3051 Transmitter for Flow, Level, and Pressure Measurement

TABLE 5-18. (continued) Model 3051C Differential, Gage, Absolute, and Liquid Level Transmitters.

Item No.	Part Description	Part Number						
Mounting Brackets			CD	CG	CA	L	H	T
	Coplanar Flange Bracket Kit B4 Bracket, SST, 2-in. Pipe Mount, SST Bolts	03031-0189-0003	•	•	•	—	—	—
	3051T Bracket Kit B4 Bracket, SST, 2-in. Pipe Mount, SST Bolts	02088-0071-0001	—	—	—	—	—	•
	Traditional Flange Bracket Kits							
	B1 Bracket, 2-in. Pipe Mount, CS Bolts	03031-0313-0001	•	•	•	—	—	—
	B2 Bracket, Panel Mount, CS Bolts	03031-0313-0002	•	•	•	—	—	—
	B3 Flat Bracket for 2-in. Pipe Mount, CS Bolts	03031-0313-0003	•	•	•	—	—	—
	B7 (B1 Style Bracket with SST Bolts)	03031-0313-0007	•	•	•	—	—	—
	B8 (B2 Style Bracket with SST Bolts)	03031-0313-0008	•	•	•	—	—	—
	B9 (B3 Style Bracket with SST Bolts)	03031-0313-0009	•	•	•	—	—	—
	BA (SST B1 Bracket with SST Bolts)	03031-0313-0011	•	•	•	—	—	—
	BC (SST B3 Bracket with SST Bolts)	03031-0313-0013	•	•	•	—	—	—
	3051H Bracket Kits							
	B5 Universal Bracket for 2-in. Pipe and Panel Mount, CS Bolts	03051-1081-0001	—	—	—	—	•	—
	B6 Universal Bracket for 2-in. Pipe or Panel Mount, SST Bolts	03051-1081-0002	—	—	—	—	•	—

TABLE 5-18. (continued) Model 3051C Differential, Gage, Absolute, and Liquid Level Transmitters.


Item No.	Part Description	Part Number						
			CD	CG	CA	L	H	T
Bolt Kits								
25	Coplanar Flange							
	Flange Bolt Kit {44 mm (1.75 in.)}							
	Carbon Steel (set of 4)	03031-0312-0001	•	•	•	—	—	—
	316 SST (set of 4)	03031-0312-0002	•	•	•	—	—	—
	ANSI/ASTM-A-193-B7M	03031-0312-0003	•	•	•	—	—	—
	Monel	03031-0312-0004	•	•	•	—	—	—
26	Flange/Adapter Bolt Kit {73 mm (2.88 in.)}							
	Carbon Steel (set of 4)	03031-0306-0001	•	•	•	—	—	—
	316 SST (set of 4)	03031-0306-0002	•	•	•	—	—	—
	ANSI/ASTM-A-193-B7M	03031-0306-0003	•	•	•	—	—	—
	Monel	03031-0306-0004	•	•	•	—	—	—
27	Manifold/Flange Kit {57 mm (2.25 in.)}							
	Carbon Steel (set of 4)	03031-0311-0001	•	—	—	—	—	—
	316 SST (set of 4)	03031-0311-0002	•	—	—	—	—	—
	ANSI/ASTM-A-193-B7M	03031-0311-0003	•	—	—	—	—	—
	Monel	03031-0311-0004	•	—	—	—	—	—
28	Traditional Flange							
	Differential Flange and Adapter Bolt Kit {44 mm (1.75 in.)}							
	Carbon Steel (set of 8)	03031-0307-0001	•	—	—	—	—	—
	316 SST (set of 8)	03031-0307-0002	•	—	—	—	—	—
	ANSI/ASTM-A-193-B7M	03031-0307-0003	•	—	—	—	—	—
	Monel	03031-0307-0004	•	—	—	—	—	—
	Gage/Absolute Flange and Adapter Bolt Kit							
	Carbon Steel (set of 6)	03031-0307-1001	—	•	•	—	—	—
	316 SST (set of 6)	03031-0307-1002	—	•	•	—	—	—
	ANSI/ASTM-A-193-B7M	03031-0307-1003	—	•	•	—	—	—
	Monel	03031-0307-1004	—	•	•	—	—	—
	Manifold/Traditional Flange Bolts		Use Bolts Supplied with Anderson Greenwood Manifold					
	Carbon Steel		Use Bolts Supplied with Anderson Greenwood Manifold					
	316 SST		Use Bolts Supplied with Anderson Greenwood Manifold					
23	Level Flange, Vertical Mount							
	Flange Bolt Kit							
24	Carbon Steel (set of 4)	03031-0395-0001	•	•	•	—	—	—
	316 SST (set of 4)	03031-0395-0002	•	•	•	—	—	—
	(Each kit contains bolts for one transmitter.)							
36	3051H Flange							
	Process Flange Bolt Kit, Carbon Steel	02051-0164-0001	—	—	—	—	•	—
	Flange Bolt (set of 4)							
37	Flange Nut (set of 4)							
	Adapter Bolts (set of 4)							
36	Process Flange Bolt Kit, 316 SST	02051-0164-0002	—	—	—	—	•	—
	Bolt for Process Flange (set of 4)							
37	Nut for Process Flange (set of 4)							
	Adapter Bolts (set of 4)							

(1) One spare part is recommended for every 25 transmitters.


(2) One spare part is recommended for every 50 transmitters

TABLE 5-19. Indicating Meter Option

Item No.	Part Description	Part Number	CD	CG	CA	L	H	T
Meter for Improved Aluminum Housing			CD	CG	CA	L	H	T
	<i>Meter Kit</i>	03031-0193-0101	•	•	•	•	•	•
30	Meter Display							
31	Captive Mounting Hardware							
32	10-pin Interconnection Header							
33	Cover Assembly							
	<i>Meter Hardware Only</i>	03031-0193-0103	•	•	•	•	•	•
30	Meter Display							
31	Captive Mounting Hardware							
32	10-pin Interconnection Header							
	<i>Cover Assembly Kit</i>	03031-0193-0002	•	•	•	•	•	•
Meter for Improved 316 SST Housing			CD	CG	CA	L	H	T
	<i>Meter Kit</i> ⁽¹⁾	03031-0193-0111	•	•	•	•	•	•
30	Meter Display							
31	Captive Mounting Hardware							
32	10-pin Interconnection Header							
33	Cover Assembly							
	<i>Meter Hardware Only</i>	03031-0193-0103	•	•	•	•	•	•
30	Meter Display							
31	Captive Mounting Hardware							
32	10-pin Interconnection Header							
	<i>Cover Assembly Kit</i>	03031-0193-0012	•	•	•	•	•	•
Meter for Previous Aluminum Housing			CD	CG	CA	L	H	T
30–33	<i>Previous Meter Kit</i> ⁽¹⁾	03031-0193-0001	•	•	•	•	•	•
<i>NOTE: Previous Meter Kit includes meter display, captive mounting hardware, 6-pin interconnection header, and cover assembly.</i>								
	<i>Improved Kit for Previous Aluminum Housing</i> ⁽¹⁾	03031-0193-1101	•	•	•	•	•	•
30	Meter Display							
31	Captive Mounting Hardware							
32	10-pin Interconnection Header							
33	Cover Assembly							
30–32	<i>Previous Meter Hardware Only</i> ⁽¹⁾	03031-0193-0003	•	•	•	•	•	•
<i>NOTE: Previous Meter Hardware includes meter display, captive mounting hardware, and 6-pin interconnection header only.</i>								
	<i>Improved Meter for Previous Housing</i>	03031-0193-1103	•	•	•	•	•	•
30	Meter Display							
31	Captive Mounting Hardware							
32	10-pin Interconnection Header							
	<i>Cover Assembly Kit</i>	03031-0193-0002	•	•	•	•	•	•

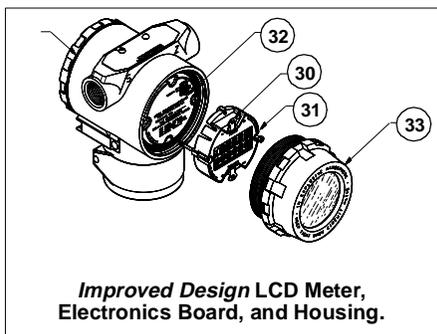

3051-3031A05A

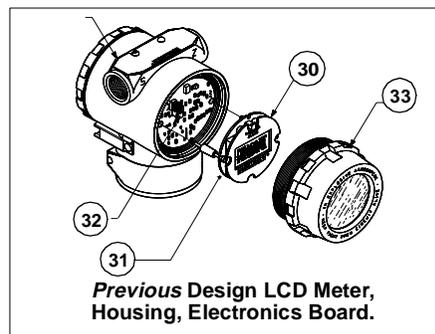

3051-3031B05A

LCD Meter and Housing Exploded Views, Improved and Previous Design.

TABLE 5-19. Indicating Meter Option

Item No.	Part Description	Part Number	CD	CG	CA	L	H	T
Meter for Previous 316 SST Housing								
30-33	Previous Meter Kit ⁽¹⁾	03031-0193-0011	•	•	•	•	•	•
<i>NOTE: Previous Meter Kit includes meter display, captive mounting hardware, 6-pin interconnection header, and cover assembly.</i>								
30	Improved Kit for Previous SST Housing ⁽¹⁾	03031-0193-1111	•	•	•	•	•	•
31	Meter Display							
32	Captive Mounting Hardware							
33	10-pin Interconnection Header							
33	Cover Assembly							
30-32	Previous Meter Hardware Only ⁽¹⁾	03031-0193-0003	•	•	•	•	•	•
<i>NOTE: Previous Meter Hardware includes meter display, captive mounting hardware, and 6-pin interconnection header only.</i>								
30	Improved Meter for Previous Housing ⁽¹⁾	03031-0193-1103	•	•	•	•	•	•
31	Meter Display							
32	Captive Mounting Hardware							
32	10-pin Interconnection Header							
	Cover Assembly Kit	03031-0193-0012	•	•	•	•	•	•

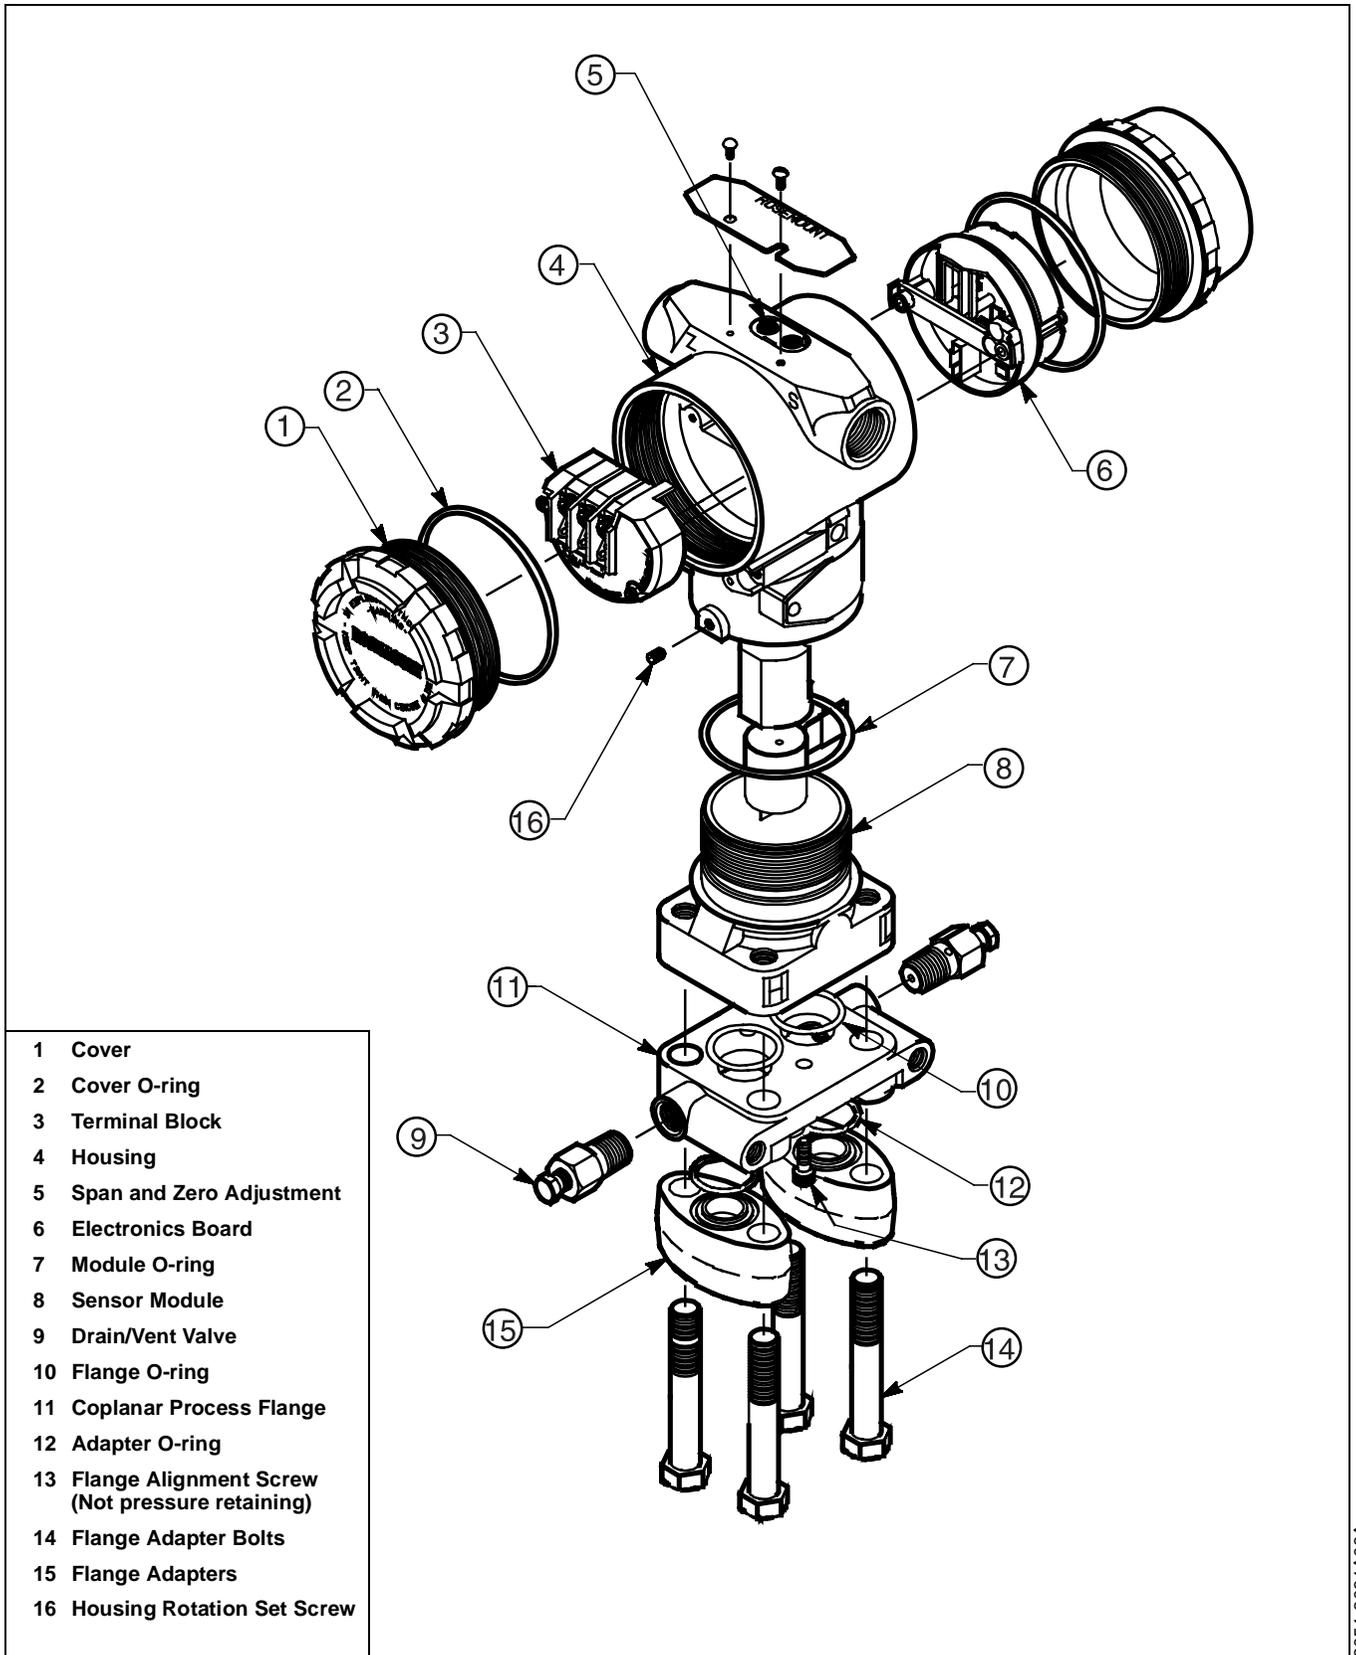


Figure 5-2. Model 3051C Exploded View (with Coplanar Flange).

3051-3031A08A

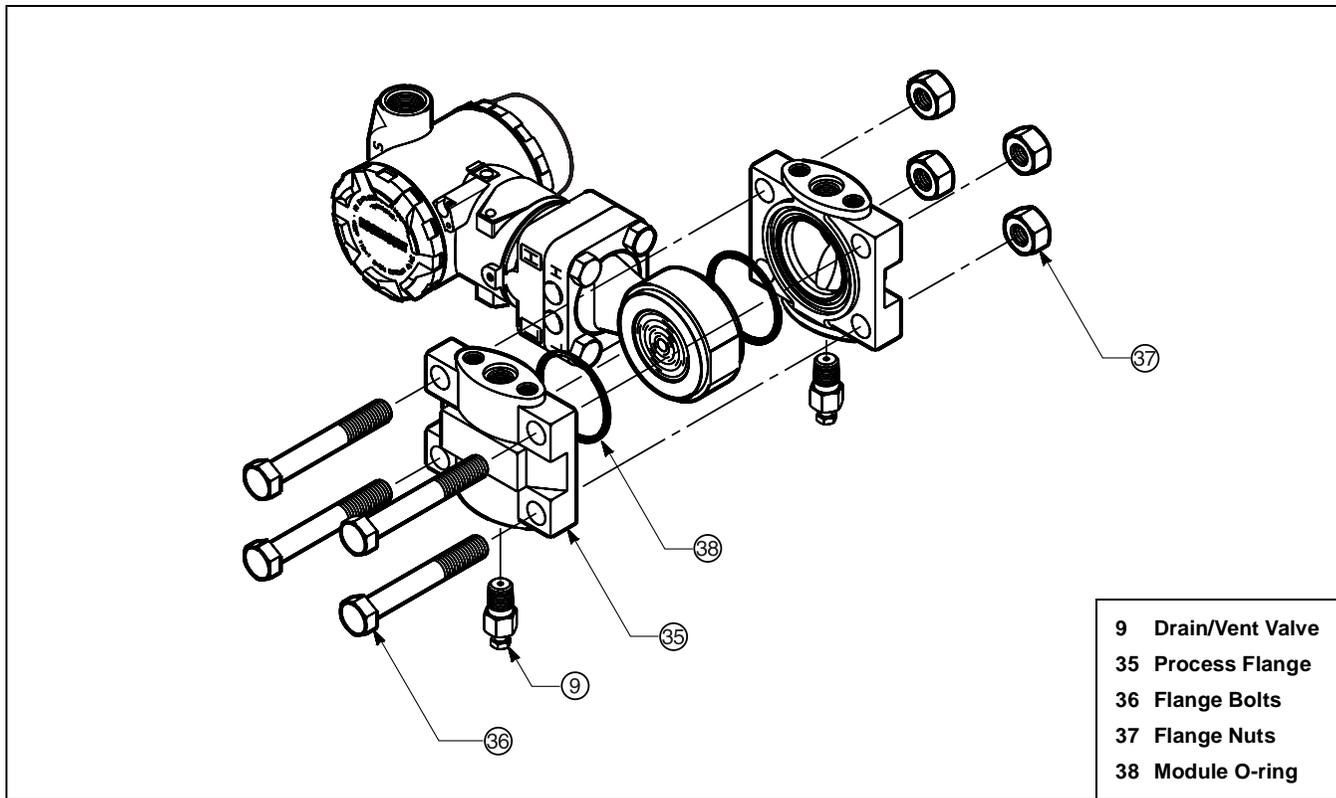


Figure 5-3. Model 3051H Exploded View.

3051-3051HB2A


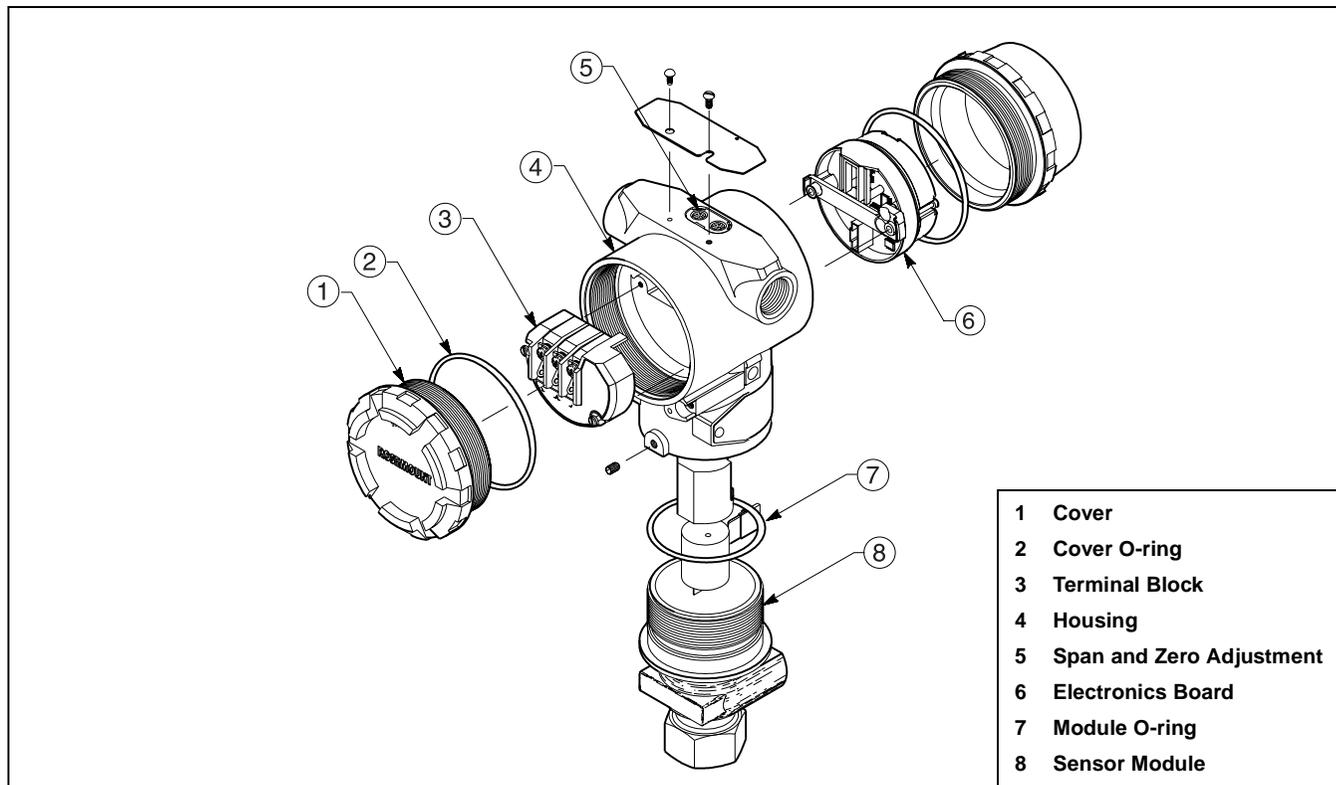



Figure 5-4. Model 3051T Exploded View.

3051-3051A08A

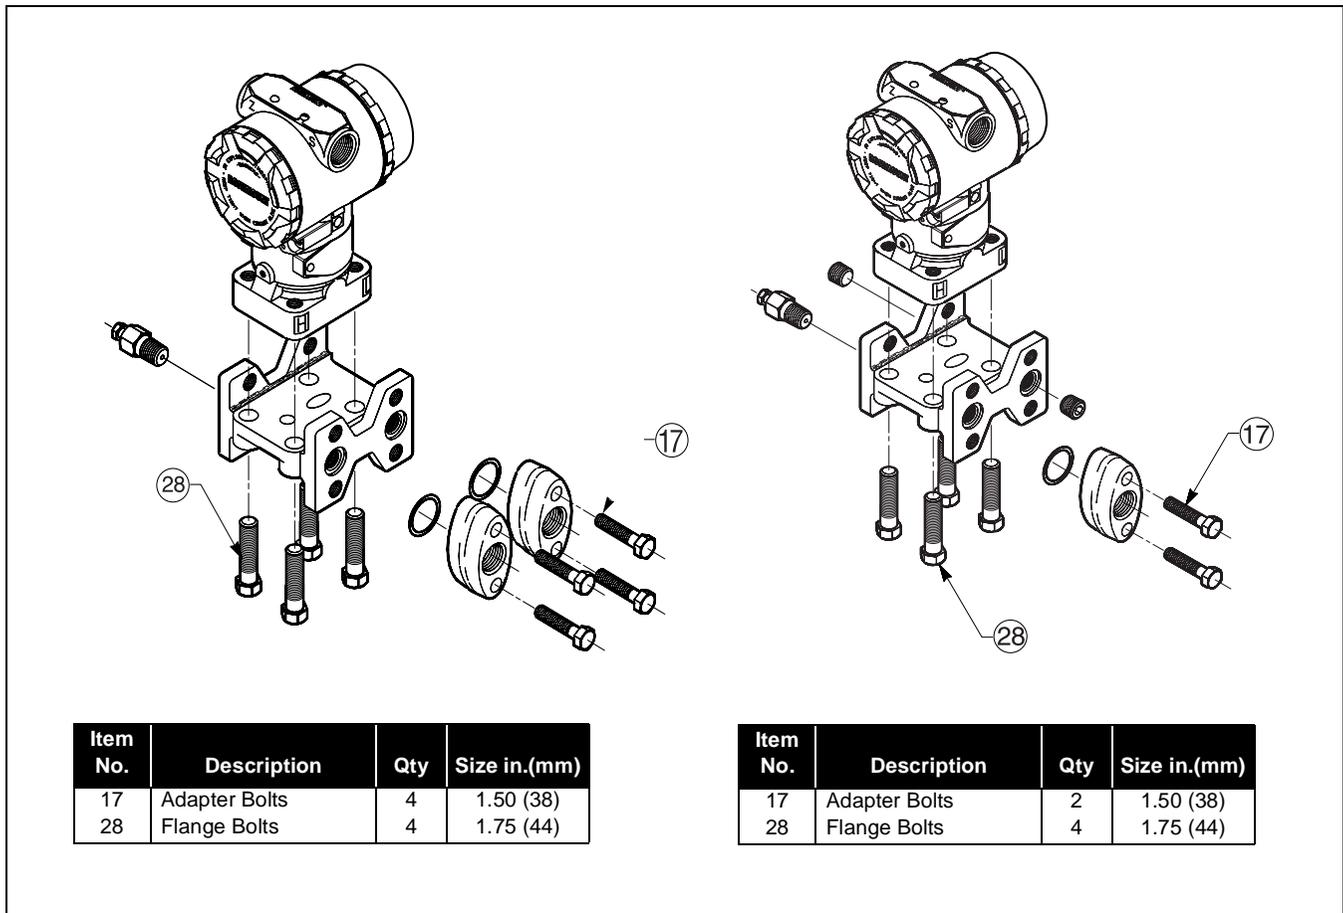

3051-3031B07M 3051-3051B07L

Figure 5-5. Traditional Flange Configuration.

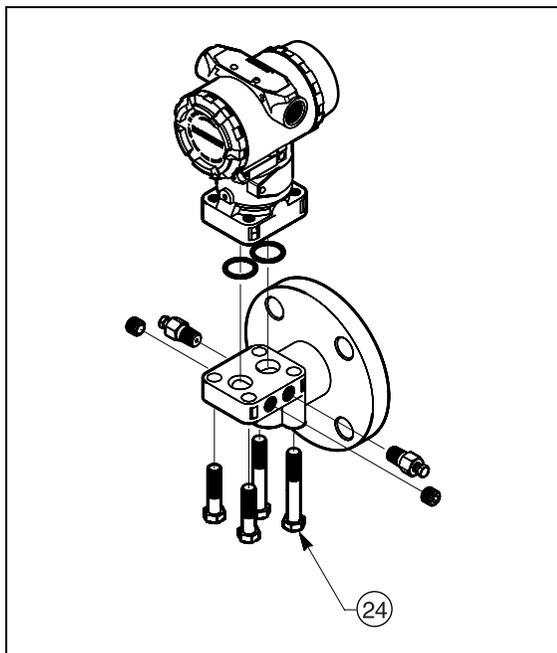


3001-3001A01G


Item No.	Description	Qty	Size in.(mm)
24	Flange Bolts	2	1.75 (44)
		2	2.875 (73)

Figure 5-6. Level Flange, Vertical Mount.


Transmitter with Coplanar Flange and Flange/Adapter Bolts

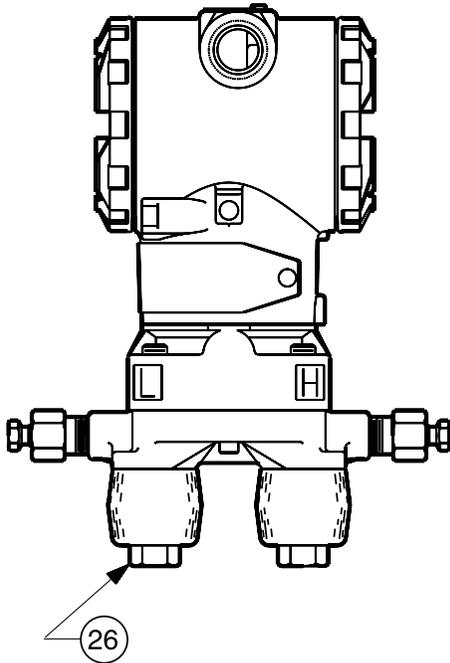

Transmitter with Coplanar Flange, 3-Valve Manifold, and Flange Adapters (Differential Version)

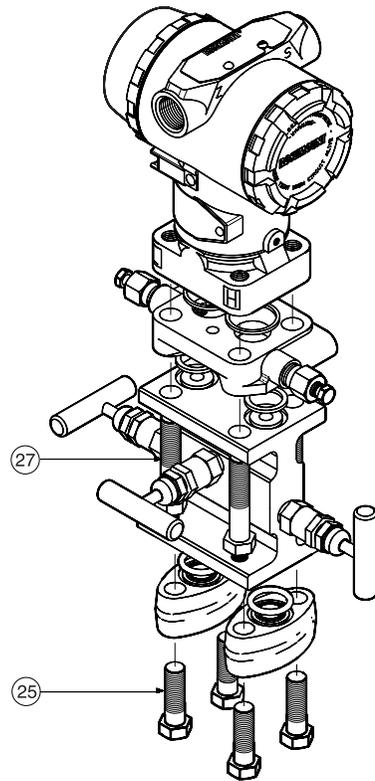

Transmitter with Coplanar Flange and Flange Bolts

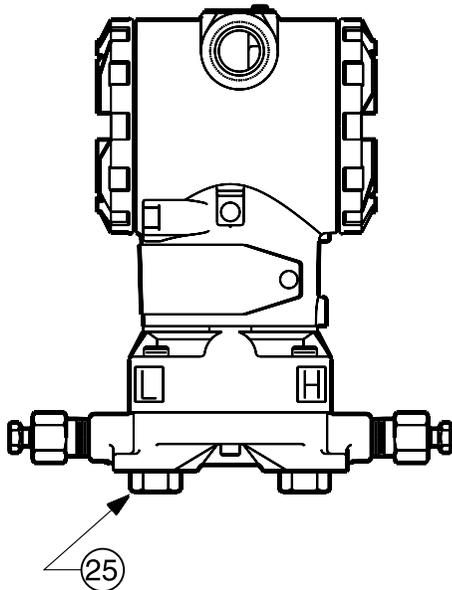


Item No.	Description	Qty	Size in.(mm)
25	Adapter Bolts	4	1.50 (38)
26	Flange/Adapter Bolts	4	2.88 (73)
27	Manifold/Flange Bolts	4	2.25 (57)

Item No.	Description	Qty	Size in.(mm)
25	Flange Bolts	4	1.75 (44)

Figure 5-7. Bolting Configurations for Coplanar Flange (Top–Differential/Bottom–Gage/Absolute).

3051-3031E06D 3051-305-3031A29P

3051-3031E06F

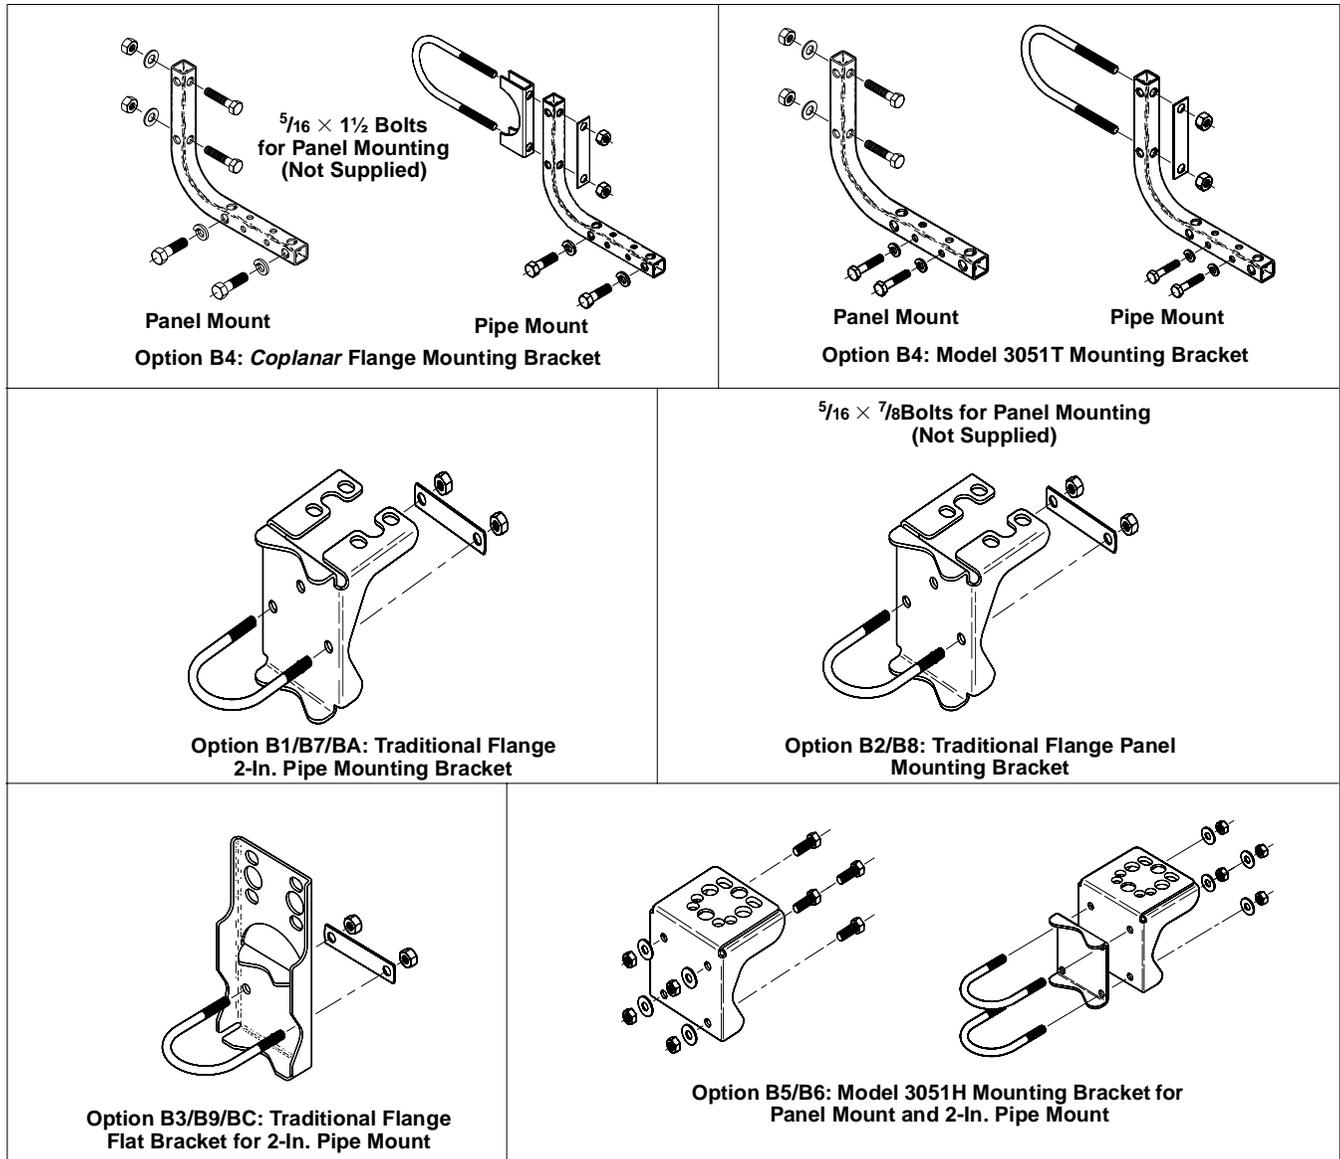

3051-3031-I04B, J04B, I04B, 2088-2088A04A, 3051-3031C19A, H19A, F19B, G19A

Figure 5-8. Mounting Bracket Kits.

Options

OVERVIEW

The options available with the Model 3051 can ease installation, improve the security of control systems, and simplify use. Included in this section is a description of LCD meter diagnostic messages.

SAFETY MESSAGES

Procedures and instructions in this section may require special precautions to ensure the safety of the personnel performing the operations. Information that raises potential safety issues is indicated by a warning symbol (⚠). Refer to the following safety messages before performing an operation preceded by this symbol.

Warnings (⚠)

⚠ WARNING

Explosions can result in death or serious injury.

- Do not remove the instrument cover in explosive environments when the circuit is alive.
- Both transmitter covers must be fully engaged to meet explosionproof requirements.
- Before connecting a communicator in an explosive atmosphere, make sure the instruments in the loop are installed in accordance with intrinsically safe or nonincendive field wiring practices.

⚠ WARNING

Electrical shock can result in death or serious injury.

- Avoid contact with the leads and terminals.

LOCAL ZERO AND SPAN ADJUSTMENT OPTIONS

The integral zero and span adjustments can be used for adjusting the analog output without the use of a HART communicator. Option Code J1 provides only external local zero adjustment. Option Code J3 excludes both the local zero and span adjustments.

The push-button span and zero adjustments are hidden by the certification label on top of the transmitter. Loosen the label screw and rotate the label counterclockwise to expose the adjustments.

Activating Local Zero and Span Adjustments

To activate local zero and span adjustments, locate the Z and S buttons on top of the transmitter. Press and hold either button for two seconds.

NOTE

On previous style Model 3051 transmitters, the zero and span settings are magnetic screws. To activate the previous style adjustments, unscrew the magnetic zero or span screw until it pops up. Leave it popped up for two seconds, then screw it back down.

Disabling Local Zero and Span Adjustments

The local zero and span adjustments on the Model 3051 can be controlled three ways:

1. **Transmitter Security Jumper.** Enabling the transmitter security jumper on the circuit board prevents all changes to the transmitter's configuration data. The security jumper prevents configuration changes from HART communicators and from the local zero and span adjustments. See "Transmitter Security" on page 2-4.
2. **Communicator Software Lockout Sequence.** The communicator software lockout sequence disables only the span and zero adjustments. Changes can still be made using the HART communicator. See "Local Zero and Span Adjustment Options" on page 6-1.
3. **Remove the Zero and Span Buttons.** To remove the local zero and span buttons, use a small screwdriver to remove the blue plastic cover plate securing the buttons to the transmitter housing. After removing the cover plate, the button assemblies—including buttons, springs, and magnets—will slide out. For future use, store the buttons separately to ensure that the magnets maintain their proper strength.

LCD METER

The LCD meter provides local indication of the output and abbreviated diagnostic messages governing transmitter operation. The meter is located on the electronics module side of the transmitter, maintaining direct access to the signal terminals. An extended cover is required to accommodate the meter.

The meter features a two-line display with five digits for reporting the process variable on the top line and six characters for displaying engineering units on the bottom line⁽¹⁾. The new LCD meter can also display flow and level scales. The meter uses both lines to display diagnostic messages. The meter can be configured to display the following information:

- engineering units
- percent of range
- user-configurable LCD scale⁽²⁾
- alternating between any two of the above

(1) Previous versions differ slightly.

(2) Not available on previous versions of the LCD meter or with low-power transmitters.

Custom Meter Configuration

The user-configurable scale is a feature that enables the LCD meter to display flow, level, or custom pressure units. The meter can be configured using a Model 275 HART Communicator (see Table A-1 on page A-3) or AMS.

The user-configurable scale feature can define:

- decimal point position
- upper range values
- lower range values
- engineering units
- transfer function

To configure the meter using AMS, click the **LOCAL DISPLAY** tab on the **CONFIGURATION PROPERTIES** screen. To configure the meter with a HART communicator, perform the following procedure:




1. Connect the communicator to the transmitter. Before connecting a communicator in an explosive atmosphere, make sure the instruments in the loop are installed according to intrinsically safe or nonincendive field wiring practices.
2. From the **ONLINE** screen, select *1 Device Setup, 3 Basic Setup, 7 Meter Options, 2 Custom Meter Setup*.
3. To specify decimal point position:
 - a. Select *1 Sel dec pt pos*. Choose the decimal point representation that will provide the most accurate output for your application. For example, when outputting between 0 and 75 GPM, choose *XX.XXX*.
 - b. Go to step 8.
4. To specify a custom upper range value:
 - a. Select *2 CM Upper Value*. Type the value that you want the transmitter to read at the 20 mA point.
 - b. Go to step 8.
5. To specify a custom lower range value:
 - a. Select *3 CM Lower Value*. Type the value that you want the transmitter to read at the 4 mA point.
 - b. Go to step 8.
6. To define custom units:
 - a. Select *4 CM Units*. Enter the custom units (five characters maximum) that you want the meter to display.
 - b. Go to step 8.
7. To choose the transmitter transfer function for the meter:
 - a. Select *5 CM xfer fnct*. Enter the transmitter transfer function for the meter. Select *sq root* to display flow units. The custom meter transfer function is independent of the analog output transfer function.
8. Select **F2 SEND** to upload the configuration to the transmitter.



See "Safety Messages" on page 6-1 for complete warning information.

FIGURE 6-1. Exploded View of the Model 3051 with Optional LCD Meter.

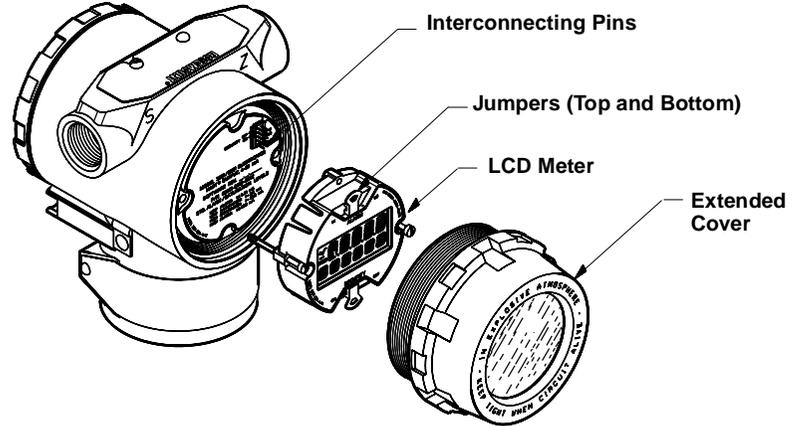

3051-A05E

Installing the Meter

For transmitters ordered with the LCD meter, the meter is shipped installed. Installing the meter on an existing Model 3051 transmitter requires a small instrument screwdriver and the meter kit.

The kits vary depending on the version of transmitter electronics. Examine the following numbers carefully to ensure you are installing the correct kit.

For Use with Shrouded Electronics Board

Meter Kits

Option M5: P/N 03031-0193-0101

Option M6: P/N 03031-0193-0111

For Use with Non-Shrouded Electronics Board

Meter Kits

Option M5: P/N 03031-0193-0001

Option M6: P/N 03031-0193-0011

The meter kit includes:

- one LCD meter assembly
- one extended cover with O-ring installed
- two nylon standoffs
- two captive screws
- one ten-pin interconnection header

Use the following procedure and Figure 6-1 to install the LCD meter. If the meter is an upgrade from a previous version, upgrade the electronics board before attempting to install the meter.

1. **IF** the transmitter is installed in a loop, **THEN** secure the loop and disconnect power.
-  2. Remove the transmitter cover opposite the field terminal side. Do not remove the instrument covers in explosive environments when the circuit is alive.
3. Remove the failure mode and alarm jumpers from the electronics module and insert them in their new positions above and below the meter readout on the meter assembly.

NOTE

On previous versions, remove only the alarm jumper.

4. Insert the interconnection header in the ten-pin socket exposed by removal of the jumpers. (Previous versions of the meter use a six-pin connector.)
5. Remove the two captive screws from the electronics module. To do so, loosen the screws to release the module, then pull out the screws until they are stopped by the captive thread inside of the circuit board standoffs. Continue loosening the screws and remove them.
6. If necessary, rotate the electronics housing up to 180 degrees (left or right) to improve field access or to better view the LCD meter. To rotate the housing:
 - a. Loosen the housing rotation set screw using a $\frac{9}{64}$ -in. hex wrench.
 - b. Turn the housing up to 180 degrees to the left or right of its original (as shipped) position. **Do not rotate the housing more than 180 degrees without first performing a disassembly procedure (see “Disassembly Procedures” on page 4-3). Over-rotation will sever the electrical connection between the sensor module and the electronics module.**
 - c. Retighten the housing rotation set screw.
7. Decide which direction to orient the meter. Insert the long meter screws into the two holes on the meter assembly that coincide with the holes on the electronics module. You can install the meter in 90-degree increments for easy viewing. Position one of the four connectors on the back of the meter assembly to accept the interconnection header.
8. Attach the meter assembly to the electronics module by threading the screws into the captive threads and attaching the meter assembly to the interconnection pins. Tighten the screws to secure the meter assembly and electronics board in place.
-  9. Attach and tighten the extended cover. Transmitter covers must be fully engaged to meet explosion proof requirements and to achieve the proper environmental seal.

Note the following LCD temperature limits:

 See “Safety Messages” on page 6-1 for complete warning information.

Operating: -4 to 175 °F (-20 to 80 °C)

Storage: -40 to 185 °F (-40 to 85 °C)

NOTE

Electronics board revision 5.3.163 or later (all shrouded designs) are able to verify alarm current levels. After replacing the transmitter electronics board, sensor module, or LCD meter, an alarm level test is recommended before returning the transmitter to service (see “Alarm Level Verification” on page 2-3).

FIGURE 6-2. Model 3051 with Optional LCD Meter.



Diagnostic Messages

In addition to the output, the LCD meter displays abbreviated operation, error, and warning messages for troubleshooting the transmitter. Messages appear according to their priority, with normal operating messages appearing last. To determine the cause of a message, use a Model 275 HART Communicator to further interrogate the transmitter. A description of each LCD diagnostic message follows.

Error

Error messages appear on the LCD meter display to inform you of serious problems effecting the operation of the transmitter. The meter displays an error message until the error condition is corrected, and the analog output is driven to the specified alarm level. No other transmitter information is displayed during an alarm condition.

FAIL⁽¹⁾

The transmitter CPU board and the sensor module are incompatible. If you encounter this message, contact Rosemount Customer Central at 800-999-9307 if you need assistance.

(1) For previous versions of the meter, FAIL MODULE and FAIL ELECT were also grouped into the FAIL message. When dealing with a FAIL message on a previous version meter, review the information in the FAIL MODULE and FAIL ELECT sections as well.

FAIL MODULE

The sensor module is disconnected or is malfunctioning. Verify that the sensor module ribbon cable is connected to the back of the electronics board. If the ribbon cable is properly connected, there is a problem within the sensor module. Possible sources of problems include:

- Pressure or temperature updates are not being received in the sensor module.
- A non-volatile memory fault that will effect transmitter operation has been detected in the module by the memory verification routine.

Some non-volatile memory faults are user-repairable. Use a Model 275 HART Communicator to diagnose the error and determine if it is repairable. Any error message that ends in “FACTORY” is not repairable. In cases of non user-repairable errors, you must replace the sensor module. See “**Disassembly Procedures**” on page 4-3 or contact Rosemount Customer Central at 800-999-9307 if you need assistance.

FAIL ELECT

The transmitter electronics board is malfunctioning due to an internal fault. Some of the FAIL ELECT errors are user-repairable. Use a Model 275 HART Communicator to diagnose the error and determine if it is repairable. Any error message that ends in “FACTORY” is not repairable. In cases of non user-repairable errors, you must replace the electronics board. See “Remove the Electronics Board” on page 4-4 or contact Rosemount Customer Central at 800-999-9307 if you need assistance.

FAIL CONFIG

A memory fault has been detected in a location that could effect transmitter operation, and is user-accessible. To correct this problem, use a Model 275 HART Communicator to interrogate and reconfigure the appropriate portion of the transmitter memory. Contact Rosemount Customer Central at 800-999-9307 if you need assistance.

Warnings

Warnings appear on the LCD meter display to alert you of user-repairable problems with the transmitter, or current transmitter operations. Warnings appear alternately with other transmitter information until the warning condition is corrected or the transmitter completes the operation that warrants the warning message.

NOTE

The warning messages on previous versions of the LCD meter may vary slightly from those listed here, but they represent the same warning.

PRESS LIMIT

The process variable read by the transmitter is outside of the transmitter’s range.

TEMP LIMIT

The secondary temperature variable read by the transmitter is outside of the transmitter’s range.

CURR FIXED

The transmitter is in multidrop mode. The analog output is not tracking pressure changes.

CURR SATURD

The pressure read by the module is outside of the specified range, and the analog output has been driven to saturation levels. See “Failure Mode Alarm” on page 2-2.

LOOP TEST

A loop test is in progress. During a loop test or 4–20 mA trim, the analog output is set to a fixed value. The meter display alternates between the current selected in milliamps and “LOOP TEST.”

XMTR INFO

A non-volatile memory fault has been detected in the transmitter memory by the memory verification routine. The memory fault is in a location containing transmitter information. To correct this problem, use a Model 275 HART Communicator to interrogate and reconfigure the appropriate portion of the transmitter memory. This warning does not effect the transmitter operation. Contact Rosemount Customer Central at 800-999-9307 if you need assistance.

Operation

Normal operation messages appear on the LCD meter to confirm actions or inform you of transmitter status. Operation messages are displayed with other transmitter information, and warrant no action to correct or alter the transmitter settings.

ZERO PASS

The zero value, set with the local zero adjustment button, has been accepted by the transmitter, and the output should change to 4 mA.

ZERO FAIL

The zero value, set with the local zero adjustment button, exceeds the maximum rangedown allowed for a particular range, or the pressure sensed by the transmitter exceeds the sensor limits.

SPAN PASS

The span value, set with the local span adjustment button, has been accepted by the transmitter, and the output should change to 20 mA.

SPAN FAIL

The span value, set with the local span adjustment button, exceeds the maximum rangedown allowed for a particular range, or the pressure sensed by the transmitter exceeds the sensor limits.

LOCAL DSBLD

This message appears during reranging with the integral zero and span buttons and indicates that the transmitter local zero and span adjustments have been disabled. The adjustments may have been disabled by the transmitter security jumper on the transmitter circuit board or through software commands from the Model 275. See “Transmitter Security” on page 2-4 for information on the position of the security jumper, and “Disabling Local Zero and Span Adjustments” on page 6-2 for information on the software lockout.

WRITE PROTECT

This message appears if you attempt to change the transmitter configuration data while the security jumper is in the **ON** position. See “Transmitter Security” on page 2-4 for more information about the security jumper.

MOUNTING BRACKETS

Optional mounting brackets available with the Model 3051 facilitate mounting to a 2-inch pipe or to a panel. The standard bracket (Option B4) for use with the Coplanar flange and the Model 3051T is stainless steel with stainless steel bolts. Figure 3-10 on page 3-14 shows bracket dimensions and mounting configurations for the B4 option.

Options B1–B3 and B7–B9 are sturdy, epoxy-polyester-painted brackets designed for use with the traditional flange. The B1–B3 brackets have carbon steel bolts, while the B7–B9 brackets have stainless steel bolts. The BA and BC brackets are stainless steel with stainless steel bolts. The B1/B7/BA and B3/B9/BC style brackets support 2-inch pipe mounting installations, and the B2/B8 style brackets support panel mounting. Figures 3-12 and 3-13 on page 3-16 show these optional mounting brackets.

When installing the transmitter to one of the optional mounting brackets, torque the bolts to 125 inch-pounds. See “Mounting” on page 3-9 for additional mounting considerations.

Custom Configuration (C1)

The C1 option allows the customer to specify the following data in addition to the standard configuration parameters in the software memory:

Descriptor	Message
Date	Damping
Remote Seal	Write Protect Jumper Setting
Burst Mode Configuration	Multidrop Configuration
Alarm Jumper Setting	Local Zero and Span Control
Custom Meter Display Configuration	

A Model 3051 Configuration Data Sheet (CDS) begins on page 6-15. Use the CDS to record configuration data and options.

Level Flange (F1, F2, G1, G2, FA, FB, FC, and FD)


This option provides a flange for the Model 3051C that converts it to a horizontal mount level transmitter or a vertical mount level transmitter. A vented fitting on the low pressure side of the flange makes it suitable for use with a gage pressure transmitter. The fitting can be removed and replaced with impulse piping or wet leg connections when a low pressure reference is required for differential pressure measurements.

Vertical Mount (FA, FB, FC, FD, FP, and FQ)

Figure 6-3 shows the vertical mount level flange. Flanges are available in the sizes and ratings indicated by the following option codes:

Option	Description	Flange Rating
FA	316 SST, 2 in., ANSI Class 150, Vertical Mount	275 psi at 100 °F
FB	316 SST, 2 in., ANSI Class 300, Vertical Mount	720 psi at 100 °F
FC	316 SST, 3 in., ANSI Class 150, Vertical Mount	275 psi at 100 °F
FD	316 SST, 3 in., ANSI Class 300, Vertical Mount	720 psi at 100 °F
FP	DIN Level Flange, SST, DN 50, PN 40, Vertical Mount	40 bar at 120 °C
FQ	DIN Level Flange, SST, DN 80, PN 40, Vertical Mount	40 bar at 120 °C

FIGURE 6-3. Vertical Mount Level Flange.

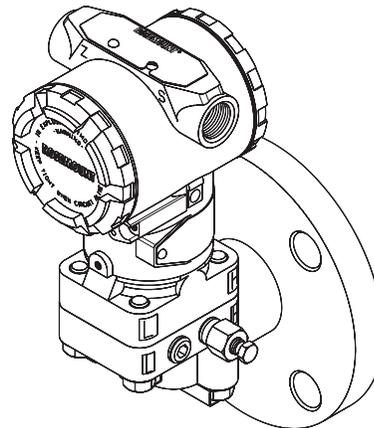

3001-3001A01A

Traditional Flange (H2, H3, H4, H7, HJ, HK, and HL)

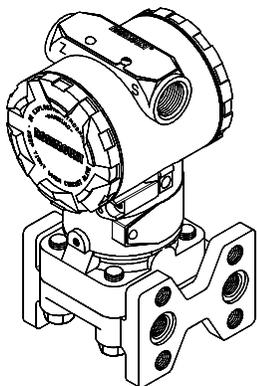
The traditional flange option converts the mounting configuration of the Model 3051 to one similar to traditional style transmitters. This allows the Model 3051 to replace traditional transmitters without changing existing manifolds, impulse piping, or bracket arrangements. The traditional flange also allows a higher process temperature at the process ports (300 °F [149 °C]) because of its ability to dissipate heat. Process ports on the traditional flange meet DIN STD. 19213 with 2.13 ± 0.008 in. (54 ± 0,203 mm) connection centers. Different traditional flange materials of construction are as follows:

TABLE 6-1. Traditional Flange Materials and Bolt Sizes.



Option Code	Flange Material	Drain/Vent Valve Material	Flange Adapter Material	Flange to Adapter Bolt Size Length/Diameter
H2	316 SST	SST	SST	7/16-in.
H3	Hastelloy C	Hastelloy C	Hastelloy C	7/16-in.
H4	Monel	Monel	Monel	7/16-in.
H7	316 SST	Hastelloy C	SST	7/16-in.
HJ	SST	SST	SST	7/16-in.
HK	SST	SST	N/A	10 mm
HL	SST	SST	N/A	12 mm

The traditional flange fits most existing mounting brackets. If a new bracket is required, use one of the bracket options described earlier. Figure 6-5 shows the traditional flange.

FIGURE 6-4. Traditional Flange.

TRADITIONAL FLANGE
AND MODEL 3051C

CONNECTION TO A MANIFOLD

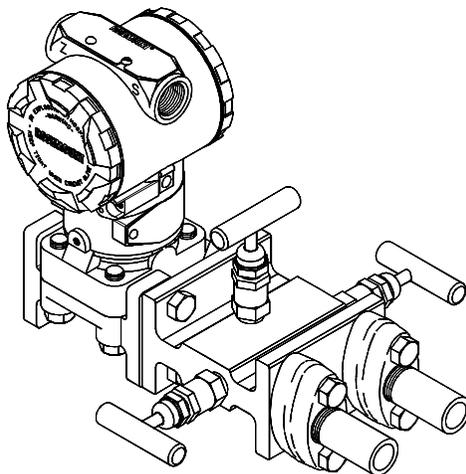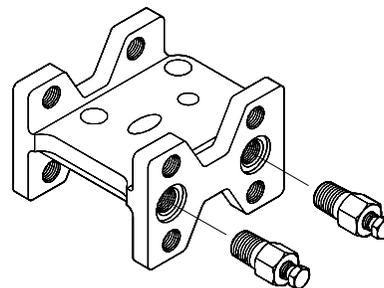TRADITIONAL FLANGE WITH
DRAIN/VENTS

3051-3031B07A, B07C, A35A

Figure 3-16 on page 3-20 shows the bolts used to mount the traditional flange to the transmitter. The $\frac{3}{4}$ -inch bolts supplied with the standard Anderson, Greenwood & Co. manifold (Rosemount Part No. 1151-0150-0001 or 1151-0150-0002) will fit the traditional flange and manifold. Bolts supplied with other manifolds may need a $\frac{7}{16}$ -inch washer to accommodate the extra length. The user should make sure the mounting bolt in the upper corner of the traditional flange does not push against the module. A clearance of at least $\frac{1}{16}$ -in. (4,2 mm) should be allowed. Install the manifold bolts as in Section 3: Installation.

Optional Flange and Adapter Bolts (L4, L5, and L6)

Option Codes L4, L5, and L6 replace the standard carbon steel flange and adapter bolts with alternative materials as described:

- L4:** Austenitic 316SST bolts
- L5:** ASTM-A-193-B7M bolts
- L6:** Monel bolts

Transient Protection Terminal Block (T1)

The transient protection terminal block option increases the Model 3051 Pressure Transmitter's ability to withstand electrical transients induced by lightning, welding, heavy electrical equipment, or switch gears. Model 3051 Pressure Transmitters, with integral transient protection installed, meet the standard performance specifications as outlined in this product manual. In addition, the transient protection circuitry meets IEEE Standard 587, Category B and IEEE Standard 472, Surge Withstand Capability.


Transient protection terminal blocks can be ordered as an option (Option Code T1), or as a spare part to retrofit existing Model 3051 transmitters in the field. The spare part number for the transient protection terminal block assembly is 03031-0332-0002.

NOTE

Installation of the transient protection terminal block does not provide transient protection unless the Model 3051 transmitter case is properly grounded. See page 3-22 for grounding information.

The transient protection terminal block option is not offered with Option Code I1 (BASEEFA/CENELEC Intrinsic Safety Certification).

FIGURE 6-5. Transient Protection Terminal Block (Option Code T1).

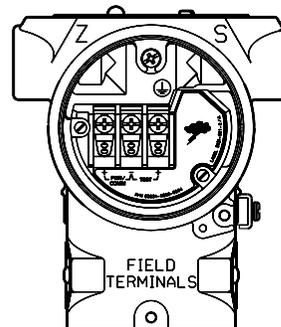

3051-F02A


Installation Procedure

Option Code T1 is shipped installed when ordered at the same time as the Model 3051. To install the transient protection terminal block on an existing transmitter, refer to “Remove the Terminal Block” on page 4-3 to remove the existing terminal block, and refer to “Install the Terminal Block” on page 4-8 to install the transient protection terminal block.

MODEL 305 AND 305 INTEGRAL MANIFOLDS

The Model 305 is available in two designs: the traditional and the Coplanar. The traditional Model 305 Integral Manifold can be mounted to the Rosemount Model 1195 Integral Orifice or to most primary elements with mounting adapters in the market today. The Model 306 Integral Manifold is used with a Model 3051T transmitter to provide block and bleed valve capabilities of up to 10,000 psi (690 bar).

FIGURE 6-6. Model 305 Integral Manifold.

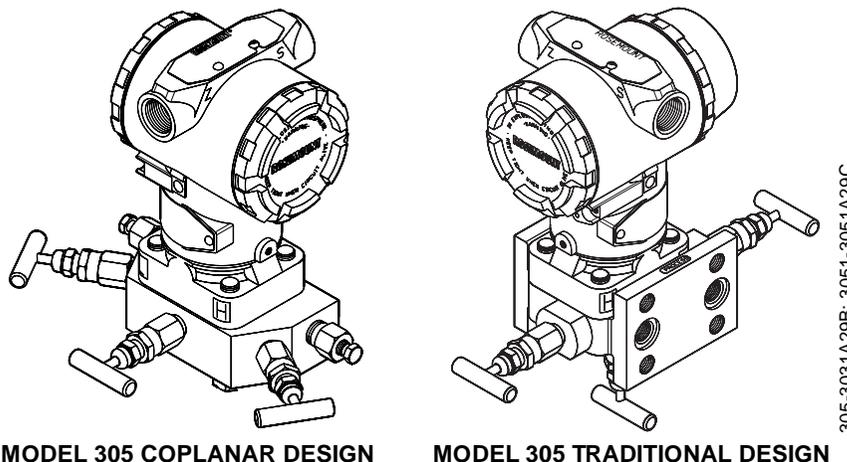

Model 305 Integral Manifold Installation Procedure

To install a Model 305 Integral Manifold to a Model 3051 transmitter:



1. Inspect the Teflon sensor module O-rings. If the O-rings are undamaged, reusing them is recommended. If the O-rings are damaged (if they have nicks or cuts, for example), replace them with new O-rings.

IMPORTANT

If replacing the O-rings, take care not to scratch or deface the O-ring grooves or the surface of the isolating diaphragm while you remove the damaged O-rings.

2. Install the Integral Manifold on the sensor module. Use the four 2.25-in. manifold bolts for alignment. Finger tighten the bolts, then tighten the bolts incrementally in a cross pattern to final torque value. See “Bolt Installation” on page 3-18 for complete bolt installation information and torque values. When fully tightened, the bolts should extend through the top of the module housing.



See “Safety Messages” on page 6-1 for complete warning information.

3. If the Teflon sensor module O-rings have been replaced, the flange bolts should be re-tightened after installation to compensate for cold flow of the O-rings.

NOTE

Always perform a zero trim on the transmitter/manifold assembly after installation to eliminate any mounting effects.


4. Install drain/vent valves:
 - a. Starting at the base of the valve with the threaded end pointing toward the installer, apply two clockwise turns of the sealing tape. Tighten the seat into the Integral Manifold to 250 in-lb (28,3 N-m).
 - b. Orient the opening on the valve so that the process fluid will drain toward the ground and away from personnel when the valve is opened. Tighten the drain/vent valve stem into the seat to 70 ± 10 in-lb (7,9 N-m).

Model 306 Integral Manifold Installation Procedure

The Model 306 Manifold is for use only with a Model 3051T transmitter.

 Assemble the Model 306 Manifold to the Model 3051T with a thread sealant.

FIGURE 6-7. Model 306 Integral Manifold.

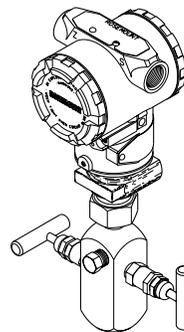

3051-3051A01A

HARDWARE SELECTABLE INFORMATION	
Alarm Option: <input type="checkbox"/> High★ <input type="checkbox"/> Low Transmitter Security: <input type="checkbox"/> Off★ <input type="checkbox"/> On	NOTE: Specify C4 Option in model structure when ordering NAMUR-compliant alarm and saturation limits. ⁽¹⁾
SIGNAL SELECTION: (Software Selectable)	
<input type="checkbox"/> 4–20 mA with simultaneous digital signal based on HART protocol★ <input type="checkbox"/> Burst mode of HART digital process variable ⁽²⁾ Burst mode output options: <input type="checkbox"/> Primary variable in engineering units <input type="checkbox"/> Primary variable in percent of range <input type="checkbox"/> All dynamic variables in engineering units <input type="checkbox"/> All dynamic variables in engineering units and the primary variable mA value <input type="checkbox"/> Multidrop Communication ⁽²⁾⁽³⁾ Choose transmitter address (1-15) ⁽⁴⁾ : _____	

(1) Not available with low power output.
 (2) C1 Option required for configuration of this parameter
 (3) This option fixes the transmitter analog output at 4mA.
 (4) Default address is 1 if multidrop communication is selected.

Model 3051C Differential/Gage Pressure Transmitter Range Limits												
Units	Range 0 Span		Range 1 Span		Range 2 Span		Range 3 Span		Range 4 Span		Range 5 Span	
	min	max	min	max	min	max	min	max	min	max	min	max
inH ₂ O	-3.0	3.0	0.5	25	2.5	250	10	1000	83.040	8304	553.60	55360
inHg	-0.22027	0.22027	0.03678	1.8389	0.18389	18.389	0.73559	73.559	6.1081	610.81	40.720	4072.04
ftH ₂ O	-0.25	0.25	0.04167	2.08333	0.20833	20.8333	0.83333	83.3333	6.9198	691.997	46.13	4613.31
mmH ₂ O	-76.19996	76.19996	12.7	635.5	63.553	6355	254	25421	2110.95	211095	14073	1407301
mmHg	-5.59492	5.59492	0.93416	46.7082	4.67082	467.082	18.6833	1868.33	155.145	15514.5	1034.3	103430
psi	-0.10819	1.10819	0.01806	0.903	0.0902	9.03183	0.36127	36.127	3	300	20	2000
bar	-0.00746	0.00746	0.00125	0.06227	0.00623	0.62272	0.02491	2.491	0.20684	20.6843	1.37895	137.895
mbar	-7.45927	7.45927	1.2454	62.2723	6.22723	622.723	24.9089	2490.89	206.843	20684.3	1378.95	137895
g/cm ²	-7.60634	7.60634	1.26775	63.3875	6.33875	633.875	25.355	2535.45	210.547	21054.7	1406.14	140614
kg/cm ²	-0.00761	0.00761	0.00127	0.0635	0.00635	0.635	0.0254	2.54	0.21092	21.0921	1.40614	140.614
Pa	-745.92724	745.92724	124.545	6227.23	622.723	62160.6	2490.89	249089	20684.3	2068430	137895	13789500
kPa	-0.74593	0.74593	0.12545	6.2272	0.62272	62.2723	2.49089	249.089	20.6843	2068.43	137.895	13789.5
torr	-5.59491	5.59491	0.93416	46.7082	4.67082	467.082	18.6833	1868.33	155.145	15514.5	1034.3	103430
atm	-0.00736	0.00736	0.00123	0.06146	0.00615	0.61460	0.02458	2.458	0.20414	20.4138	1.36092	136.092

NOTE
 When used with the HART Communicator Model 275 or the Rosemount Model 268 Communicator, ±5% adjustment ability is allowed on the sensor limit to allow for unit conversions.

Model 3051P Differential/Gage Pressure Transmitter Range Limits								
Units	Range 2 Span		Range 3 Span		Range 4 Span ⁽¹⁾		Range 5 Span ⁽¹⁾	
	min	max	min	max	min	max	min	max
inH ₂ O	25	250	100	1000	830.40	8304	5536.0	55360
inHg	1.8389	18.389	7.3559	73.559	61.081	610.81	407.20	4072.04
ftH ₂ O	2.08333	20.8333	8.3333	83.3333	69.200	691.997	461.3	4613.31
mmH ₂ O	635.5	6355	2542	25421	21109.5	211095	140730	1407301
mmHg	46.7082	467.082	186.833	1868.33	1551.45	15514.5	10343	103430
psi	0.903	9.03183	3.6127	36.127	30	300	200	2000
bar	0.06227	0.62272	0.2491	2.491	2.0684	20.6843	13.7895	137.895
mbar	62.2723	622.723	249.089	2490.89	2068.43	20684.3	13789.5	137895
g/cm ²	63.3875	633.875	253.55	2535.45	2105.47	21054.7	14061.4	140614
kg/cm ²	0.0635	0.635	0.254	2.54	2.1092	21.0921	14.0614	140.614
Pa	6216.06	62160.6	24908.9	249089	206843	2068430	1378950	13789500
kPa	6.2272	62.2723	24.9089	249.089	206.843	2068.43	1378.95	13789.5
torr	46.7082	467.082	186.833	1868.33	1551.45	15514.5	10343	103430
atm	0.06146	0.61460	0.2458	2.458	2.0414	20.4138	13.6092	136.092

NOTE
When used with the HART Communicator Model 275 or the Rosemount Model 268 Communicator, ±5% adjustment ability is allowed on the sensor limit to allow for unit conversions.

(1) Range 4 and 5 spans are only available with gage pressure transmitters.

Model 3051L/3051H Pressure Transmitter Range Limits								
Units	Range 2 Span		Range 3 Span		Range 4 Span		Range 5 Span (3051H Only)	
	min	max	min	max	min	max	min	max
inH ₂ O	2.5	250	10	1000	83.040	8304	553.60	55360
inHg	0.18389	18.389	0.73559	73.559	6.1081	610.81	40.720	4072.04
ftH ₂ O	0.20833	20.8333	0.83333	83.3333	6.9198	691.997	46.13	4613.31
mmH ₂ O	63.553	6355	254	25421	2110.95	211095	14073	1407301
mmHg	4.67082	467.082	18.6833	1868.33	155.145	15514.5	1034.3	103430
psi	0.0902	9.03183	0.36127	36.127	3	300	20	2000
bar	0.00623	0.62272	0.02491	2.491	0.20684	20.6843	1.37895	137.895
mbar	6.22723	622.723	24.9089	2490.89	206.843	20684.3	1378.95	137895
g/cm ²	6.33875	633.875	25.355	2535.45	210.547	21054.7	1406.14	140614
kg/cm ²	0.00635	0.635	0.0254	2.54	0.21092	21.0921	1.40614	140.614
Pa	622.723	62160.6	2490.89	249089	20684.3	2068430	137895	13789500
kPa	0.62272	62.2723	2.49089	249.089	20.6843	2068.43	137.895	13789.5
torr	4.67082	467.082	18.6833	1868.33	155.145	15514.5	1034.3	103430
atm	0.00615	0.61460	0.02458	2.458	0.20414	20.4138	1.36092	136.092

NOTE
When used with the HART Communicator Model 275 or the Rosemount Model 268 Communicator, ±5% adjustment ability is allowed on the sensor limit to allow for unit conversions.

Rosemount Model 3051 Smart Pressure Transmitters

Model 3051T Gage and Absolute Pressure Transmitter Range Limits										
Units	Range 1 Span		Range 2 Span		Range 3 Span		Range 4 Span		Range 5 Span	
	min	max								
inH ₂ O	8.30397	831.889	41.5198	4159.45	221.439	22143.9	1107.2	110720	55360	276799
inHg	0.61081	61.0807	3.05403	305.403	16.2882	1628.82	81.441	8144.098	4072.04	20360.2
ftH ₂ O	0.69199	69.3241	3.45998	345.998	18.4533	1845.33	92.2663	9226.63	4613.31	23066.6
mmH ₂ O	211.10	21130	1054.60	105460.3	5634.66	563466	28146.1	2814613	1407301	7036507
mmHg	15.5145	1551.45	77.5723	7757.23	413.72	41372	2068.6	206860.0	103430	517151
psi	0.3	30	1.5	150	8	800	40	4000	2000	10000
bar	0.02068	3.06843	0.10342	10.3421	0.55158	55.1581	2.75791	275.7905	137.895	689.476
mbar	20.6843	2068.43	103.421	10342.11	551.581	55158.1	2757.91	275790.5	137895	689476
g/cm ²	21.0921	2109.21	105.461	10546.1	561.459	56145.9	2807.31	280730.6	140614	703067
kg/cm ²	0.02109	2.10921	0.10546	10.5461	0.56246	56.2456	2.81228	281.228	140.614	701.82
Pa	2068.43	206843	10342.1	1034212	55158.1	5515811	275791	27579054	13789500	68947600
kPa	2.06843	206.843	10.3421	1034.21	55.1581	5515.81	275.791	27579.05	13789.5	68947.6
torr	15.5145	1551.45	77.5726	7757.26	413.721	413721	2068.6	206859.7	103430	517151
atm	0.02041	2.04138	0.10207	10.2069	0.54437	54.4368	2.72184	272.1841	136.092	680.46

NOTE
When used with the HART Communicator Model 275 or the Rosemount Model 268 Communicator, ±5% adjustment ability is allowed on the sensor limit to allow for unit conversions.

Model 3051C Absolute Pressure Transmitter Range Limits										
Units	Range 0 Span		Range 1 Span		Range 2 Span		Range 3 Span		Range 4 Span	
	min	max								
inH ₂ O	4.62254	138.399	8.30397	831.889	41.5198	4151.98	221.439	22143.9	1107.2	110720
inHg	0.34002	10.1801	0.61081	61.0807	3.05403	305.403	16.2882	1628.82	81.441	8144.098
ftH ₂ O	0.38521	11.5333	0.69199	69.3241	3.45998	345.998	18.4533	1845.33	92.2663	9226.63
mmH ₂ O	117.510	3518.2	211.10	21130	6.35308	635.308	5634.66	563466	28146.1	2814613
mmHg	8.63642	258.575	15.5145	1551.45	1055.47	105547	413.72	41372	2068.6	206860.0
psi	0.16667	5	0.3	30	1.5	150	8	800	40	4000
bar	0.01151	0.34474	0.02068	2.06843	0.10342	10.342	0.55158	55.1581	2.75791	275.7905
mbar	11.5142	344.738	20.6843	2068.43	103.421	10342.1	551.581	55158.1	2757.91	275790.5
g/cm ²	11.74	350.91	21.0921	2109.21	105.27	105.27	561.459	56145.9	2807.31	280730.6
kg/cm ²	0.01174	0.35154	0.02109	2.10921	0.10546	10.546	0.56246	56.2456	2.81228	281.228
Pa	1151.42	34473.8	2068.43	206843	10342.1	1034210	55158.1	5515811	275791	27579054
kPa	1.15142	34.4738	2.06843	206.843	10.3421	1034.21	55.1581	5515.81	275.791	27579.05
torr	8.63642	258.575	15.5145	1551.45	77.5726	7757.26	413.721	413721	2068.6	206859.7
atm	0.01136	0.34023	0.02041	2.04138	0.10207	10.207	0.54437	54.4368	2.72184	272.1841

NOTE
When used with the HART Communicator Model 275 or the Rosemount Model 268 Communicator, ±5% adjustment ability is allowed on the sensor limit to allow for unit conversions.

HART Communicator

INTRODUCTION

This appendix provides basic communicator information on the Model 275 HART Communicator when used with a Model 3051 Smart Pressure Transmitter.

This brief appendix will familiarize you with the HART Communicator but is not meant to replace the HART Communicator product manual. For complete information on the HART Communicator, refer to the HART Communicator Product Manual, publication number 00809-0100-4275.

NOTE

You must upgrade the software in your HART Communicator in order to take advantage of the additional features of the improved Model 3051. If you initiate communication with an improved Model 3051 using a Communicator that has a previous version of the transmitter Device Descriptors (DDs), the communicator will display the following message:

NOTICE: Upgrade 275 software to access XMTR function.
Continue with old description?

If you select **YES**, the communicator will communicate properly with the transmitter using the existing Model 3051 DDs. However, software features added since the revision of the DDs in the communicator will not be accessible. If you select **NO**, the communicator will default to a generic transmitter functionality

Contact your nearest Rosemount Service Center or Sales Representative to upgrade your communicator.

SAFETY MESSAGES

Procedures and instructions in this section may require special precautions to ensure the safety of the personnel performing the operations. Information that raises potential safety issues is indicated by a warning symbol (⚠). Refer to the following safety messages before performing an operation preceded by this symbol.


Warnings (⚠)

WARNING

Explosions can result in death or serious injury.

- Do not remove the transmitter covers in explosive environments when the circuit is alive.
- Both transmitter covers must be fully engaged to meet explosionproof requirements.
- Before connecting a communicator in an explosive atmosphere, make sure the instruments in the loop are installed according to intrinsically safe or nonincendive field wiring practices.

FIGURE A-1. HART Communicator Menu Tree for Improved Model 3051.

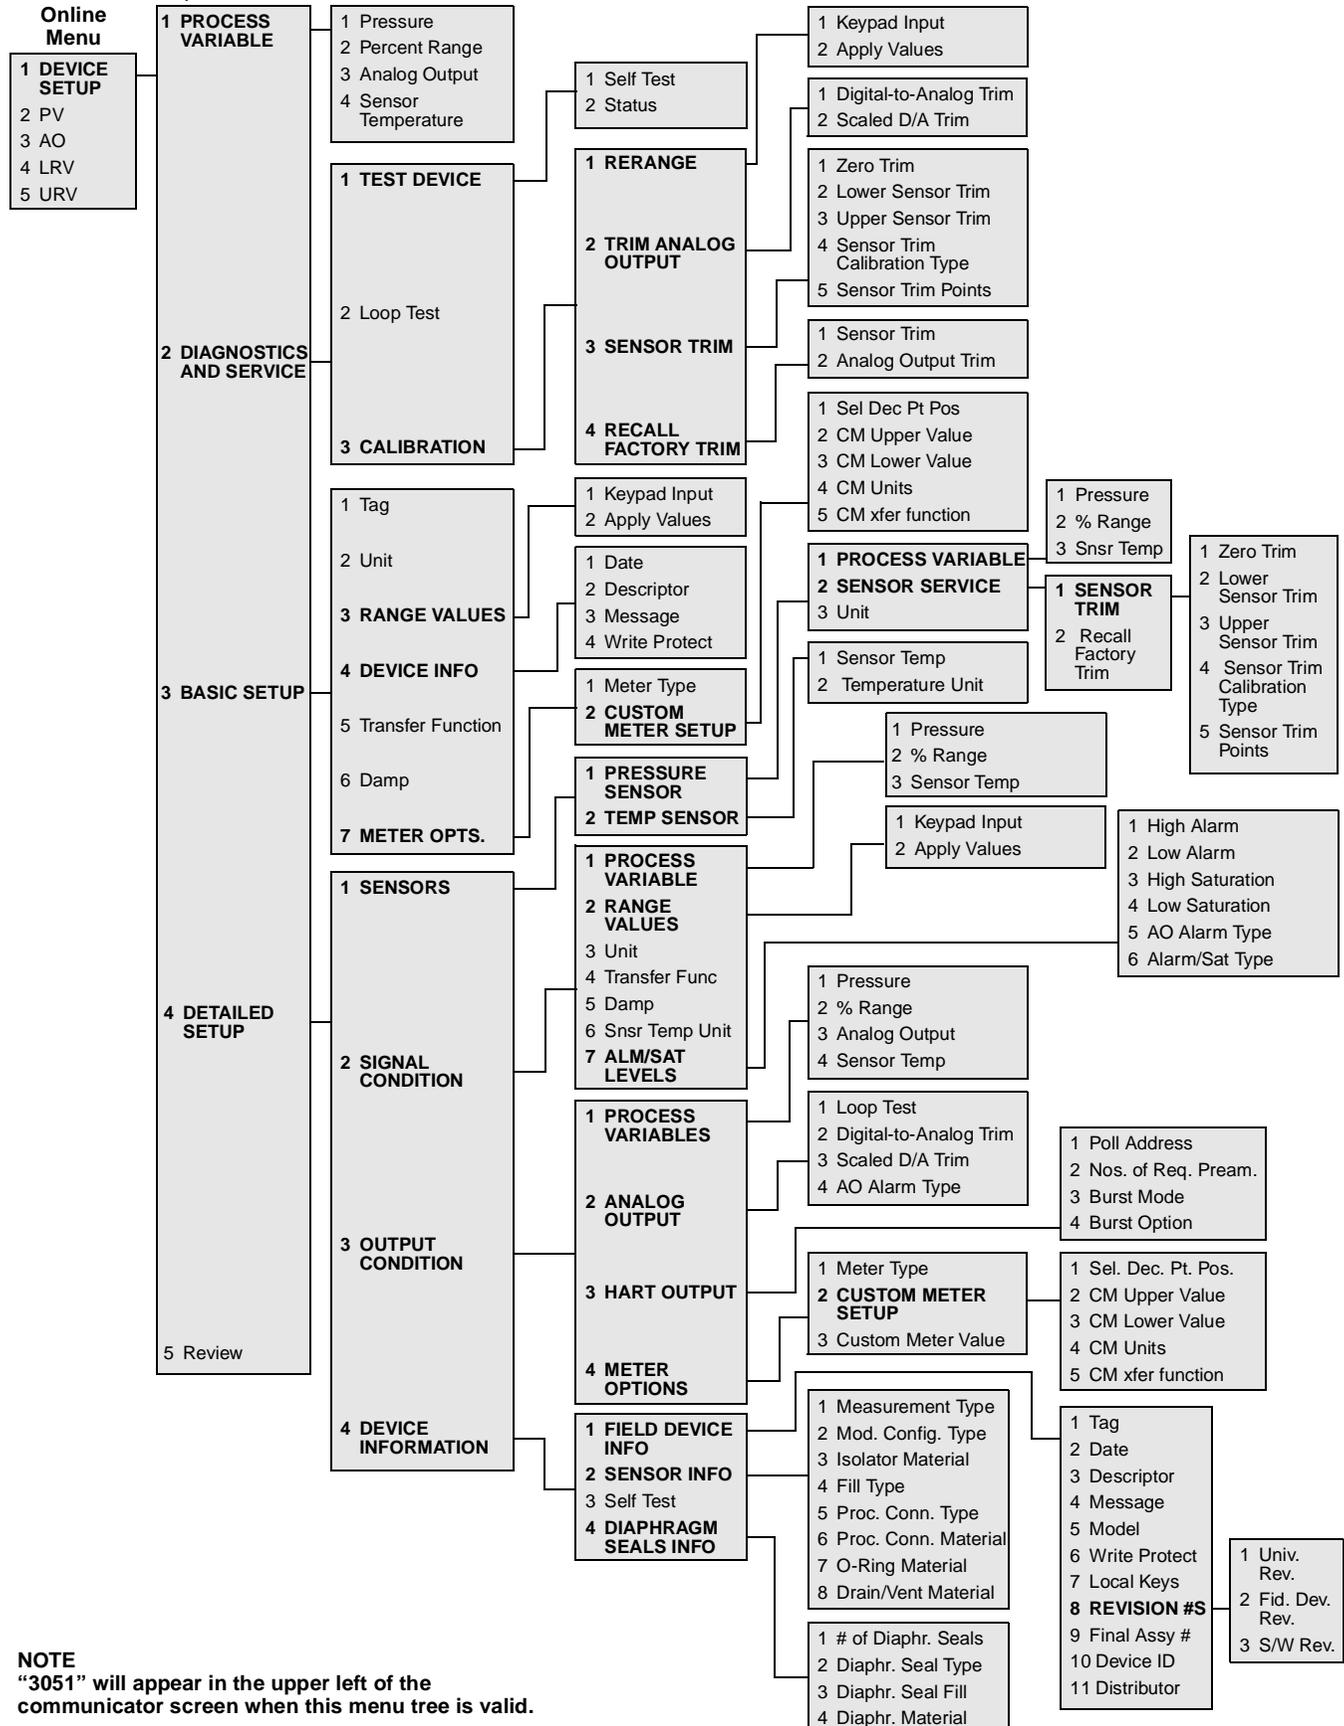

NOTE
 "3051" will appear in the upper left of the communicator screen when this menu tree is valid.

TABLE A-1. HART Fast Key Sequences for the *Improved* Model 3051.

Function	HART Fast Key Sequence
Alarm and Saturation Levels	1, 4, 2, 7
Analog Output Alarm Type	1, 4, 3, 2, 4
Burst Mode Control	1, 4, 3, 3, 3
Burst Operation	1, 4, 3, 3, 3
Clone Data	See page 2-29
Custom Meter Configuration	1, 3, 7, 2
Custom Meter Value	1, 4, 3, 4, 3
✓ Damping	1, 3, 6
Date	1, 3, 4, 1
Descriptor	1, 3, 4, 2
Digital To Analog Trim (4–20 mA Output)	1, 2, 3, 2, 1
Disable Local Span/Zero Adjustment	1, 4, 4, 1, 7
Field Device Info	1, 4, 4, 1
Full Trim	1, 2, 3, 3
Keypad Input – Rerange	1, 2, 3, 1, 1
Local Zero and Span Control	1, 4, 4, 1, 7
Loop Test	1, 2, 2
Lower Sensor Trim	1, 2, 3, 3, 2
Message	1, 3, 4, 3
Meter Options	1, 4, 3, 4
Number Of Requested Preambles	1, 4, 3, 3, 2
Poll Address	1, 4, 3, 3, 1
Poll a Multidropped Transmitter	Left Arrow, 4, 1, 1
✓ Range Values	1, 3, 3
Rerange	1, 2, 3, 1
Scaled D/A Trim (4–20 mA Output)	1, 2, 3, 2, 2
Self Test (Transmitter)	1, 2, 1, 1
Sensor Info	1, 4, 4, 2
Sensor Temperature	1, 1, 4
Sensor Trim Points	1, 2, 3, 3, 5
Status	1, 2, 1, 2
✓ Tag	1, 3, 1
✓ Transfer Function (Setting Output Type)	1, 3, 5
Transmitter Security (Write Protect)	1, 3, 4, 4
Trim Analog Output	1, 2, 3, 2
✓ Units (Process Variable)	1, 3, 2
Upper Sensor Trim	1, 2, 3, 3, 3
Zero Trim	1, 2, 3, 3, 1
NOTE: A check (✓) indicates the basic configuration parameters. At minimum, these parameters should be verified as part of the configuration and startup procedure.	

FIGURE A-2. HART Communicator Menu Tree for Previous Model 3051.

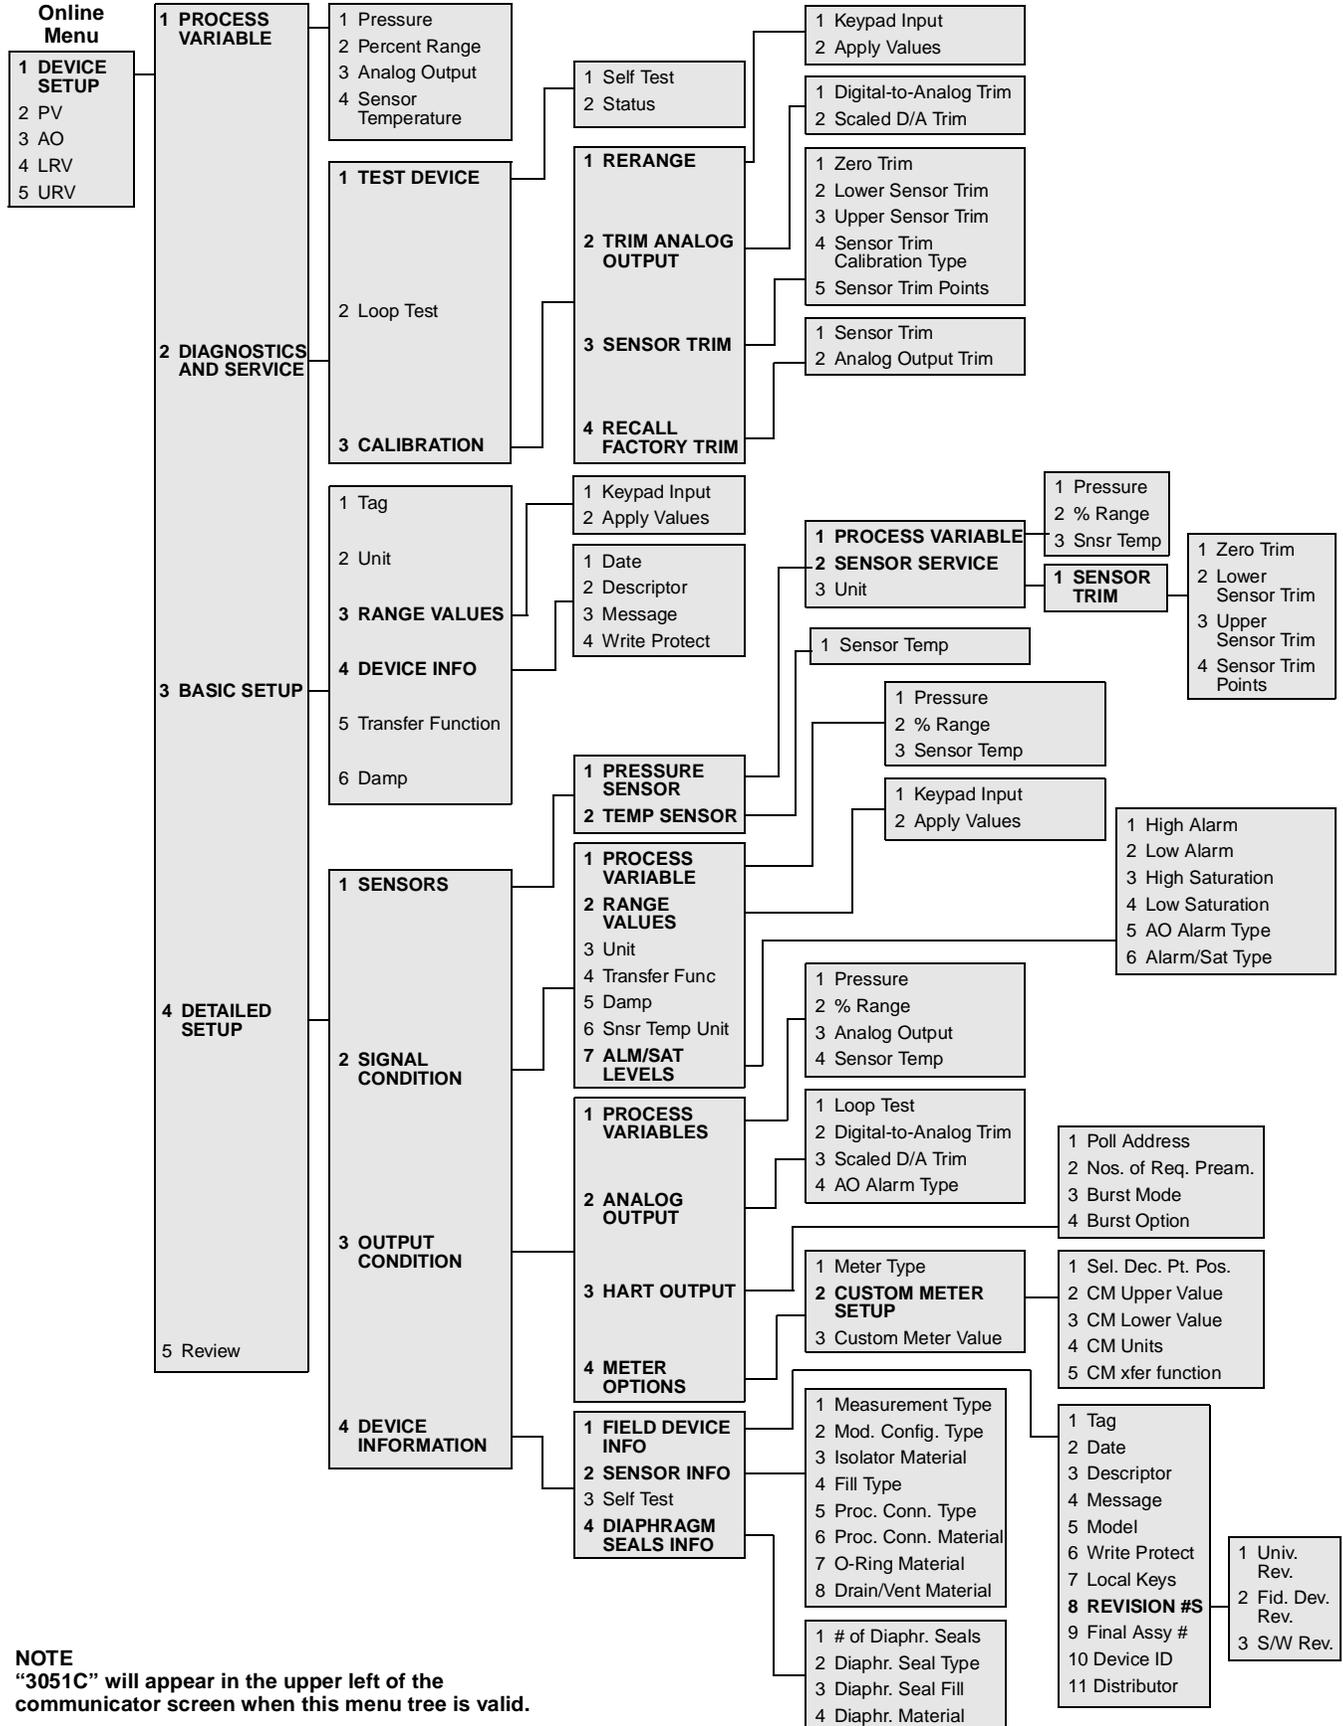


TABLE A-2. HART Fast Key Sequences for the *Previous* Model 3051.

Function	HART Fast Key Sequence
Analog Output Alarm	1, 4, 3, 3
Burst Mode Control	1, 4, 3, 4, 3
Burst Operation	1, 4, 3, 4, 4
Clone Data	See page 2-29
✓ Damping	1, 3, 6
Date	1, 3, 4, 1
Descriptor	1, 3, 4, 2
Digital To Analog Trim (4–20 mA Output)	1, 2, 3, 2, 1
Disable Local Span/Zero Adjustment	1, 4, 4, 1, 7
Field Device Info	1, 4, 4, 1
Full Trim	1, 2, 3, 3
Keypad Input	1, 2, 3, 1, 1
Loop Test	1, 2, 2
Lower Sensor Trim	1, 2, 3, 3, 2
Message	1, 3, 4, 3
Meter Type	1, 4, 3, 5
Number Of Requested Preambles	1, 4, 3, 4, 2
Poll Address	Left Arrow, 5, 1
✓ Range Values	1, 3, 3
Rerange	1, 2, 3, 1
Scaled D/A Trim (4–20 mA Output)	1, 2, 3, 2, 2
Self Test (Transmitter)	1, 2, 1, 1
Sensor Info	1, 4, 4, 2
Sensor Temperature	1, 1, 4
Sensor Trim Points	1, 2, 3, 3, 4
Status	1, 2, 1, 2
✓ Tag	1, 3, 1
✓ Transfer Function (Setting Output Type)	1, 3, 5
Transmitter Security (Write Protect)	1, 3, 4, 4
Trim Analog Output	1, 2, 3, 2
✓ Units (Process Variable)	1, 3, 2
Upper Sensor Trim	1, 2, 3, 3, 3
Zero Trim	1, 2, 3, 3, 1
Analog Output Alarm	1, 4, 3, 3
Burst Mode Control	1, 4, 3, 4, 3
Burst Operation	1, 4, 3, 4, 4
Clone Data	See page 2-29.
✓ Damping	1, 3, 6
NOTE: A check (✓) indicates the basic configuration parameters. At minimum, these parameters should be verified as part of the configuration and startup procedure.	

CONNECTIONS AND HARDWARE

 The HART Communicator Model 275 can interface with a transmitter from the control room, the instrument site, or any wiring termination point in the loop through the rear connection panel as shown in Figure A-3. Do not make connections to the serial port or NiCad recharger jack in an explosive atmosphere. To communicate, connect the HART Communicator in parallel with the instrument or load resistor. The connections are non-polarized. Before connecting the HART Communicator in an explosive atmosphere, make sure the instruments in the loop are installed in accordance with intrinsically safe or nonincendive field wiring practices.

NOTE

The HART Communicator needs a minimum of 250 ohms resistance in the loop to function properly.

The HART Communicator is not a measurement device and does not need to be calibrated; it is a communications device through which you can read and adjust the transmitter configuration information. All variable outputs displayed by the communicator are functions of the transmitter.

FIGURE A-3. Rear Connection Panel with Optional NiCad Recharger Pack.

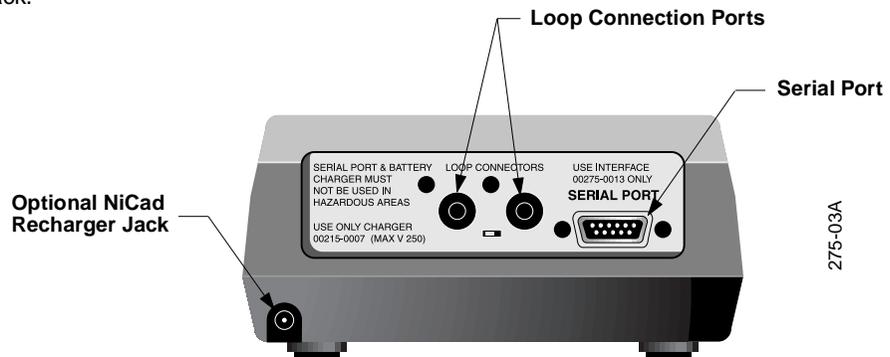


FIGURE A-4. Bench Hook-up
(4–20 mA Transmitters).

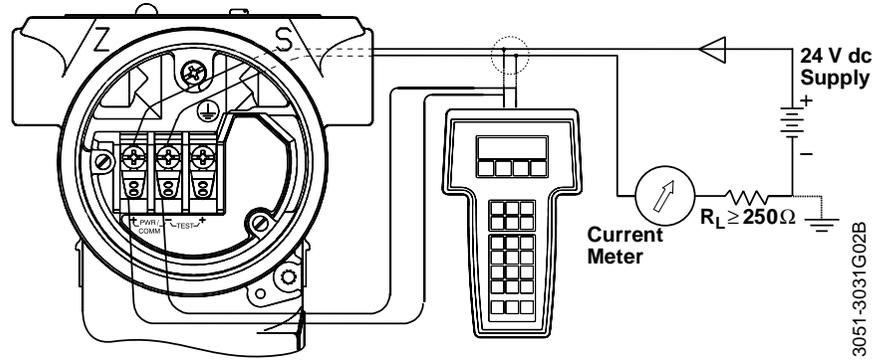


FIGURE A-5. Bench Hook-up
(Low Power Transmitters).

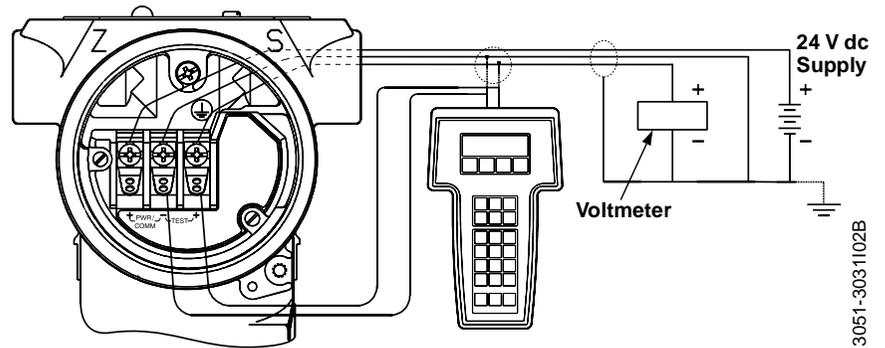


FIGURE A-6. Field Hook-up
(4–20 mA Transmitters).


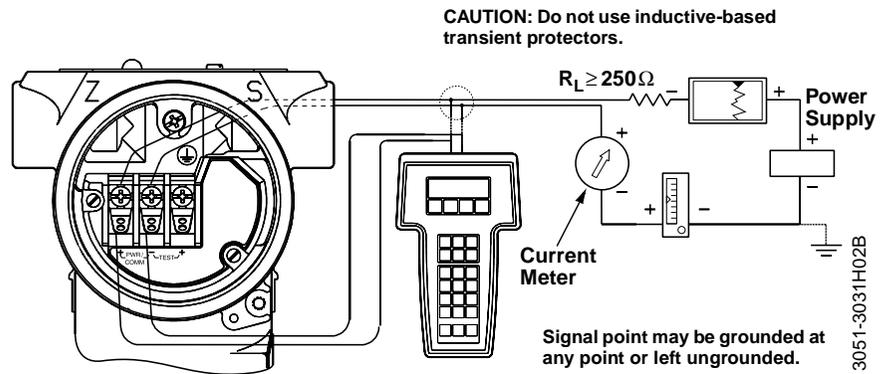



FIGURE A-7. Field Hook-up
(Low Power Transmitters).

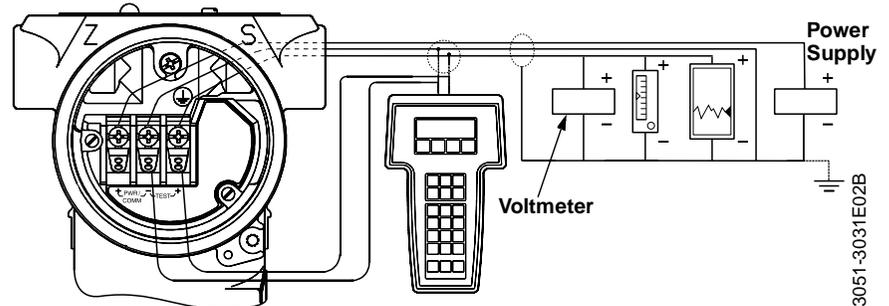

COMMUNICATOR KEYS

The keys of the HART Communicator include action, function, alphanumeric, and shift keys.

FIGURE A-8. Model 275 HART Communicator.

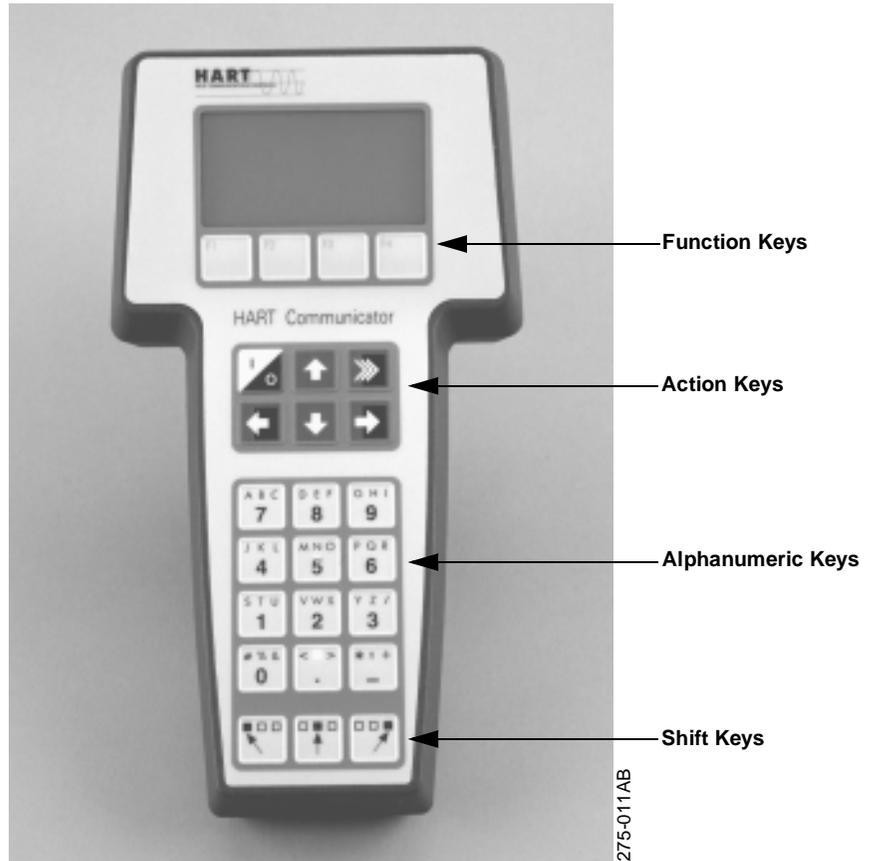

Action Keys

As shown in Figure A-8, the action keys are the six blue, white, and black keys located above the alphanumeric keys. The function of each key is described as follows:

ON/OFF Key

Use this key to power the HART Communicator. When the communicator is turned on, it searches for a transmitter on the 4–20 mA loop. If a device is not found, the communicator displays the message “No Device Found. Press OK.”

If a HART-compatible device is found, the communicator displays the **ONLINE MENU** with device ID and tag.

Directional Keys

Use these keys to move the cursor up, down, left, or right. The **RIGHT ARROW** key also selects menu options, and the **LEFT ARROW** key returns to the previous menu.

Hot Key 

Use this key to quickly access important, user-selectable options when connected to a HART-compatible device. Pressing the **HOT KEY** turns the HART Communicator on and displays the Hot Key Menu. See “Customizing the Hot Key Menu” in the HART Communicator manual for more information.


Function Keys



Use the four software-defined function keys, located below the LCD, to perform software functions. On any given menu, the label appearing above a function key indicates the function of that key for the current menu. As you move among menus, different function key labels appear over the four keys. For example, in menus providing access to on-line help, the **HELP** label may appear above the **F1** key. In menus providing access to the **ONLINE MENU**, the **HOME** label may appear above the **F3** key. Simply press the key to activate the function. See your HART Communicator manual for details on specific function key definitions.

Alphanumeric and Shift Keys

FIGURE A-9. HART Communicator Alphanumeric and Shift Keys.

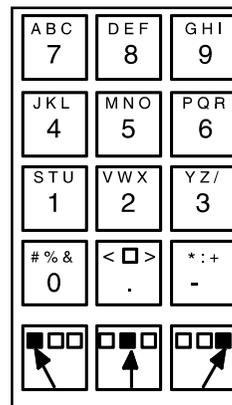

275-0383A

Data Entry

Some menus require data entry. Use the alphanumeric and shift keys to enter all alphanumeric information into the HART Communicator. If you press an alphanumeric key alone from within an edit menu, the bold character in the center of the key appears. These large characters include the numbers zero through nine, the decimal point (.), and the dash symbol (-).

To enter an alphabetic character, first press the shift key that corresponds to the position of the letter you want on the alphanumeric key. Then press the alphanumeric key. For example, to enter the letter “R”, first press the right shift key, then the “6” key (see Figure A-10). Do not press these keys simultaneously, but one after the other.

FIGURE A-10. Data Entry Key Sequence.



275-0632A,
0343A

Fast Key Sequences

HART fast key sequences provide quick on-line access to transmitter variables and functions. Instead of stepping your way through the menu structure using the action keys, you can press a HART fast key sequence to move from the **ONLINE MENU** to the desired variable or function. On-screen instructions guide you through the rest of the screens.

Fast Key Sequence Conventions

The fast key sequences for the Model 275 use the following conventions for their identification:

1 through 9—Refer to the keys located directly below the dedicated keypad.

Left Arrow—Refers to the **LEFT ARROW** directional key.

Fast Key Sequence Example

HART fast key sequences are made up of the series of numbers corresponding to the individual options in each step of the menu structure. For example, from the **ONLINE MENU** you can change the date. Following the menu structure, press 1 to reach *Device Setup*, press 3 for *Basic Setup*, press 4 for *Device Info*, press 1 for *Date*. The corresponding HART fast key sequence is 1, 3, 4, 1.

HART fast keys are operational only from the **ONLINE MENU**. If you use them consistently, you will need to return to the **ONLINE MENU** by pressing **HOME (F3)** when it is available. If you do not start at the **ONLINE MENU**, the HART fast key sequences will not function properly.

Use Table A-1, an alphabetical listing of every on-line function, to find the corresponding HART fast key sequences. These codes are applicable only to Model 3051 transmitters and the HART Communicator.

MENUS AND FUNCTIONS

The HART Communicator is a menu driven system. Each screen provides a menu of options that can be selected as outlined above, or provides direction for input of data, warnings, messages, or other instructions.

Main Menu

When the HART Communicator is turned on, one of two menus will appear. If the HART Communicator is connected to an operating loop, the communicator will find the device and display the **ONLINE MENU** (see below). If it is not connected to a loop, the communicator will indicate that no device was found. When you press **OK (F4)**, it will display the **MAIN** menu.

The **MAIN** menu provides the following options:

- *Offline*—The Offline option provides access to offline configuration data and simulation functions.
- *Online*—The Online option checks for a device and if it finds one, brings up the **ONLINE MENU**.
- *Transfer*—The Transfer option provides access to options for transferring data either from the HART Communicator (memory) to the transmitter (device) or vice versa. Transfer is used to move off-line data from the HART Communicator to the transmitter, or to retrieve data from a transmitter for off-line revision.

NOTE

Online communication with the transmitter automatically loads the current transmitter data to the HART Communicator. Changes in on-line data are made active by pressing **SEND (F2)**. The transfer function is used only for off-line data retrieval and sending.

- *Frequency Device*—The Frequency Device option displays the frequency output and corresponding pressure output of current-to-pressure transmitters.
- *Utility*—The Utility option provides access to the contrast control for the HART Communicator LCD screen and to the autopoll setting used in multidrop applications.

Once selecting a **MAIN** menu option, the HART Communicator provides the information you need to complete the operation. If further details are required, consult the HART Communicator manual.

Online Menu

The **ONLINE MENU** can be selected from the **MAIN** menu as outlined above, or it may appear automatically if the HART Communicator is connected to an active loop and can detect an operating transmitter.

NOTE

The **MAIN** menu can be accessed from the **ONLINE MENU**. Press the left arrow action key to deactivate the on-line communication with the transmitter and to activate the **MAIN** menu options.

When configuration variables are reset in the on-line mode, the new settings are not activated until the data is sent to the transmitter. Press **SEND (F2)** when it is activated to update the process variables of the transmitter.

On-line mode is used for direct evaluation of a particular meter, re-configuration, changing parameters, maintenance, and other functions.

Diagnostic Messages

The following pages contain a list of messages used by the HART Communicator (HC) and their corresponding descriptions.

Variable parameters within the text of a message are indicated with *<variable parameter>*.

Reference to the name of another message is identified by *[another message]*.

Message	Description
1k snsr EEPROM error-factory ON	Replace the sensor module
1k snsr EEPROM error-user-no out ON	Use the HART communicator to reset the following parameters: remote seal isolator, remote seal fill fluid, flange material, o-ring material, transmitter type, remote seal type, flange type, meter type, number of remote seals.
1k snsr EEPROM error-user ON	Perform a full trim to recalibrate the transmitter.
4k micro EEPROM error-factory ON	Replace the electronics board.
4k micro EEPROM error-user-no out ON	Use the hart communicator to reset the message field.

Message	Description
4k micro EEPROM error-user ON	Use the HART communicator to reset the following parameters: units, range values, damping, analog output, transfer function, tag, scaled meter values. Perform a d/a trim to ensure that the error is corrected.
4k snsr EEPROM error-factory ON	Replace the sensor module.
4k snsr EEPROM error-user ON	Use the HART communicator to reset the temperature units and the calibration type.
Add item for ALL device types or only for this ONE device type.	Asks the user whether the hot key item being added should be added for all device types or only for the type of device that is connected.
Command Not Implemented	The connected device does not support this function.
Communication Error	The communicator and the device are not communicating correctly. Check all connections between the communicator and the device and resend the information.
Configuration memory not compatible with connected device	The configuration stored in memory is incompatible with the device to which a transfer has been requested.
CPU board not initialized ON	The electronics board is not initialized. Replace the electronics board.
CPU EEPROM write failure ON	Message sent to electronics board from HART signal failed. Replace the electronics board.
Device Busy	The connected device is busy performing another task.
Device Disconnected	The device failed to respond to a command. Check all connections between the communicator and the device and resend the command.
Device write protected	Device is in write-protect mode. Data can not be written.
Device write protected. Do you still want to shut off?	Device is in write-protect mode. Press YES to turn the HART communicator off and lose the unsent data.
Display value of variable on hotkey menu?	Asks whether the value of the variable should be displayed adjacent to its label on the hotkey menu if the item being added to the hotkey menu is a variable.
Download data from configuration memory to device	Press the SEND softkey to transfer information from the communicator memory to the device.
Exceed field width	Indicates that the field width for the current arithmetic variable exceeds the device-specified description edit format.
Exceed precision	Indicates that the precision for the current arithmetic variable exceeds the device-specified description edit format.
Ignore next 50 occurrences of status?	Select YES to ignore the next 50 occurrences of device status, or select no to display every occurrence.
Illegal character	An invalid character for the variable type was entered.
Illegal date	The day portion of the date is invalid.

Message	Description
Illegal month	The month portion of the date is invalid.
Illegal year	The year portion of the date is invalid.
Incompatible CPU board and module ON	Upgrade the electronics board or the sensor module to the current revision.
Incomplete exponent	The exponent of a scientific notation floating point variable is incomplete.
Incomplete field	The value entered is not complete for the variable type.
Looking for a device	Polling for multidropped devices at addresses 1–15.
Local buttons operator error ON	Illegal pressure applied during zero or span operation. Repeat the process after verifying the correct pressures.
Mark as read only variable on hotkey menu?	Asks whether the user should be allowed to edit the variable from the hotkey menu if the item being added to the hotkey menu is a variable.
Module EEPROM write failure ON	Message sent to the module from the HART signal failed. Replace the sensor module.
No device configuration in configuration memory	There is no configuration saved in memory available to re-configure off-line or transfer to a device.
No Device Found	Poll of address zero fails to find a device, or poll of all addresses fails to find a device if auto-poll is enabled.
No hotkey menu available for this device.	There is no menu named “hotkey” defined in the device description for this device.
No pressure updates ON	No pressure updates being received from the sensor module. Verify that the sensor module ribbon cable is attached correctly. Or replace the sensor module.
No offline devices available.	There are no device descriptions available to be used to configure a device offline.
No simulation devices available.	There are no device descriptions available to simulate a device.
No temperature updates ON	No temperature updates being received from the sensor module. Verify that the sensor module ribbon cable is attached correctly. Or replace the sensor module.
No UPLOAD_VARIABLES in ddl for this device	There is no menu named “upload_variables” defined in the device description for this device. This menu is required for offline configuration.
No Valid Items	The selected menu or edit display contains no valid items.
OFF KEY DISABLED	Appears when the user attempts to turn the HC off before sending modified data or before completing a method.
Online device disconnected with unsent data. RETRY or OK to lose data.	There is unsent data for a previously connected device. Press RETRY to send data, or press OK to disconnect and lose unsent data.

Message	Description
Out of memory for hotkey configuration. Delete unnecessary items.	There is no more memory available to store additional hotkey items. Unnecessary items should be deleted to make space available.
Overwrite existing configuration memory	Requests permission to overwrite existing configuration either by a device-to-memory transfer or by an offline configuration. User answers using the softkeys.
Press OK...	Press the OK softkey. This message usually appears after an error message from the application or as a result of HART communications.
Restore device value?	The edited value that was sent to a device was not properly implemented. Restoring the device value returns the variable to its original value.
ROM checksum error ON	Checksum of transmitter software has detected a fault. Replace the electronics board.
Save data from device to configuration memory	Prompts user to press SAVE softkey to initiate a device-to-memory transfer.
Saving data to configuration memory.	Data is being transferred from a device to configuration memory.
Sending data to device.	Data is being transferred from configuration memory to a device.
Sensor board not initialized ON	The sensor module electronics board is not initialized. Replace the sensor module.
There are write only variables which have not been edited. Please edit them.	There are write-only variables which have not been set by the user. These variables should be set or invalid values may be sent to the device.
There is unsent data. Send it before shutting off?	Press YES to send unsent data and turn the HC off. Press NO to turn the HC off and lose the unsent data.
Too few data bytes received	Command returns fewer data bytes than expected as determined by the device description.
Transmitter Fault	Device returns a command response indicating a fault with the connected device.
Units for <variable label> has changed. Unit must be sent before editing, or invalid data will be sent.	The engineering units for this variable have been edited. Send engineering units to the device before editing this variable.
Unsent data to online device. SEND or LOSE data	There is unsent data for a previously connected device which must be sent or thrown away before connecting to another device.

Message	Description
Upgrade 275 software to access XMTR function. Continue with old description?	The communicator does not contain the most recent Model 3051 Device Descriptors (DDs). Select YES to communicate using the existing DDs. Select NO to abort communication.
Use up/down arrows to change contrast. Press DONE when done.	Gives direction to change the contrast of the HC display.
Value out of range	The user-entered value is either not within the range for the given type and size of variable or not within the min/max specified by the device.
<message> occurred reading/writing <variable label>	Either a read/write command indicates too few data bytes received, transmitter fault, invalid response code, invalid response command, invalid reply data field, or failed pre- or post-read method; or a response code of any class other than SUCCESS is returned reading a particular variable.
<variable label> has an unknown value. Unit must be sent before editing, or invalid data will be sent.	A variable related to this variable has been edited. Send related variable to the device before editing this variable.

Model 268 Communicator

INTRODUCTION

This appendix provides basic communicator information on the Rosemount Model 268 SMART FAMILY Interface when used with a Model 3051 Smart Pressure Transmitter.

NOTE

All additional features of the Model 3051 are only accessible by using a HART Communicator Model 275. The Model 268 SMART FAMILY Interface will only provide features accessible with the existing Model 3051 Device Descriptors (DD) present in the Model 268. For full functionality, use a Model 275 Communicator. Contact your nearest Rosemount Service Center or Sales Representative for details.

SAFETY MESSAGES

Procedures and instructions in this section may require special precautions to ensure the safety of the personnel performing the operations. Information that raises potential safety issues is indicated by a warning symbol (⚠). Refer to the following safety messages before performing an operation preceded by this symbol.

Warnings (⚠)

⚠ WARNING

Explosions can result in death or serious injury.

- Do not remove the transmitter covers in explosive environments when the circuit is alive.
- Both transmitter covers must be fully engaged to meet explosionproof requirements.
- Before connecting a communicator in an explosive atmosphere, make sure the instruments in the loop are installed according to intrinsically safe or nonincendive field wiring practices.

Figure B-1. Model 268 Menu Tree.

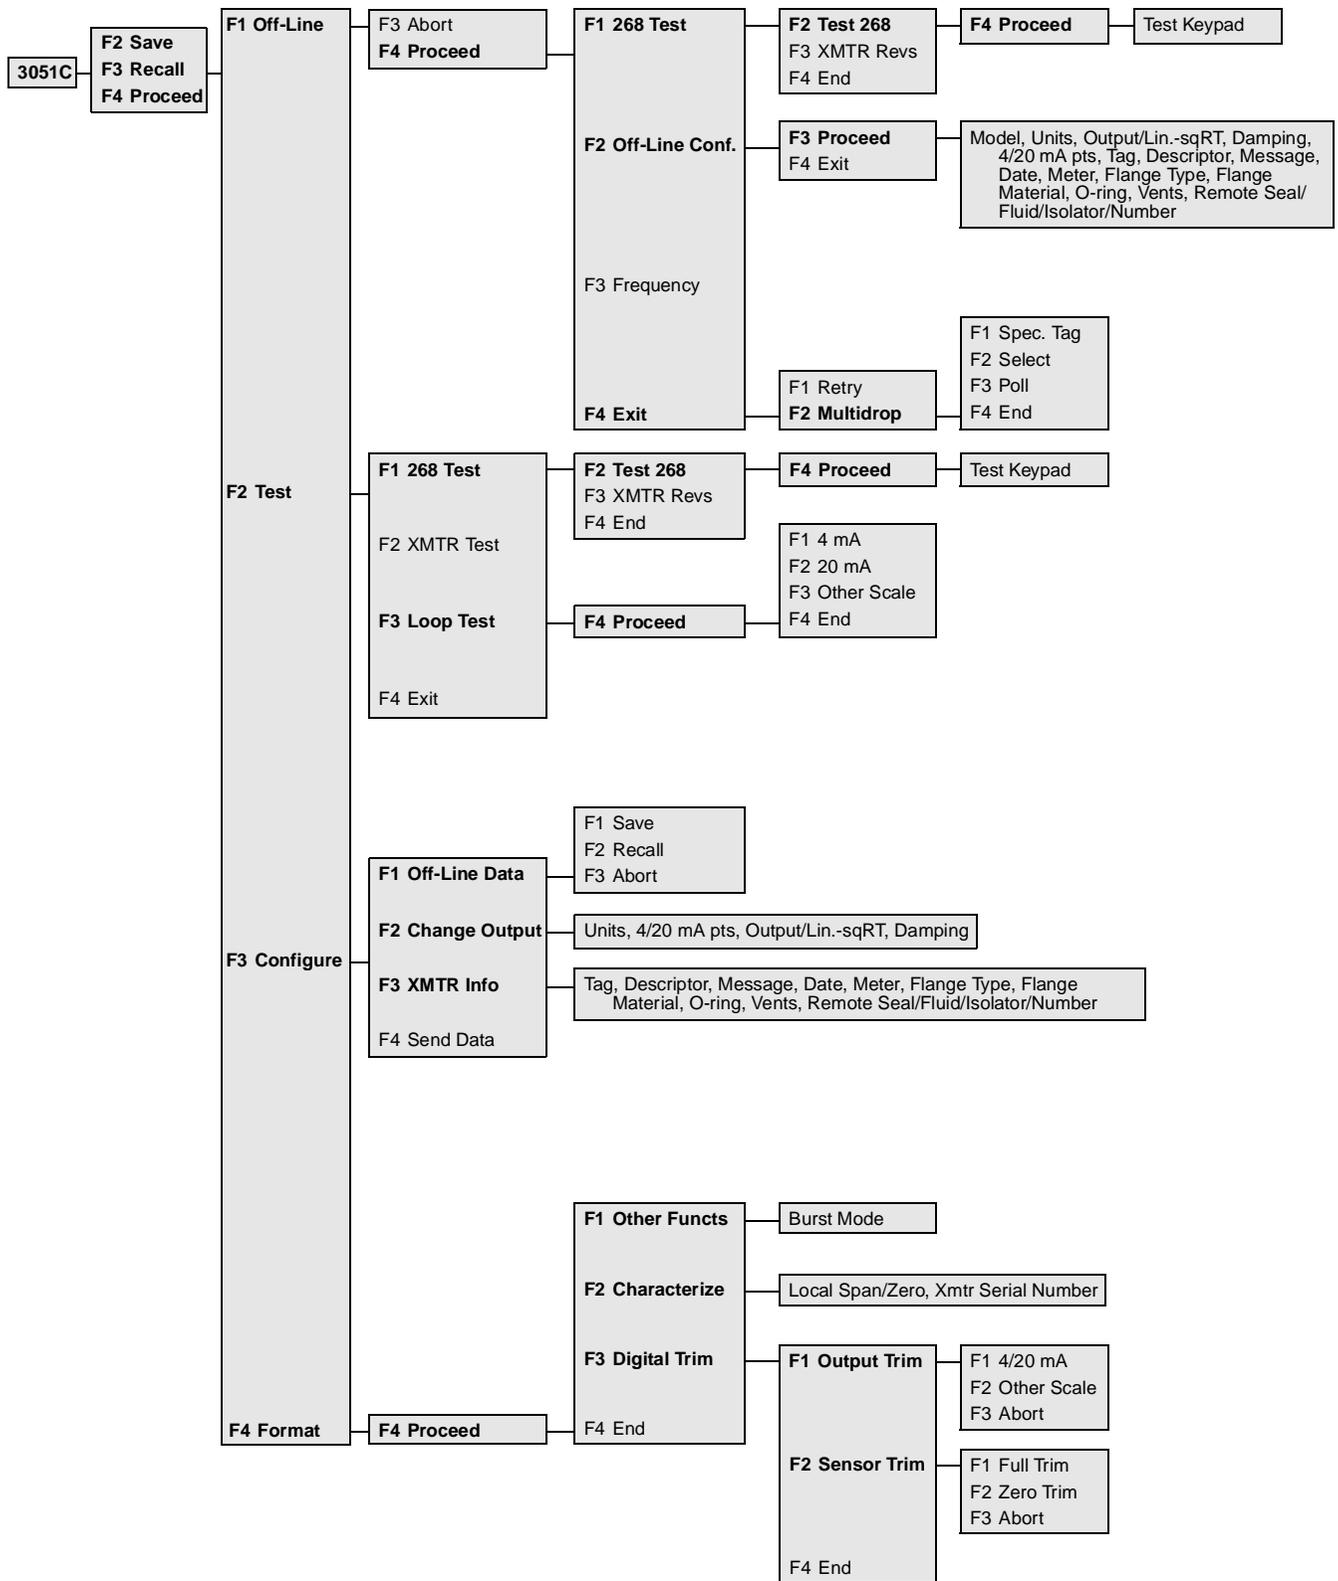


TABLE B-1. Model 268 Fast Key Equivalents.

Function	Model 268 Fast Key Sequence
Analog Output	F3, F2
Analog Output Alarm	Not Applicable
Burst Mode Control	F4, F4, F1
Burst Operation	Not Applicable
Calibration	Not Applicable
Clone Data	F4, F4, F1
Damping	F3, F2, (F1 x 3)
Date	F3, F3, (F1 x 3)
Descriptor	F3, F3, F1
Digital To Analog Trim (4–20 mA Output)	F4, F4, F3
Disable Local Span/Zero Adjustment	F4, F4, F2
Field Device Info	F3, F3
Full Trim	F4, F4, F3, F2, F1
Keypad Input (Trim Points)	F3, F2, F1
Loop Test	F2, F3
Lower Range Value	Process Variable Key, F2
Lower Sensor Trim	F4, F4, F3, F2, F1, F2
Message	F3, F3, F1, F1
Meter Type	F3, F3, (F1 x 4)
Number Of Requested Preambles	Not Applicable
Percent Range	Not Applicable
Poll Address	F1, F4, F4, F2, F3
Pressure	Process Variable Key
Range Values	F3, F2, F1
Rerange	F4, F4, F3, F1, F1
Scaled D/A Trim (4–20 mA Output)	F4, F4, F3, F1, F2
Self Test (Transmitter)	F2, F2
Sensor Info	F3, F3
Sensor Temperature	Process Variable Key, F3
Sensor Trim Points	F3, F2, F1
Status	Not Applicable
Tag	F3, F3
Transfer Function (Setting Output Type)	F3, F2, F1, F1
Transmitter Security (Write Protect)	Not Applicable
Trim Analog Output	F4, F4, F3, F1
Units (Process Variable)	F3, F2
Upper Range Value	Process Variable Key, F2
Upper Sensor Trim	F4, F4, F3, F2, F1, F3
Zero Trim	F4, F4, F3, F2, F2

CONNECTIONS AND HARDWARE

The Model 268 can communicate with a transmitter from the control room, the transmitter site, or any other wiring termination point in the loop. To communicate, it must be connected in parallel with the transmitter; the connections are non-polarized.

Figure B-2. Bench Hook-up (4–20 mA Transmitters).

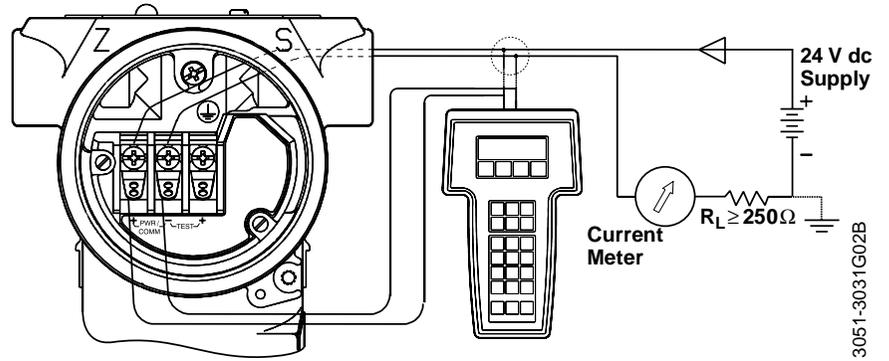


Figure B-3. Bench Hook-up (Low Power Transmitters).

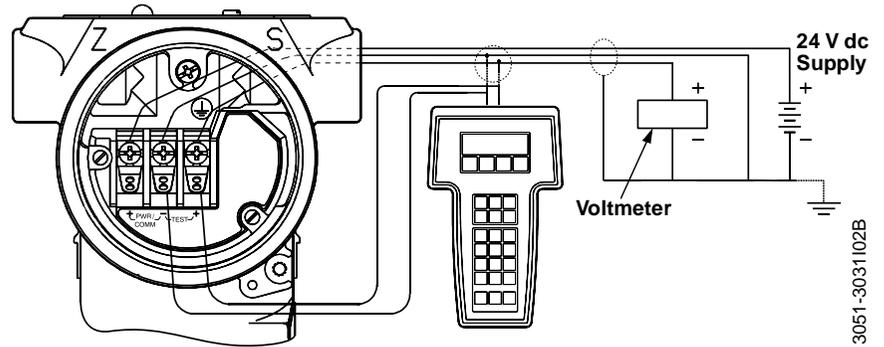


Figure B-4. Field Hook-up
(4–20 mA Transmitters).


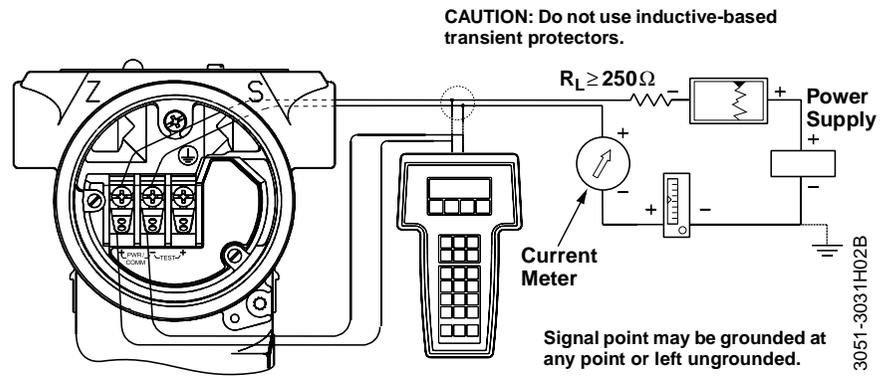


Figure B-5. Field Hook-up
(Low Power Transmitters).

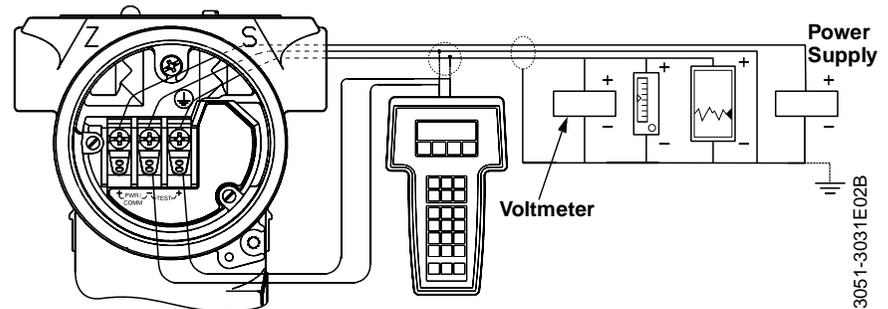

COMMUNICATOR KEYS

The keys of the Model 268 include the alphanumeric, dedicated, and function keys that vary depending on the task being performed. The dedicated key functions are always the same.

Dedicated Keys

On/Off

Use this key to turn the unit on and off. When the Model 268 is turned **ON**, it searches for a transmitter in the 4–20 mA loop. If no transmitter is found, the Model 268 offers the opportunity to try again, select **MULTI DROP** or **OFF-LINE**.


Process Variable

Use the **PROCESS VARIABLE** key to display up-to-date process variable readings from the transmitter in engineering units, milliamps, pulse rate, and shedding rate. It also displays totalized flow.

Review

The **REVIEW** key allows you to step through all the information currently held in the four memory locations of the transmitter and Model 268—SAFE MEM, OFLN MEM, WORK REG, and XMTR MEM.

Figure B-6. Model 268 Communicator.

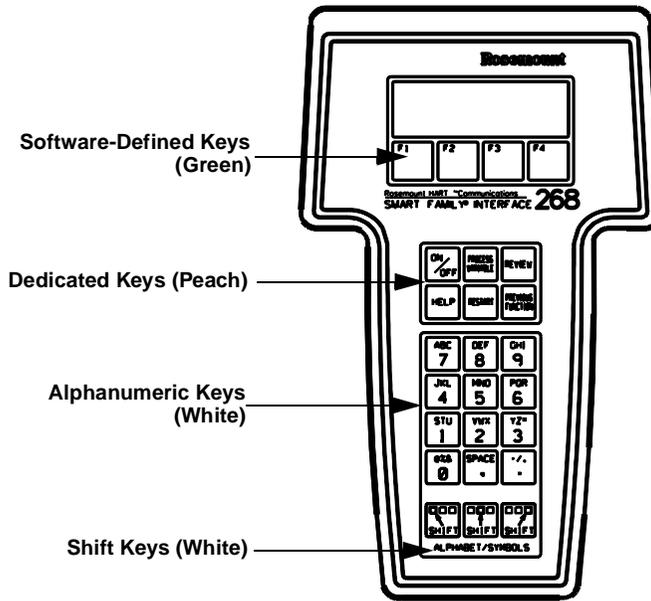

268-2681A01C

Help

Use the Help key to explain the software-defined key functions (F1-F4) in detail.

Restart

Use the Restart key to initiate communication with a transmitter while the Model 268 is still turned on. Upon connection to a new transmitter, pressing this key loads information from the new transmitter into the Model 268 working register.


Previous Function

The Previous Function key returns you to the previous decision level and allows you to select a different software-defined key function.

Alphanumeric and Shift Keys

Some menus require data entry. Use the alphanumeric and shift keys to enter all alphanumeric information into the Model 268.

Figure B-7. Model 268 Communicator Alphanumeric and Shift Keys.

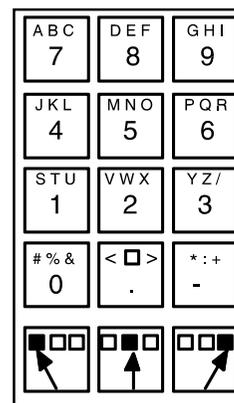

275-0383A

If you press an alphanumeric key alone from within an edit menu, the bold character in the center of the key appears. These characters include the numbers zero through nine, the decimal point (.), and the dash symbol (-).

To enter an alphabetic character, first press the shift key that corresponds to the position of the letter you want on the alphanumeric key. Then press the alphanumeric key. For example, to enter the letter "R," first press the right shift key, then the "6" key (see Figure B-8). Do not press these keys simultaneously, but one after the other.

Figure B-8. Data Entry Key Sequence.



275-0532A,
0343A

Function Keys

Use the four software-defined function keys, located below the LCD, to perform software functions. On any given menu, the label appearing above a function key indicates the function of that key for the current menu. As you move among menus, different function key labels appear over the four keys.

Fast Key Sequences

The Model 268 fast key sequences provide quick on-line access to transmitter variables and functions. Instead of stepping your way through the menu structure, you can press a fast key sequence to move from the Home Menu to the desired variable or function. On-screen instructions guide you through the rest of the screens.

Fast Key Sequence Conventions

The fast key sequences for the Model 268 use the following conventions for their identification:

F1, F2, F3, F4—Refer to each function key located directly below the LCD on the Model 268.


(F2 x 7)—Means to push the **F2** key seven consecutive times.

Process Variable—Refers to the dedicated key located below the function keys on the Model 268.

To return to the **HOME MENU**, use the function keys to exit the current task and press the **PREVIOUS FUNCTION** key as many times as necessary.

The fast key sequences are applicable only from the **HOME MENU**. The **HOME MENU** lists the model and tag, and labels the four function keys **OFFLINE**, **TEST**, **CONFIGURE** and **FORMAT** (see Figure B-9). After completing a task, return to the Home Menu if you intend to use the fast key sequences. Fast key sequences will not work from any other Model 268 screen.

Figure B-9. Model 268 Home Screen

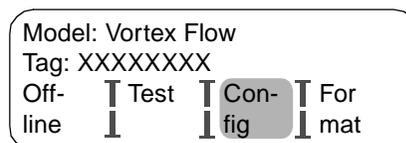

To return to the **HOME MENU**, use the function keys to exit the current task and press the **PREVIOUS FUNCTION** key as many times as necessary. When the **HOME MENU** appears, you can use another fast key sequence to reach a desired task.

NOTE

In order to complete certain tasks, you must first set the loop to manual control. Fast key sequence steps often include the warning to return the loop to manual. If the loop is not in manual control, be sure to watch for this screen. If it comes up during the fast key sequence, set the loop to manual before continuing with the task.

Fast Key Sequence Example

Date

To change the Date following the menu structure, you would start at the **HOME MENU** and press F3 for *Configure*, F3 for *Xmtr Info*, and F1 three times in a row to reach the *Date* function. The fast key sequence is F3, F3, (F1 x 3).

Diagnostic Messages

The following table provides a guide to Model 268 diagnostic messages.

Message	Description
CAUTION– Progressing will clear OfIn Mem	OFLN Memory is cleared for new information.
Data saved in OFLN Mem for downloading	Off-line configuration data are saved in the Off-line Memory and can be downloaded or sent to the flowmeter at an appropriate time.
Different XMTR type connected–XMTR Mem not changed	Flowmeter did not accept data sent because the data is meant for a different type of transmitter.
ERR–Filter Auto Adj	The low pass filter auto-adjust sequence error occurs under the following conditions: <ul style="list-style-type: none"> • no flow in pipe • filter tracking disabled Remedy conditions and repeat function.
ERR–Not xmtr command	Flowmeter does not understand the command sent by the Model 268. Press F4, RESTART to restart the flowmeter, or press F3 to suppress the error message and REVIEW the software revision level. You may need to contact the Rosemount Service Center.
ERR–Xmtr will not support command	The flowmeter does not understand the Model 268 command. Press F4, RESTART or press F3, REVIEW to review the software revision level of the flowmeter. Check compatibility.
Errors Detected– XMTR Mem not changed	Flowmeter did not accept data because it contained nonpermissible values. Data errors must be corrected and the data sent again.
Making changes permanent– PLEASE WAIT	Data is being sent to flowmeter and flowmeter is accepting the data.
No data modified to send	Data with no changes is being sent. Press F4 to continue.
No data saved in OFLN Mem	There are no data in the Off-line Memory to review.

Message	Description
No data saved in SAFE Mem	There are no data in the Safe Memory to review.
OfIn Mem not compatible with WORK REGS—Data not transferred	The data stored in Off-line Memory and WORKing Register are from different kinds of transmitters, or the Off-line Memory is empty. Press F4, REVIEW, F2 to see the data in Off-line Memory and connect the Model 268 to similar transmitter.
SAFE Mem from diff Xmtr than WORK REGS—Data not transferred	Data in the Safe Memory and Working Register are from different transmitters. Press F4, REVIEW, F1 and find the flowmeter serial number. Connect the Model 268 to the flowmeter with that serial number and press RESTART.
SAFE Mem not compatible with WORK REGS—Data not transferred	The unique identifier in the Safe Memory and the transmitter are different. Press F4, REVIEW, F1 to see the data in the Safe Memory. Connect the Model 268 to the matching transmitter and press RESTART.
WARN—Used nearest legal table value	The value entered has too many decimal places. The Model 8800 defaults to the closest value available.
WARN—Value entered is illegal, re-enter	The Model 268 will not accept the entered value. Enter an acceptable value (see relevant section in manual).
WARN—Value out of limits, altered by 268, re-check data	The Model 268 could not store the entered value so it changed to the maximum allowable value. Check the new value.
WARNING—Control loop should be in manual	Before sending the data that could affect the 4–20 mA output signal, set the loop to manual control. After it is set, press F4.
WARNING—Data transmission error	Previous communication between Model 268 and the flowmeter was not successful. If this message appears repeatedly, check the loop for a source of noise that could corrupt the signal.
WARNING—Loop may be returned to auto	After completing a communication that required the loop to be set in manual, you may return the loop to automatic control.
WARNING—Match xmtr S/N to nameplate S/N	Check to be sure that the entered flowmeter serial number is the same as that on the flowmeter nameplate.
WARNING—Not on line	The key you have pressed is not applicable for off-line configuration tasks.
WARNING—Process has been aborted	Indicates that the self-test has been aborted by pressing any key.
WARNING—Some of the changes were not saved in the xmtr mem	Flowmeter did not receive all configuration changes. Note differences in configuration data and reconfigure the flowmeter accordingly.
WARNING—This address already being used	Another transmitter is already using the entered multi-drop address. Enter a new address.
WARNING—This will erase work reg	Data in the Working Register will be replaced with data from a another location.

Message	Description
WARNING–Xmtr/268 not in communication	Model 268 did not get answer from flowmeter: <ul style="list-style-type: none"> • Check connections • Check that power is reaching flowmeter • Check for minimum 250 ohms resistance in loop
WARNING–Xmtr in output mode	During start-up and restart, the transmitter milliamp output does not reflect the process variable. Press F4.
WARNING–Xmtr is not communicating	Model 268 did not get answer from flowmeter: <ul style="list-style-type: none"> • Check connections • Check that power is reaching flowmeter • Check for minimum 250 ohms resistance in loop
WARNING–268 does not know this Xmtr	Model 268 recognizes a Rosemount transmitter in the loop but cannot communicate with it. The message usually indicates a software revision level incompatibility between the Model 268 and the transmitter.
XMTR Mem diff than WORK Regs–XMTR not changed	Data in the Working Register and in the flowmeter have different unique identifiers. The Model 268 was probably connected to different flowmeter without RESTART or power-off/power-on sequence. Press RESTART to erase the Working Register or save the Working Register to the Off-line Memory and download to the proper flowmeter at a later time.
Xmtr still busy	Flowmeter is running a computational or diagnostic routine and cannot respond to the Model 268 instructions. Press the PREVIOUS FUNCTION key to cancel.

Approval Drawings

OVERVIEW

Index of intrinsically safe Factory Mutual barrier systems and entity parameters for Models 3051C/L/P/H/T and 3001C/S (Drawing Number 03031-1019, Rev AA), pages C-2 through C-10.

Index of intrinsically safe C.S.A. barrier systems for Models 3051C/L/P/H/T and 3001C/S (Drawing Number 03031-1024, Rev AA), pages C-11 through C-14.

Index of SAA Entity Concept approvals, which are intrinsically safe when used in the circuit with SAA approved barriers that meet the listed entity parameters for Models 3051C/L/P/H/T and 3001C/S (Drawing Number 03031-1026, Rev AA), pages C-15 and C-16.

Index of intrinsically safe barrier systems and entity parameters for the Model 268 SMART FAMILY Interface (Drawing Number 00268-0031, Rev M), pages C-17 through C-23.

CONFIDENTIAL AND PROPRIETARY INFORMATION IS CONTAINED HEREIN AND MUST BE HANDLED ACCORDINGLY	REVISIONS				
	REV	DESCRIPTION	CHG. NO.	APP'D	DATE
	AA	ADD FIELDBUS	RTC1004088	M.L.M.	5/28/98

ENTITY APPROVALS FOR

3051C	3001C
3051L	3001CL
3051P	3001CH
3051H	3001S
3051CA	3001SL
3051T	3001SH

OUTPUT CODE A (4-20 MA HART) SEE SHEETS 2-4
 OUTPUT CODE M (LOW POWER) SEE SHEETS 5-6
 OUTPUT CODE F (FIELDBUS) SEE SHEETS 7-9

THE ROSEMOUNT TRANSMITTERS LISTED ABOVE ARE F.M. APPROVED AS INTRINSICALLY SAFE WHEN USED IN CIRCUIT WITH F.M. APPROVED BARRIERS WHICH MEET THE ENTITY PARAMETERS LISTED IN THE CLASS I, II, AND III, DIVISION 1 GROUPS INDICATED. TEMP CODE T4. ADDITIONALLY, THE ROSEMOUNT 751 FIELD SIGNAL INDICATOR IS F.M. APPROVED AS INTRINSICALLY SAFE WHEN CONNECTED IN CIRCUIT WITH ROSEMOUNT TRANSMITTERS (FROM ABOVE) AND F.M. APPROVED BARRIERS WHICH MEET THE ENTITY PARAMETERS LISTED FOR CLASS I, II, AND III, DIVISION 1, GROUPS INDICATED, TEMP CODE T4.

TO ASSURE AN INTRINSICALLY SAFE SYSTEM, THE TRANSMITTER AND BARRIER MUST BE WIRED IN ACCORDANCE WITH THE BARRIER MANUFACTURER'S FIELD WIRING INSTRUCTIONS AND THE APPLICABLE CIRCUIT DIAGRAM.


CAD Maintained, (MICROSTATION).

UNLESS OTHERWISE SPECIFIED DIMENSIONS IN INCHES (mm). REMOVE ALL BURRS AND SHARP EDGES. MACHINE SURFACE FINISH 125 -TOLERANCE- .X * .1 [2.5] .XX * .02 [0.5] .XXX * .010 [0.25] FRACTIONS ANGLES * 1/32 * 2° DO NOT SCALE PRINT	CONTRACT NO.	ROSEMOUNT MEASUREMENT		ROSEMOUNT INC. 12001 TECHNOLOGY DRIVE EDEN PRAIRIE, MN 55344 USA
	DR. MIKE DOBE 03/21/89	FISHER-ROSEMOUNT		
	CHK'D	TITLE		
	APP'D. KELLY ORTH 03/22/89	INDEX OF I.S. F.M. FOR 3051C/L/P/H/T & 3001C/S		
APP'D. GOVT.	SIZE A	FSCM NO	DWG NO.	03031-1019
	SCALE	N/A	WT.	SHEET 1 OF 9

1019A01A

REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AA		RTC1004088		

BARRIER PARAMETERS (APPLICABLE TO OUTPUT CODES A & M)
 P_{MAX} = 1WATT

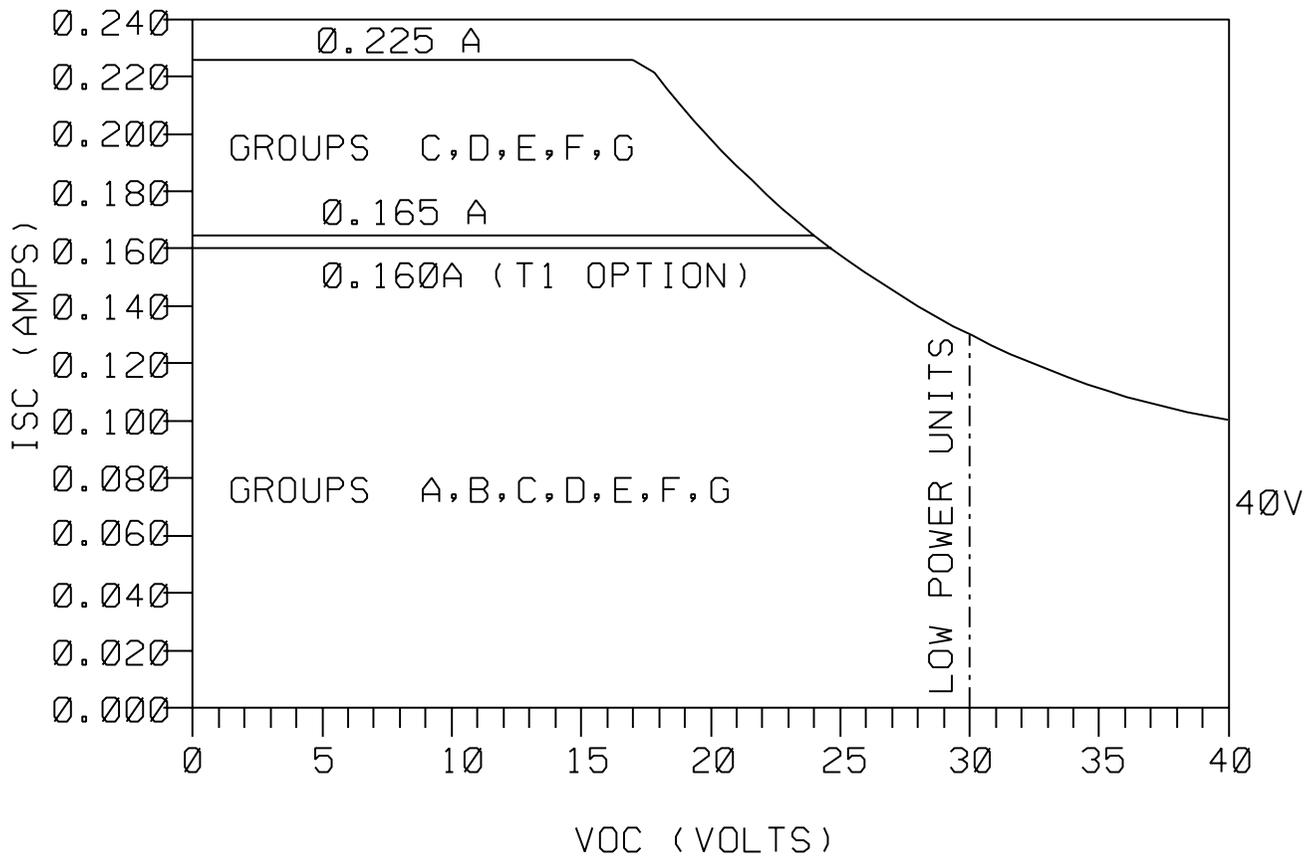

ROSEMOUNT INC.
 12001 TECHNOLOGY DRIVE
 EDEN PRAIRIE, MN 55344 USA


CAD Maintained, (MICROSTATION).

DR.	MIKE DOBE	SIZE	A	FSCM NO		DWG NO.	03031-1019
ISSUED		SCALE	N/A	WT.		SHEET	2 OF 9

1019A02A


REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AA		RTC1004088		

CIRCUIT DIAGRAM 1
ONE BARRIER OR CONVERTER:
SINGLE OR DUAL CHANNEL

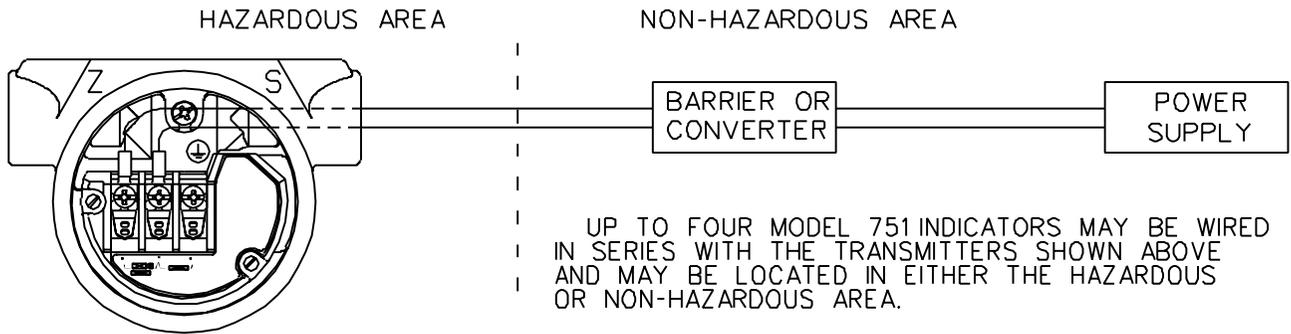

OUTPUT CODE A
MODELS INCLUDED
3051C, L, P, H, T, CA
3001C, CL, CH, S, SL, SH

CIRCUIT DIAGRAM 2
SUPPLY AND RETURN BARRIERS
(ONLY FOR USE WITH BARRIERS APPROVED IN THIS CONFIGURATION)

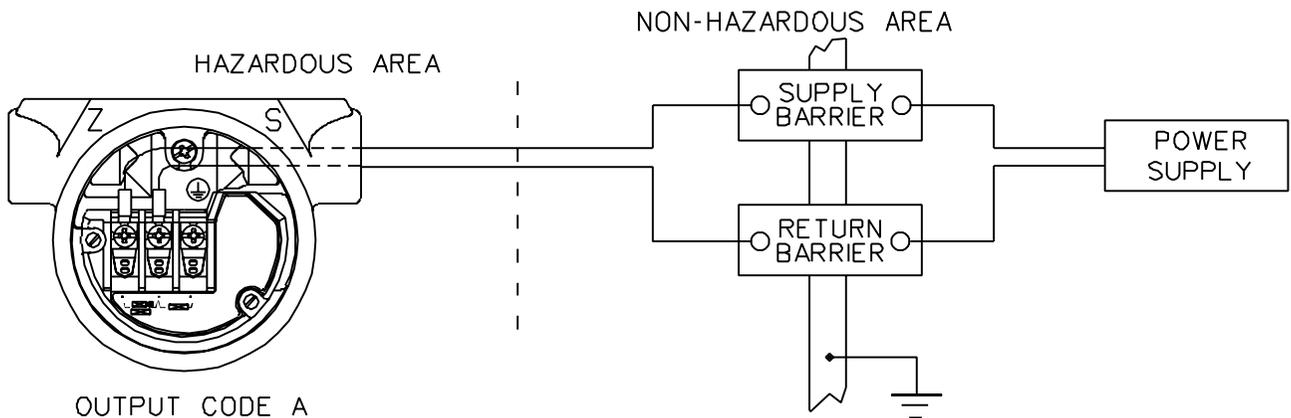

OUTPUT CODE A
MODELS INCLUDED
3051C, L, P, H, T, CA
3001C, CL, CH, S, SL, SH

ROSEMOUNT INC. 12001 TECHNOLOGY DRIVE EDEN PRAIRIE, MN 55344 USA		CAD Maintained, (MICROSTATION).		
DR.	MIKE DOBE	SIZE	FSCM NO	DWG NO.
ISSUED		A		03031-1019
	SCALE	N/A	WT.	SHEET 3 OF 9

1019A03A

REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AA		RTC1004088		

ENTITY CONCEPT APPROVALS

THE ENTITY CONCEPT ALLOWS INTERCONNECTION OF INTRINSICALLY SAFE APPARATUS TO ASSOCIATED APPARATUS NOT SPECIFICALLY EXAMINED IN COMBINATION AS A SYSTEM. THE APPROVED VALUES OF MAX. OPEN CIRCUIT VOLTAGE (VOC OR VT) AND MAX. SHORT CIRCUIT CURRENT (ISC OR IT) AND MAX. POWER (VOC X ISC/4) OR (VT X IT/4), FOR THE ASSOCIATED APPARATUS MUST BE LESS THAN OR EQUAL TO THE MAXIMUM SAFE INPUT VOLTAGE (VMAX), MAXIMUM SAFE INPUT CURRENT (IMAX), AND MAXIMUM SAFE INPUT POWER (PMAX) OF THE INTRINSICALLY SAFE APPARATUS. IN ADDITION, THE APPROVED MAX. ALLOWABLE CONNECTED CAPACITANCE (CA) OF THE ASSOCIATED APPARATUS MUST BE GREATER THAN THE SUM OF THE INTERCONNECTING CABLE CAPACITANCE AND THE UNPROTECTED INTERNAL CAPACITANCE (CI) OF THE INTRINSICALLY SAFE APPARATUS, AND THE APPROVED MAX. ALLOWABLE CONNECTED INDUCTANCE (LA) OF THE ASSOCIATED APPARATUS MUST BE GREATER THAN THE SUM OF THE INTERCONNECTING CABLE INDUCTANCE AND THE UNPROTECTED INTERNAL INDUCTANCE (LI) OF THE INTRINSICALLY SAFE APPARATUS.

FOR OUTPUT CODE A NOTE: ENTITY PARAMETERS LISTED APPLY ONLY TO ASSOCIATED APPARATUS WITH LINEAR OUTPUT.

CLASS I, DIV. 1, GROUPS A AND B

$V_{MAX} = 40V$	V_T OR V_{OC} IS LESS THAN OR EQUAL TO 40V
$I_{MAX} = 165MA$	I_T OR I_{SC} IS LESS THAN OR EQUAL TO 165MA
$P_{MAX} = 1 \text{ WATT}$	$(\frac{V_T \times I_T}{4})$ OR $(\frac{V_{OC} \times I_{SC}}{4})$ IS LESS THAN OR EQUAL TO 1 WATT
$C_I = .01\mu F$	C_A IS GREATER THAN $.01\mu F$
$L_I = 10\mu H$	L_A IS GREATER THAN $10\mu H$

* FOR T1 OPTION:


$I_{MAX} = 160MA$	I_T OR I_{SC} IS LESS THAN OR EQUAL TO 160MA
$L_I = 1.05MH$	L_A IS GREATER THAN 1.05MH

CLASS I, DIV. 1, GROUPS C AND D

$V_{MAX} = 40V$	V_T OR V_{OC} IS LESS THAN OR EQUAL TO 40V
$I_{MAX} = 225MA$	I_T OR I_{SC} IS LESS THAN OR EQUAL TO 225MA
$P_{MAX} = 1 \text{ WATT}$	$(\frac{V_T \times I_T}{4})$ OR $(\frac{V_{OC} \times I_{SC}}{4})$ IS LESS THAN OR EQUAL TO 1 WATT
$C_I = .01\mu F$	C_A IS GREATER THAN $.01\mu F$
$L_I = 10\mu H$	L_A IS GREATER THAN $10\mu H$

* FOR T1 OPTION:

$L_I = 1.05MH$	L_A IS GREATER THAN 1.05MH
----------------	------------------------------

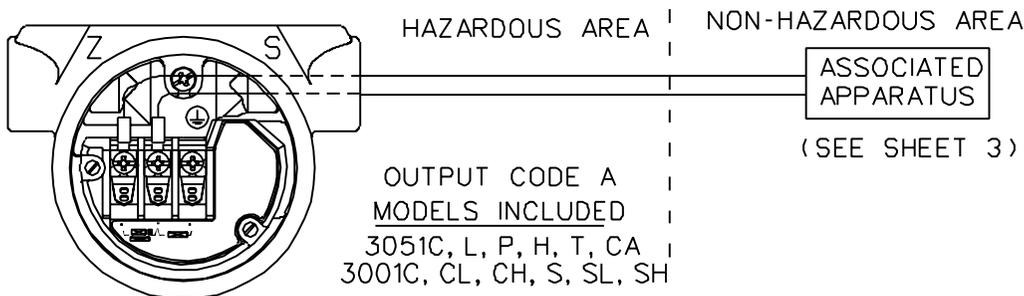

ROSEMOUNT INC.
12001 TECHNOLOGY DRIVE
EDEN PRAIRIE, MN 55344 USA

CAD Maintained, (MICROSTATION).

DR. MIKE DOBE	SIZE A	FSCM NO	DWG NO. 03031-1019
ISSUED	SCALE N/A	WT.	SHEET 4 OF 9

1019A04A

REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AA		RTC1004088		

FOR OUTPUT CODE M

CLASS I, DIV. 1, GROUPS A AND B

$V_{MAX} = 30V$	V_T OR V_{OC} IS LESS THAN OR EQUAL TO 30V
$I_{MAX} = 165MA$	I_T OR I_{SC} IS LESS THAN OR EQUAL TO 165MA
$P_{MAX} = 1 \text{ WATT}$	$(\frac{V_T \times I_T}{4})$ OR $(\frac{V_{OC} \times I_{SC}}{4})$ IS LESS THAN OR EQUAL TO 1 WATT
$C_T = .042\mu F$	C_A IS GREATER THAN $.042\mu F$
$L_T = 10\mu H$	L_A IS GREATER THAN $10\mu H$

* FOR T1 OPTION:


$L_T = 0.75MH$	L_A IS GREATER THAN $0.75MH$
----------------	--------------------------------

CLASS I, DIV. 1, GROUPS C AND D

$V_{MAX} = 30V$	V_T OR V_{OC} IS LESS THAN OR EQUAL TO 30V
$I_{MAX} = 225MA$	I_T OR I_{SC} IS LESS THAN OR EQUAL TO 225MA
$P_{MAX} = 1 \text{ WATT}$	$(\frac{V_T \times I_T}{4})$ OR $(\frac{V_{OC} \times I_{SC}}{4})$ IS LESS THAN OR EQUAL TO 1 WATT
$C_T = .042\mu F$	C_A IS GREATER THAN $.042\mu F$
$L_T = 10\mu H$	L_A IS GREATER THAN $10\mu H$

* FOR T1 OPTION:

$L_T = 0.75MH$	L_A IS GREATER THAN $0.75MH$
----------------	--------------------------------

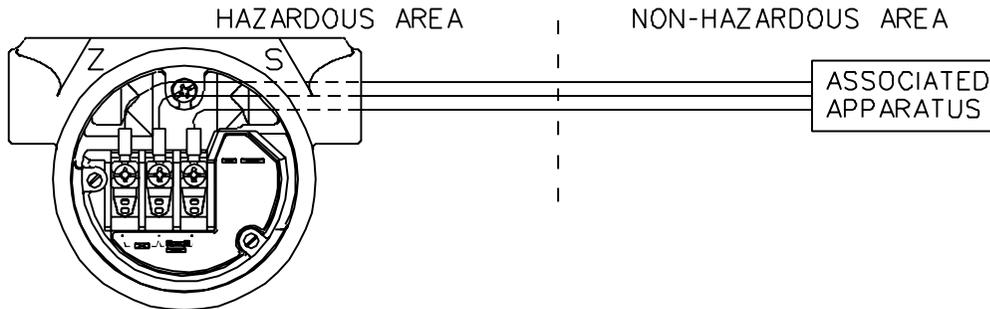

OUTPUT CODE M
AVAILABLE FOR THE MODELS LISTED

3051C 3051H
3051L 3051CA
3051P 3051T


ROSEMOUNT INC. 12001 TECHNOLOGY DRIVE EDEN PRATRIE, MN 55344 USA		CAD Maintained, (MICROSTATION).		
DR. MIKE DOBE	SIZE A	FSCM NO	DWG NO. 03031-1019	
ISSUED	SCALE N/A	WT.	SHEET 5 OF 9	



1019A05A

REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AA		RTC1004088		


CIRCUIT DIAGRAM 3
ONE DUAL CHANNEL BARRIER

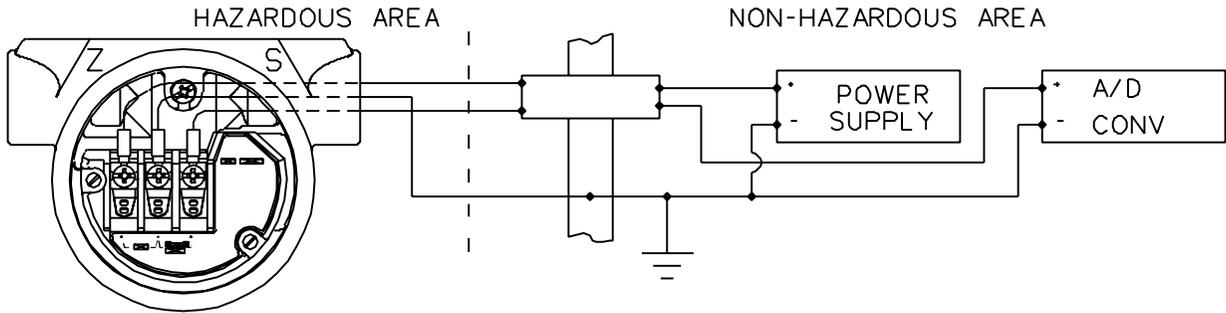

OUTPUT CODE M
AVAILABLE FOR THE MODELS LISTED

3051C	3051H
3051L	3051CA
3051P	3051T

CIRCUIT DIAGRAM 4
TWO SINGLE CHANNEL BARRIERS
(ONLY FOR USE WITH BARRIERS APPROVED
IN THIS CONFIGURATION)

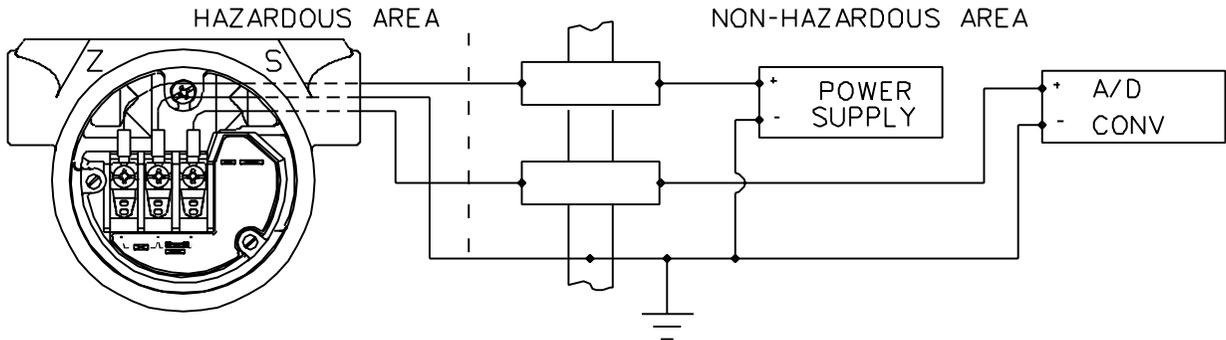

OUTPUT CODE M
AVAILABLE FOR THE MODELS LISTED

3051C	3051H
3051L	3051CA
3051P	3051T

ROSEMOUNT INC.
12001 TECHNOLOGY DRIVE
EDEN PRAIRIE, MN 55344 USA

DR. **SANDI MANSON**

ISSUED

SIZE A

SCALE N/A

FSCM NO

WT.

CAD Maintained, (MICROSTATION).

DWG NO. 03031-1019


SHEET 6 OF 9

1019A06A

REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AA		RTC1004088		

3051 WITH FOUNDATION FIELDBUS.
(OUTPUT CODE F)

BARRIER PARAMETERS (APPLICABLE TO OUTPUT CODE F)
P_{MAX} = 1.3 WATT

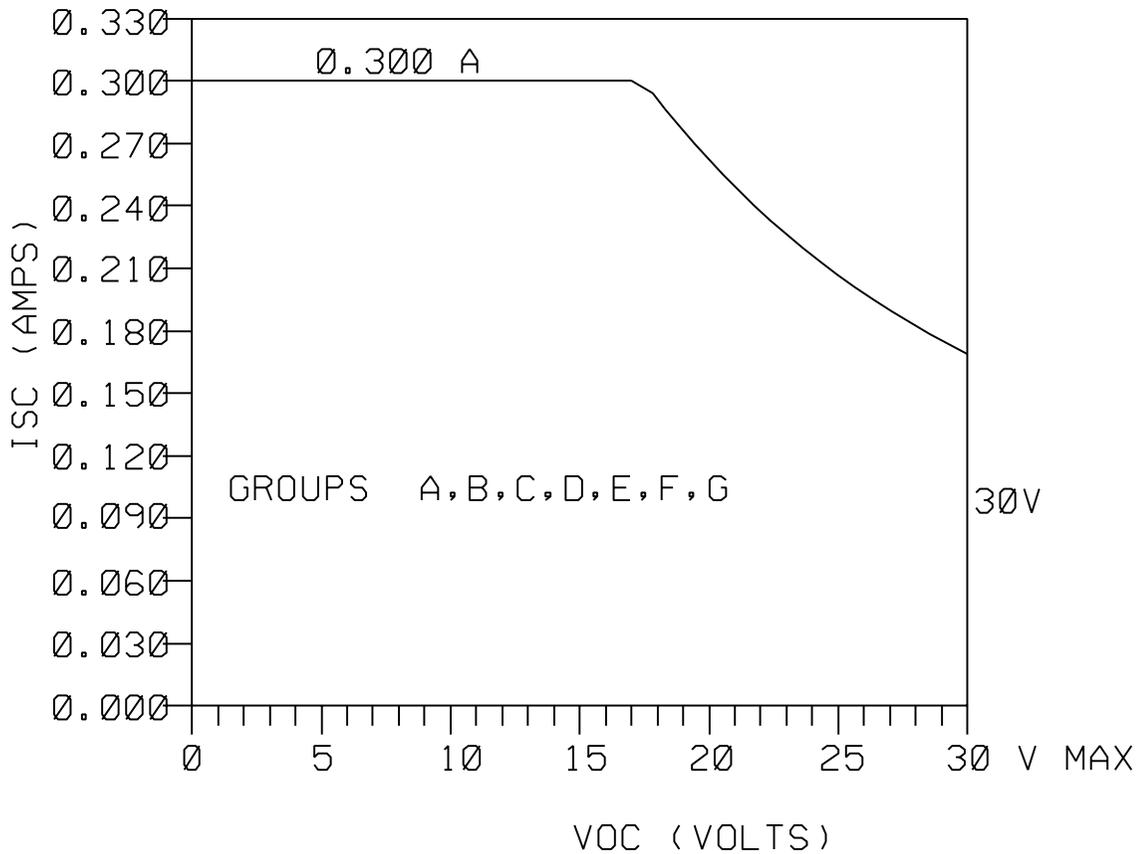

ROSEMOUNT INC.
12001 TECHNOLOGY DRIVE
EDEN PRAIRIE, MN 55344 USA

DR. **Myles Lee Miller**


ISSUED

SIZE A	FSCM NO	CAD Maintained, (MICROSTATION).		
SCALE N/A	WT.	DWG NO. 03031-1019		
		SHEET	7 OF	9

1019A07A


REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AA		RTC1004088		

CIRCUIT DIAGRAM 1
ONE BARRIER OR CONVERTER:
SINGLE OR DUAL CHANNEL

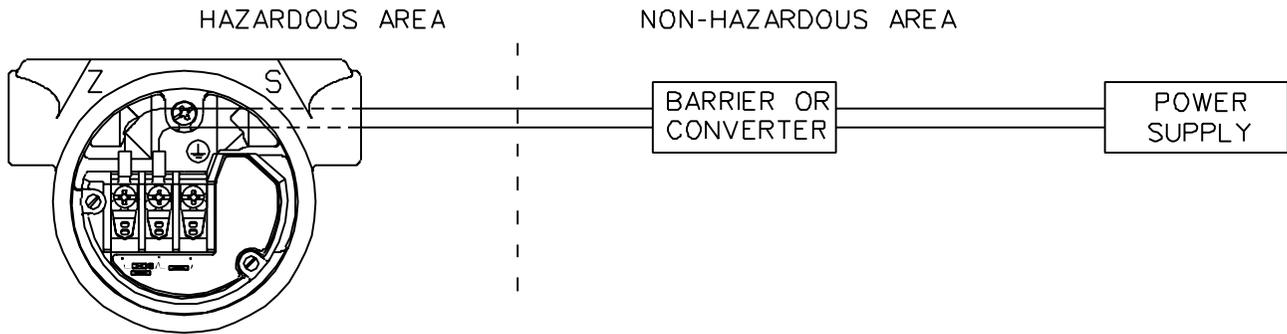

OUTPUT CODE F
MODELS INCLUDED
3051C, L, P, H, T, CA
3001C, CL, CH

CIRCUIT DIAGRAM 2
SUPPLY AND RETURN BARRIERS
(ONLY FOR USE WITH BARRIERS APPROVED IN THIS CONFIGURATION)

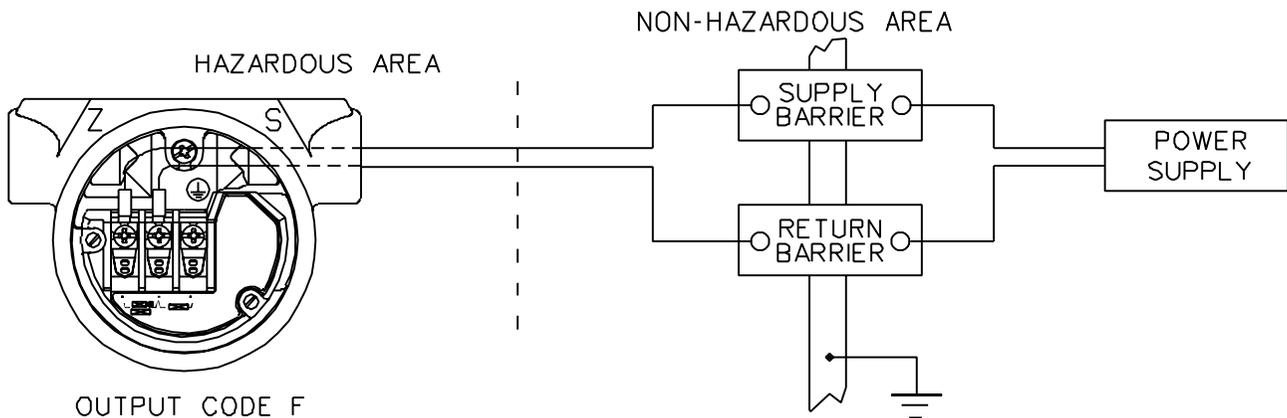

OUTPUT CODE F
MODELS INCLUDED
3051C, L, P, H, T, CA
3001C, CL, CH

ROSEMOUNT INC. 12001 TECHNOLOGY DRIVE EDEN PRAIRIE, MN 55344 USA	
DR.	Myles Lee Miller
ISSUED	

SIZE	FSCM NO	DWG NO.	CAD Maintained, (MICROSTATION).	
A		03031-1019		
SCALE	N/A	WT.	SHEET	8 OF 9

1019A08A

REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AA		RTC1004088		


ENTITY CONCEPT APPROVALS

THE ENTITY CONCEPT ALLOWS INTERCONNECTION OF INTRINSICALLY SAFE APPARATUS TO ASSOCIATED APPARATUS NOT SPECIFICALLY EXAMINED IN COMBINATION AS A SYSTEM. THE APPROVED VALUES OF MAX. OPEN CIRCUIT VOLTAGE (VOC OR VT) AND MAX. SHORT CIRCUIT CURRENT (ISC OR IT) AND MAX. POWER (VOC X ISC/4) OR (VT X IT/4), FOR THE ASSOCIATED APPARATUS MUST BE LESS THAN OR EQUAL TO THE MAXIMUM SAFE INPUT VOLTAGE (VMAX), MAXIMUM SAFE INPUT CURRENT (IMAX), AND MAXIMUM SAFE INPUT POWER (PMAX) OF THE INTRINSICALLY SAFE APPARATUS. IN ADDITION, THE APPROVED MAX. ALLOWABLE CONNECTED CAPACITANCE (CA) OF THE ASSOCIATED APPARATUS MUST BE GREATER THAN THE SUM OF THE INTERCONNECTING CABLE CAPACITANCE AND THE UNPROTECTED INTERNAL CAPACITANCE (CI) OF THE INTRINSICALLY SAFE APPARATUS, AND THE APPROVED MAX. ALLOWABLE CONNECTED INDUCTANCE (LA) OF THE ASSOCIATED APPARATUS MUST BE GREATER THAN THE SUM OF THE INTERCONNECTING CABLE INDUCTANCE AND THE UNPROTECTED INTERNAL INDUCTANCE (LI) OF THE INTRINSICALLY SAFE APPARATUS.

FOR OUTPUT CODE F NOTE: ENTITY PARAMETERS LISTED APPLY ONLY TO ASSOCIATED APPARATUS WITH LINEAR OUTPUT.

CLASS I, DIV. 1, GROUPS A, B, C AND D

$V_{MAX} = 30V$	V_T OR V_{OC} IS LESS THAN OR EQUAL TO 30V
$I_{MAX} = 300MA$	I_T OR I_{SC} IS LESS THAN OR EQUAL TO 300MA
$P_{MAX} = 1.3 WATT$	$(\frac{V_T \times I_T}{4})$ OR $(\frac{V_{OC} \times I_{SC}}{4})$ IS LESS THAN OR EQUAL TO 1.3 WATT
$C_I = 0\mu F$	C_A IS GREATER THAN $0\mu F$
$L_I = 0\mu H$	L_A IS GREATER THAN $0\mu H$

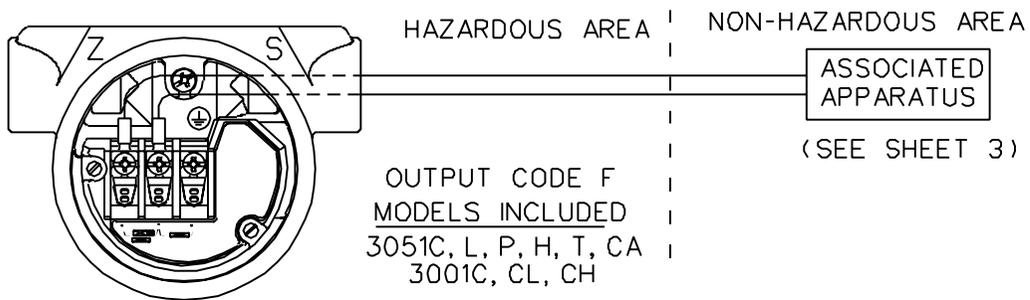

ROSEMOUNT INC. 12001 TECHNOLOGY DRIVE EDEN PRAIRIE, MN 55344 USA		CAD Maintained, (MICROSTATION).		
DR. Myles Lee Miller	SIZE A	FSCM NO	DWG NO. 03031-1019	
ISSUED	SCALE N/A	WT.	SHEET 9 OF 9	




1019A09A

CONFIDENTIAL AND PROPRIETARY INFORMATION IS CONTAINED HEREIN AND MUST BE HANDLED ACCORDINGLY

REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AA	ADD FIELDBUS	RTC1004232	M.L.M.	5/28/98

CSA INTRINSIC SAFETY APPROVALS
 CIRCUIT CONNECTION WITH BARRIER OR CONVERTER
 Ex ia
 INTRINSICALLY SAFE/SECURITE INTRINSEQUE
 4-20 mA, ("A" OUTPUT CODE)

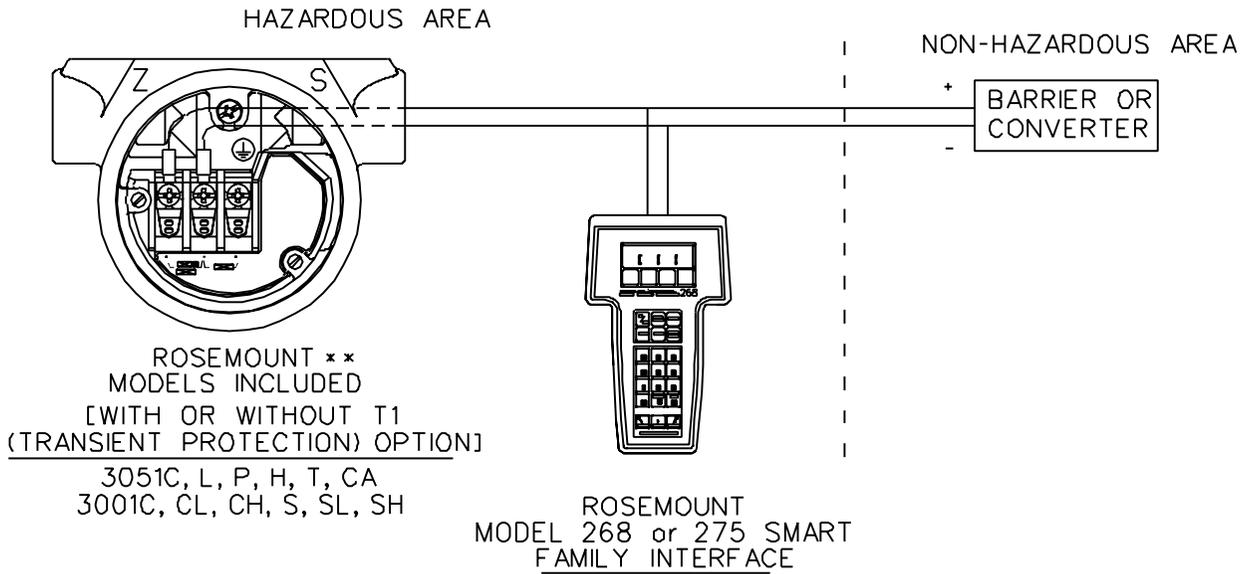

WARNING - EXPLOSION HAZARD - SUBSTITUTION OF COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2.

AVERTISSEMENT - RISQUE D'EXPLOSION - LA SUBSTITUTION DE COMPOSANTS PEUT RENDRE CE MATERIEL INACCEPTABLE POUR LES EMBLEMES DE CLASSE I, DIVISION 2.

** FOR THE LOW POWER OPTION, SEE PAGE 3 FOR THE CIRCUIT CONNECTION WITH BARRIER OR CONVERTER. FOR FIELDBUS ("F" OUTPUT CODE), SEE PAGE 4 FOR PARAMETERS AND CIRCUIT CONNECTION TO BARRIER.

CAD Maintained, (MICROSTATION).

UNLESS OTHERWISE SPECIFIED DIMENSIONS IN INCHES [mm] REMOVE ALL BURRS AND SHARP EDGES. MACHINE SURFACE FINISH 125

-TOLERANCE-
 .X = .1 [2.5]
 .XX = .02 [0.5]
 .XXX = .010 [0.25]

FRACTIONS ANGLES
 * 1/32 * 2°

DO NOT SCALE PRINT

CONTRACT NO.	
DR. Mike Dobe 08/27/90	
CHK'D	
APP'D. GLEN MONZO 8/31/90	
APP'D. GOVT.	

ROSEMOUNT MEASUREMENT		ROSEMOUNT INC. 12001 TECHNOLOGY DRIVE EDEN PRAIRIE, MN 55344 USA	
FISHER ROSEMOUNT			
TITLE INDEX OF I.S. CSA FOR 3051C/L/P/H/T & 3001C/S			
SIZE A	FSCM NO.	DWG NO. 03031-1024	
SCALE N/A	WT.	SHEET 1 OF 4	

1024A01A

REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AA		RTC1004232		

4-20 MA, ("A" OUTPUT CODE)

DEVICE	PARAMETERS	APPROVED FOR CLASS I, DIV.1
CSA APPROVED SAFETY BARRIER	30 V OR LESS * 330 OHMS OR MORE * 28 V OR LESS * 300 OHMS OR MORE 25 V OR LESS 200 OHMS OR MORE * 22 V OR LESS 180 OHMS OR MORE	GROUPS A, B, C, D
FOXBORO CONVERTER 2A1-12V-CGB, 2A1-13V-CGB, 2AS-131-CGB, 3A2-12D-CGB, 3A2-13D-CGB, 3AD-131-CGB, 3A4-12D-CGB, 2AS-121-CGB, 3F4-12DA		GROUPS B, C, D
CSA APPROVED SAFETY BARRIER	30 V OR LESS 150 OHMS OR MORE	GROUPS C, D

LOW POWER, ("M" OUTPUT CODE)

DEVICE	PARAMETERS	APPROVED FOR CLASS I, DIV.1
CSA APPROVED SAFETY BARRIER	SUPPLY $\leq 28V_{\geq}$ 300 \\ RETURN $\leq 10V_{\geq}$ 47 \	GROUPS A, B, C, D
CSA APPROVED SAFETY BARRIER	SUPPLY $\leq 30V_{\geq}$ 150 \\ RETURN $\leq 10V_{\geq}$ 47 \	GROUPS C, D

* MAY BE USED WITH ROSEMOUNT MODEL 268 or 275 SMART FAMILY INTERFACE.

ROSEMOUNT INC. 12001 TECHNOLOGY DRIVE EDEN PRAIRIE, MN 55344 USA
DR. Mike Dobe
ISSUED



CAD Maintained, (MICROSTATION).			
SIZE A	FSCM NO	DWG NO.	03031-1024
SCALE N/A	WT.	SHEET 2 OF 4	

1024A02A

REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AA		RTC1004232		

CSA INTRINSIC SAFETY APPROVALS
3051C LOW POWER CIRCUIT CONNECTION WITH INTRINSIC SAFETY BARRIERS

Ex ia
INTRINSICALLY SAFE/SECURITE INTRINSEQUE
LOWPOWER, ("M" OUTPUT CODE)

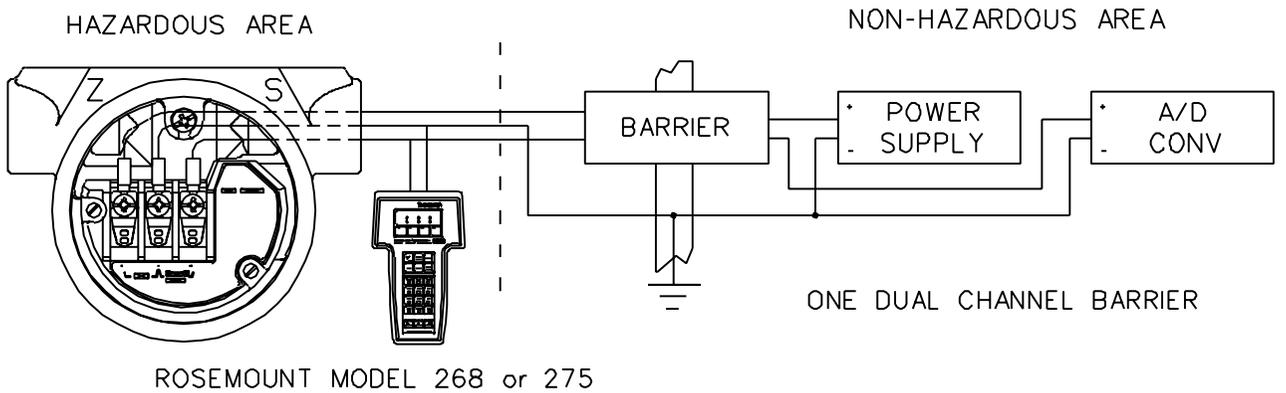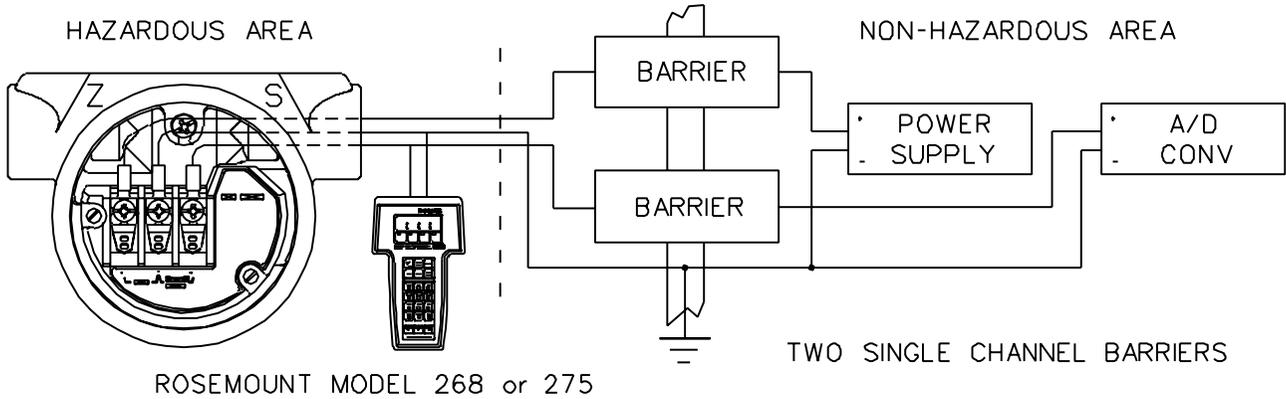

APPROVED FOR CLASS 1, DIVISION 1, GROUPS A,B,C,D WHEN USED IN CIRCUIT WITH TWO CSA APPROVED SINGLE CHANNEL SAFETY BARRIERS, ONE WITH APPROVED SAFETY PARAMETERS OF 28 VOLTS OR LESS AND 300 OHMS OR MORE IN +PWR LINE, AND ONE WITH APPROVED SAFETY PARAMETERS OF 10 VOLTS OR LESS AND 47 OHMS OR MORE IN Vout LINE, OR ONE CSA APPROVED DUAL CHANNEL SAFETY BARRIER WITH IDENTICAL APPROVED SAFETY PARAMETERS CONNECTED IN LIKE MANNER, AS ABOVE.

APPROVED FOR CLASS 1, DIVISION 1, GROUPS C,D WHEN USED IN CIRCUIT WITH TWO CSA APPROVED SINGLE CHANNEL SAFETY BARRIERS, ONE WITH APPROVED SAFETY PARAMETERS OF 30 VOLTS OR LESS AND 150 OHMS OR MORE IN +PWR LINE AND ONE WITH APPROVED SAFETY PARAMETERS OF 10 VOLTS OR LESS AND 47 OHMS OR MORE IN Vout LINE.

ROSEMOUNT INC. 12001 TECHNOLOGY DRIVE EDEN PRAIRIE, MN 55344 USA		CAD Maintained, (MICROSTATION).		
DR. SANDI MANSON	SIZE A	FSCM NO	DWG NO.	03031-1024
ISSUED	SCALE N/A	WT.	SHEET 3 OF 4	

1024A03A


REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AA		RTC1004232		

FIELDBUS, ("F" OUTPUT CODE)

DEVICE	PARAMETERS	APPROVED FOR CLASS I, DIV.1
CSA APPROVED SAFETY BARRIER	30 V OR LESS	GROUPS A, B, C, D
	300 OHMS OR MORE	
	28 V OR LESS	
	235 OHMS OR MORE	
	25 V OR LESS	
	160 OHMS OR MORE	
	22 V OR LESS	
	100 OHMS OR MORE	

CSA INTRINSIC SAFETY APPROVALS
CIRCUIT CONNECTION WITH BARRIER OR CONVERTER

Ex ia
INTRINSICALLY SAFE/SECURITE INTRINSEQUE
FIELDBUS, ("F" OUTPUT CODE)

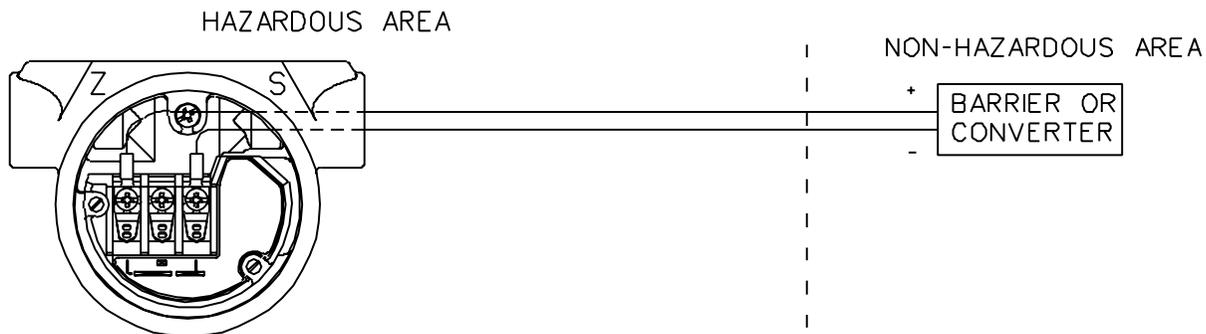

ROSEMOUNT **
MODELS INCLUDED
[WITH OR WITHOUT T1
(TRANSIENT PROTECTION) OPTION]

3051C, L, P, H, T, CA
3001C, CL, CH, S, SL, SH

WARNING - EXPLOSION HAZARD - SUBSTITUTION OF COMPONENTS
MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2.

AVERTISSEMENT - RISQUE D'EXPLOSION - LA SUBSTITUTION DE COMPOSANTS
PEUT RENDRE CE MATERIEL INACCEPTABLE POUR LES EMPLACEMENTS
DE CLASSE I, DIVISION 2.

ROSEMOUNT INC. 12001 TECHNOLOGY DRIVE EDEN PRAIRIE, MN 55344 USA		CAD Maintained, (MICROSTATION).		
DR. Mylee Lee Miller	SIZE A	FSCM NO	DWG NO.	03031-1024
ISSUED	SCALE N/A	WT.	SHEET	4 OF 4

1024A04A

CONFIDENTIAL AND PROPRIETARY INFORMATION IS CONTAINED HEREIN AND MUST BE HANDLED ACCORDINGLY

REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AA	UPDATE ENTITY PARAMETERS	RTC1002910	J.D.J.	12/2/97

SAA ENTITY CONCEPT APPROVALS

THE ROSEMOUNT PRESSURE TRANSMITTERS LISTED BELOW ARE INTRINSICALLY SAFE WHEN USED IN THE CIRCUIT WITH SAA APPROVED BARRIERS WHICH MEET THE LISTED ENTITY PARAMETERS.

APPROVED TRANSMITTERS *

3051C 3051H 3001C 3001S
 3051L 3051T 3001CL3001SL
 3051P 3051CA 3001CH3001SH


* SEE SHEET 2 FOR LOW POWER CONFIGURATION.

ENTITY PARAMETER FOR EX IA IIC T6 CLASS I, ZONE 0 PROTECTION:

APPARATUS PARAMETER	BARRIER PARAMETER
VMAX = 30V	VOC IS LESS THAN OR EQUAL TO 30V
IMAX = 200MA	ISC IS LESS THAN OR EQUAL TO 200MA
PMAX = 0.9W	$\frac{VOC * ISC}{4}$ IS LESS THAN OR EQUAL TO 0.9W
CI = 0.01μ F	CA IS GREATER THAN 0.01 MICROFARADS
LI = 10μH	LA IS GREATER THAN 10 MICROHENRIES
FOR T1 OPTION ONLY	
IMAX = 160MA	ISC IS LESS THAN OR EQUAL TO 160MA
LI = 1.05MH	LA IS GREATER THAN 1.05 MILLIHENRIES

THE ENTITY CONCEPT ALLOWS INTERCONNECTION OF INTRINSICALLY SAFE APPARATUS NOT SPECIFICALLY EXAMINED IN COMBINATION AS A SYSTEM.

TO ASSURE AN INTRINSICALLY SAFE SYSTEM THE TRANSMITTER AND BARRIER MUST BE WIRED IN ACCORDANCE WITH THE BARRIER MANUFACTURERS FIELD WIRING INSTRUCTIONS AND THE CIRCUIT DIAGRAM SHOWN BELOW.

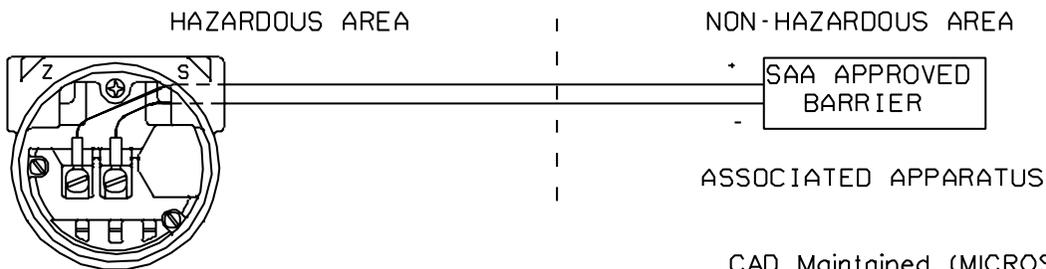

CAD Maintained, (MICROSTATION).

UNLESS OTHERWISE SPECIFIED DIMENSIONS IN INCHES (mm). REMOVE ALL BURRS AND SHARP EDGES. MACHINE SURFACE FINISH 125 -TOLERANCE- .X = .1 [2.5] .XX = .02 [0.5] .XXX = .010 [0.25] FRACTIONS ANGLES * 1/32 * 2° DO NOT SCALE PRINT	CONTRACT NO.	ROSEMOUNT MEASUREMENT		ROSEMOUNT INC. 12001 TECHNOLOGY DRIVE EDEN PRAIRIE, MN 55344 USA
	DR. Mike Dobe 12/30/91	FISHER-ROSEMOUNT		
	CHK'D	TITLE		
	APP'D. GLEN MONZO 5/8/92	SAA I.S. INDEX FOR 3051 & 3001		
	APP'D. GOVT.	SIZE A	FSCM NO	DWG NO.
	SCALE	N/A	WT.	SHEET 1 OF 2

1026A01A

REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AA		RTC1002910		

SAA ENTITY CONCEPT APPROVALS

THE ROSEMOUNT LOW POWER CONFIGURED PRESSURE TRANSMITTERS LISTED BELOW ARE SAA APPROVED AS INTRINSICALLY SAFE WHEN USED IN THE CIRCUIT WITH SAA APPROVED BARRIERS WHICH MEET THE LISTED ENTITY PARAMETERS.

APPROVED TRANSMITTERS WITH LOW POWER CONFIGURATION


3051C 3051T
 3051L 3051CA
 3051P
 3051H

ENTITY PARAMETER FOR EX IA IIC T6 CLASS I, ZONE 0 PROTECTION:

APPARATUS PARAMETER	BARRIER PARAMETER
VMAX = 30V IMAX = 200MA PMAX = 0.9W	VOC IS LESS THAN OR EQUAL TO 30V ISC IS LESS THAN OR EQUAL TO 200MA $\frac{VOC \times ISC}{4}$ IS LESS THAN OR EQUAL TO 0.9W
CI = 0.042 F LI = 10μH	CA IS GREATER THAN 0.042 MICROFARADS LA IS GREATER THAN 10 MICROHENRIES
FOR T1 OPTION ONLY LI = 0.75MH	LA IS GREATER THAN 0.75 MILLIHENRIES

THE ENTITY CONCEPT ALLOWS INTERCONNECTION OF INTRINSICALLY SAFE APPARATUS NOT SPECIFICALLY EXAMINED IN COMBINATION AS A SYSTEM.

TO ASSURE AN INTRINSICALLY SAFE SYSTEM THE TRANSMITTER AND BARRIER MUST BE WIRED IN ACCORDANCE WITH THE BARRIER MANUFACTURERS FIELD WIRING INSTRUCTIONS AND THE CIRCUIT DIAGRAM SHOWN BELOW.

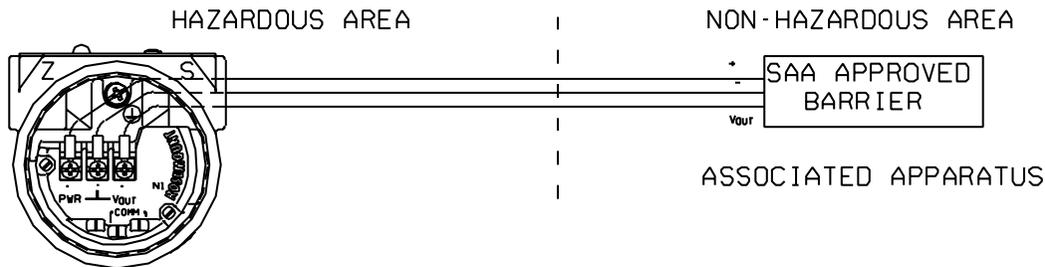

ROSEMOUNT INC. 12001 TECHNOLOGY DRIVE EDEN PRAIRIE, MN 55344 USA		CAD Maintained, (MICROSTATION).		
DR.	Mike Dobe	SIZE	FSCM NO	DWG NO. 03031-1026
ISSUED		SCALE	N/A	WT. _____ SHEET 2 OF 2



1026A02A

CONFIDENTIAL AND PROPRIETARY INFORMATION IS CONTAINED HEREIN AND MUST BE HANDLED ACCORDINGLY	REVISIONS				
	REV	DESCRIPTION	CHG. NO.	APP'D	DATE
	G	ADD SHT 4&5, DELETE CLASS II & III	I. 636328	B.S.J.	08/01/90
	H	ADD 3051 P/L/H, 3001C CL /CH	636904	K.D.V.	09/06/90
	J	ADD SHT. 6, FIX TBL. 1.	638723	B.S.J.	01/02/91
	K	ADD 3044C	641710	W.R.K.	06/13/91
	L	ADD 3001S & SHT 7 FOR 3051C-LP	642380	G.E.M.	8/13/91
	M	ADD 3095	653145	K.D.V.	4/8/93

THE ROSEMOUNT MODEL 268 SMART FAMILY INTERFACE IS APPROVED BY FACTORY MUTUAL AS INTRINSICALLY SAFE FOR THE CLASS I, DIVISION 1 GROUPS INDICATED WHEN USED IN CIRCUIT WITH THE BARRIERS AND CONVERTERS LISTED BELOW AND THE ROSEMOUNT SMART FAMILY TRANSMITTERS DEPICTED IN THE ACCOMPANYING CIRCUIT DIAGRAMS.

BARRIER MANUFACTURER	MODEL	APPROVED FOR CLASS I DIVISION 1, GROUPS
FOXBORO	2AI-12V-FGB	A, B, C, D
	2AI-13V-FGB	
	2AS-13I-FGB	
	3A2-12D-CS-E/FGB-A	
	3A2-13D-CS-E/FGB-A	
HONEYWELL	38545-000-0110-113-F5B5	C, D
	38545-000-0110-111/112-F5B5	
MTL	115	A, B, C, D
	122	
	322	
	715	
	722	
R. STAHL	8901/31-199/100/7	C, D
	8901/30-199/100/7	
	8901/31-280/165/7	C, D
	8901/30-280/165/7	
	[8903/51-200/050/7	A, B, C, D
	[8901/31-086/150/7	A, B, C, D
	[8901/31-280/165/7	C, D
	[8901/31-086/150/7	C, D
	9005/01-245/060	A, B, C, D
	9005/01-252/100	A, B, C, D
TAYLOR	5850FL81200	C, D
	5851FL81200	
	1130FF21000	
	1130FF22000	
	1135FF21000	
	1135FF22000	

CAD Maintained, (MICROSTATION).

UNLESS OTHERWISE SPECIFIED DIMENSIONS IN INCHES (mm). REMOVE ALL BURRS AND SHARP EDGES. MACHINE SURFACE FINISH 125	CONTRACT NO.	ROSEMOUNT MEASUREMENT		ROSEMOUNT INC. 12001 TECHNOLOGY DRIVE EDEN PRAIRIE, MN 55344 USA
	DR. MIKE DOBE 2/7/90	FISHEROSEMOUNT		
	CHK'D	TITLE		
	APP'D. K. CARLSON 03/13/90	INDEX OF I.S. BARRIER SYSTEMS FOR MOD. 268 SMART FAMILY INTERFACE		
-TOLERANCE- .X * .1 [2.5] .XX * .02 [0.5] .XXX * .010 [0.25]		SIZE A	FSCM NO	DWG NO. 00268-0031
FRACTIONS * 1/32	ANGLES * 2°	SCALE	WT. _____	SHEET 1 OF 7
DO NOT SCALE PRINT	APP'D. GOV'T.			

0031A01A

Rosemount Model 3051 Smart Pressure Transmitters

REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
M		653145		

ENTITY CONCEPT APPROVALS

THE ENTITY CONCEPT ALLOWS INTERCONNECTION OF INTRINSICALLY SAFE APPARATUS TO ASSOCIATED APPARATUS NOT SPECIFICALLY EXAMINED IN COMBINATION AS A SYSTEM. THE APPROVED VALUES OF MAXIMUM OPEN CIRCUIT VOLTAGE (V_T OR V_{OC}) AND MAXIMUM SHORT CIRCUIT CURRENT (I_T OR I_{SC}) AND MAXIMUM OUTPUT POWER ($\frac{V_{OC} \times I_{SC}}{4}$ OR $\frac{V_T \times I_T}{4}$), FOR THE ASSOCIATED APPARATUS MUST BE LESS THAN OR EQUAL TO THE MAXIMUM SAFE INPUT VOLTAGE (V_{MAX}), MAXIMUM SAFE INPUT CURRENT (I_{MAX}) AND MAXIMUM SAFE INPUT POWER (P_{MAX}) OF THE INTRINSICALLY SAFE APPARATUS, IN ADDITION, THE APPROVED MAXIMUM ALLOWABLE CONNECTED CAPACITANCE (C_A) AND INDUCTANCE (L_A) OF THE ASSOCIATED APPARATUS MUST BE GREATER THAN THE MAXIMUM UNPROTECTED INTERNAL CAPACITANCE (C_I) AND INDUCTANCE (L) OF THE INTRINSICALLY SAFE APPARATUS. THE APPROVED ENTITY CONCEPT PARAMETERS ARE AS FOLLOWS:
ARE AS FOLLOWS:

NOTE: ENTITY PARAMETERS LISTED APPLY ONLY TO ASSOCIATED APPARATUS WITH LINEAR OUTPUT.

INPUT PARAMETERS (CLASS I, DIV. 1, GROUPS A, B, C, D)

VMAX = 32 VDC		V_T or V_{OC} of barrier must be ≤ 32 Vdc		
IMAX = 186 MA		I_T or I_{SC} of barrier must be ≤ 186 mA		
CI = 0.01 UF		C_A of barrier must be $\geq 0.01 \mu F$		
LI = 1.1 MH		L_A of barrier must be ≥ 1.1 mH		
PMAX:	1.1W	0.8W	0.6W	$\frac{V_{OC} \times I_{SC}}{4}$ of barrier must be \leq specified value.
TEMP CODE	T4A	T5	T6	

OUTPUT PARAMETERS

VOC = 1.5 VD.C.
ISC = 27 MA
$C_A = 10,000 \mu F$
$L_A = 46$ MH

ROSEMOUNT INC.
12001 TECHNOLOGY DRIVE
EDEN PRAIRIE, MN 55344 USA

CAD Maintained, (MICROSTATION).

DR. **D.PEARSON**

SIZE A FSCM NO

DWG NO. 00268-0031

ISSUED


SCALE N/A

WT. _____

SHEET 2 OF 7

0031A02A

REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
M		653145		

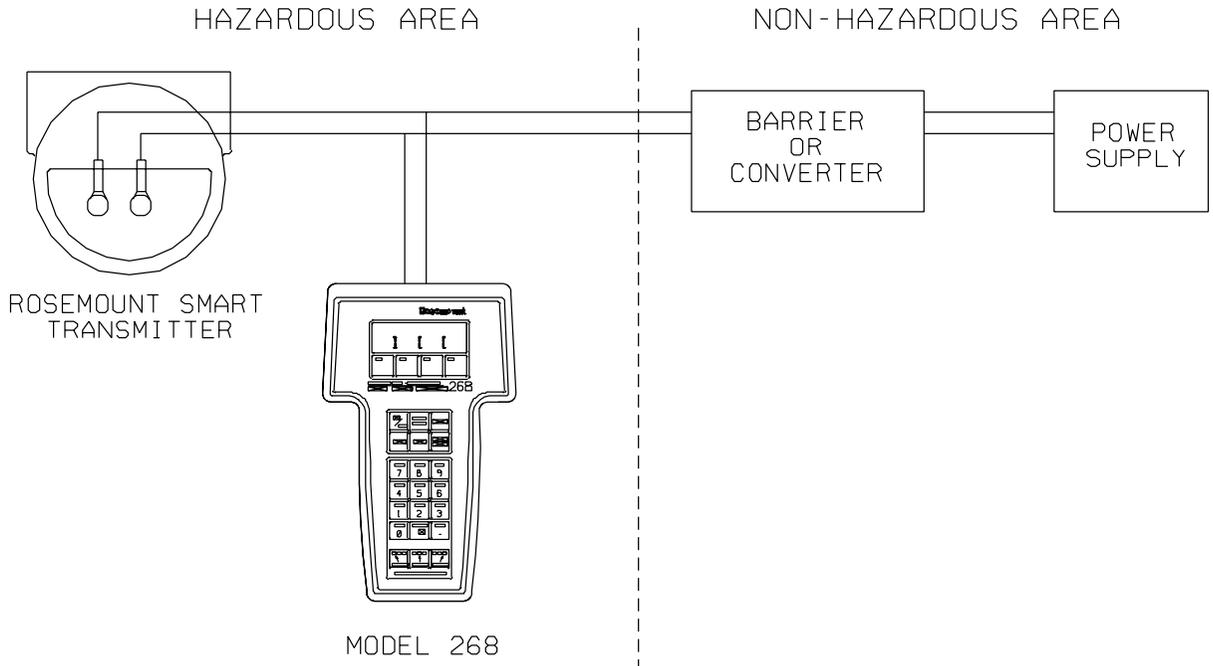

ROSEMOUNT SMART TRANSMITTERS

- MODEL 1151 SMART
- MODEL 3051
- MODEL 3051C, 3051P, 3051L, 3051H, 3051CA
- MODEL 3044
- MODEL 3044C
- MODEL 3001C, 3001CL, 3001CH
- MODEL 3311
- MODEL 3001S, 3001SL, 3001SH
- MODEL 3095

UP TO FOUR MODEL 751 INDICATORS MAY BE WIRED IN SERIES WITH THE TRANSMITTERS SHOWN ABOVE AND MAY BE LOCATED IN EITHER THE HAZARDOUS OR NON-HAZARDOUS AREA

ROSEMOUNT INC.
12001 TECHNOLOGY DRIVE
EDEN PRAIRIE, MN 55344 USA

DR. **D.PEARSON**

ISSUED

SIZE A

FSCM NO

SCALE N/A

CAD Maintained, (MICROSTATION).

DWG NO. 00268-0031

WT. _____

SHEET 3 OF 7

0031A03A

REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
M		653145		

THE MAXIMUM ALLOWABLE CONNECTED INDUCTANCE (L_a) OF THE ASSOCIATED APPARATUS IS DETERMINED BY ADDING 27 mA TO THE I_{sc} OF THE BARRIER ($I_m = I_{sc} + 27mA$) AND ENTERING TABLE 1 (SHT 5) AT THE RESULTING VALUE, I_m , OR THE NEXT HIGHER VALUE OF I_m , TO DETERMINE THE L_a , (THE L_a MUST INCLUDE THE L_1 OF THE MODEL 268, WHICH IS 1.1mH).

EXAMPLE #1: I_{sc} OF BARRIER = 100mA.

$$I_m = 100mA + 27mA = 127mA$$

ENTER TABLE AT $I_m = 130mA$; $L_a = 2.0mH$

--WARNING-- BEFORE CONNECTING THE MODEL 268 INTO THE LOOP, DETERMINE THE CONNECTED INDUCTANCE OF THE SYSTEM BY ADDING THE L_1 OF THE TRANSMITTER, CABLE, AND MODEL 268. THE SUM MUST BE LESS THAN THE L_a DETERMINED FROM THE TABLE IN ORDER FOR THE MODEL 268 TO BE CONNECTED INTO THE LOOP. IF THE CONNECTED INDUCTANCE IS GREATER THAN THE VALUE DETERMINED FROM THE TABLE, A BARRIER WITH A LOWER I_{sc} MUST BE CHOSEN.

EXAMPLE #2: BARRIER I_{sc} = 41.8mA; BARRIER L_a = 20.0mH

$$I_m = 41.8mA + 27mA = 68.8mA;$$

ENTER TABLE AT 70mA AND READ $L_a = 7.5mH$

ADD CONNECTED INDUCTANCE OF SYSTEM:

MODEL 268	$L_1 = 1.1mH$
MODEL 3051 TRANSMITTER	$L_1 = 0.48mH$
INDUCTANCE OF LOOP WIRING	1.0mH

$$\text{TOTAL CONNECTED INDUCTANCE} = 2.58mH$$

TOTAL CONNECTED INDUCTANCE IS LESS THAN $L_a = 7.5$ mH AS DETERMINED ABOVE AND IS ALSO LESS THAN THE BARRIER L_a . THE MODEL 268 MAY SAFELY BE CONNECTED INTO THE LOOP. IF THE MODEL 751 INDICATORS ARE USED, THEIR TOTAL INDUCTANCE (LABEL VALUE * NUMBER OF INDICATORS) MUST ALSO BE INCLUDED.

ROSEMOUNT INC. 12001 TECHNOLOGY DRIVE EDEN PRATRIE, MN 55344 USA		CAD Maintained, (MICROSTATION).		
DR. S.BARDUSON	30JUL90	SIZE A	FSCM NO	DWG NO. 00268-0031
ISSUED		SCALE N/A	WT. _____	SHEET 4 OF 7



0031A04A

REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
M		653145		

Im (mA)	L _a (mH)
150	1.3
145	1.5
140	1.6
130	2.0
120	2.5
110	3.0
100	4.0
90	5.0
85	5.5
80	6.0
75	6.7
70	7.5
65	8.8
62	9.5
60	10.0
57	11.0
55	12.0
50	15.0
45	19.0
40	23.0
35	31.0

TABLE 1

ROSEMOUNT INC.
 12001 TECHNOLOGY DRIVE
 EDEN PRAIRIE, MN 55344 USA

DR. **S.BARDUSON** 30JUL90

ISSUED

CAD Maintained, (MICROSTATION).


SIZE A	FSCM NO	DWG NO. 00268-0031
SCALE N/A	WT. _____	SHEET 5 OF 7

0031A05A



REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE

TAYLOR 1152FZ81110 SYSTEM

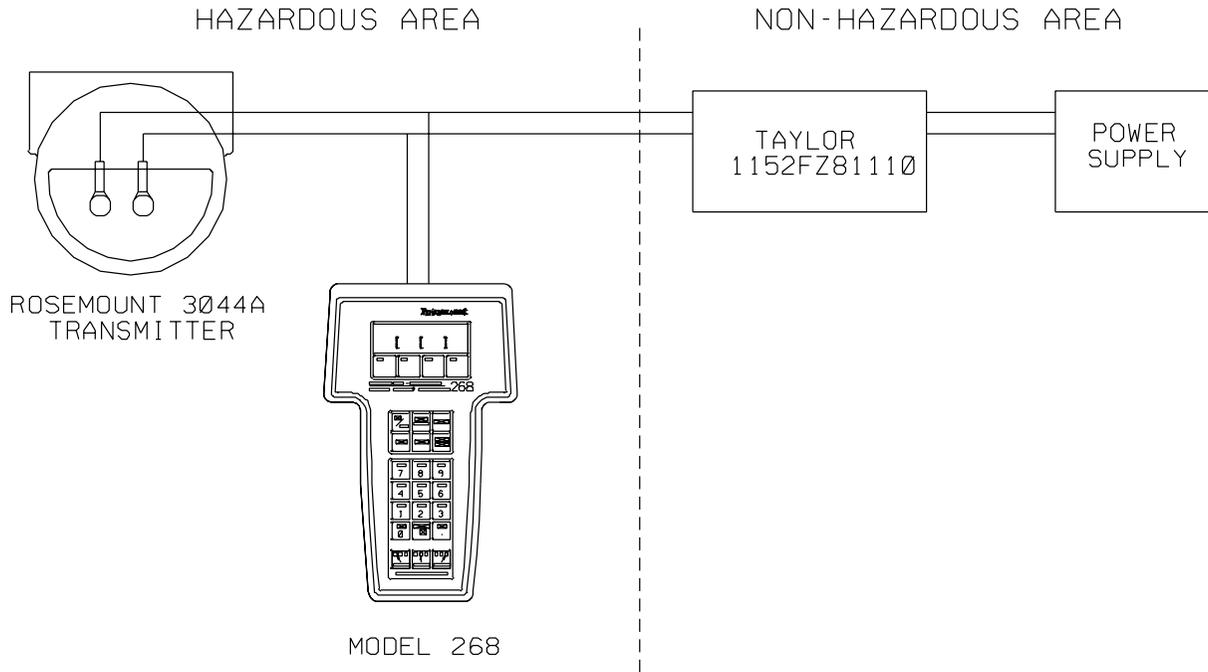

ROSEMOUNT 3044A SMART TRANSMITTERS MAY BE PLACED IN A CLASS I, DIVISION I, GROUP A, B, C, D HAZARDOUS LOCATION AS SHOWN ABOVE. THE LOOP POWER IS LIMITED BY A TAYLOR 1152FZ81110 INTRINSIC SAFETY BARRIER. THE ROSEMOUNT 268 MAY ALSO BE CONNECTED IN THE LOOP AS SHOWN. FOR CABLE WITH CAPACITANCE OF 60 PF/FT OR LESS AND INDUCTANCE OF .2 UH/FT OR LESS; CABLE LENGTHS OF UP TO 1600 FEET ARE ALLOWED .


- TRANSMITTER: ROSEMOUNT 3044A
- BARRIER: TAYLOR 1152FZ81110
- COMMUNICATOR: ROSEMOUNT 268
- CABLE: CMAX = 60 PF/FT
- LMAX = .2 UH/FT
- MAX. LENGTH = 1600 FT

ROSEMOUNT INC. 12001 TECHNOLOGY DRIVE EDEN PRAIRIE, MN 55344 USA		CAD Maintained, (MICROSTATION).		
DR. C. SCRIBNER 12/21/90	SIZE A	FSCM NO	DWG NO. 00268-0031	
ISSUED	SCALE N/A	WT. _____	SHEET 6 OF 7	



0031A06A

REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
M		653145		

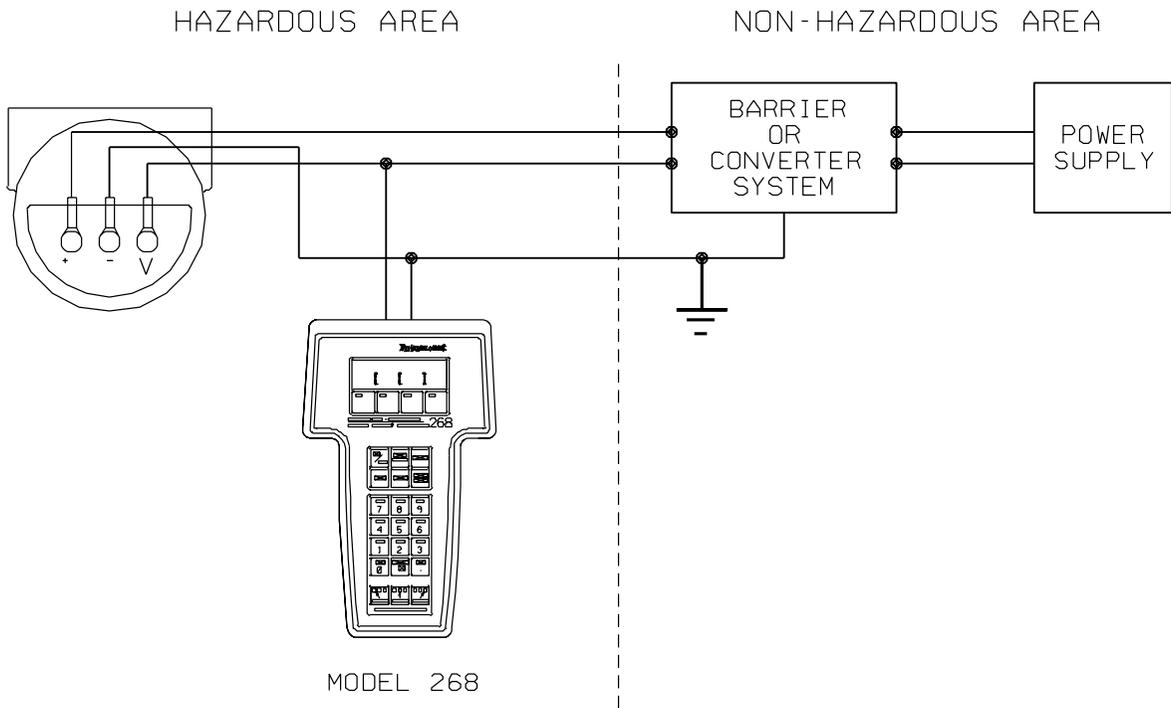

CONNECTION FOR LOW POWER VERSIONS
OF THE FOLLOWING
ROSEMOUNT SMART TRANSMITTERS

- MODEL 3051C, 3051P, 3051L, 3051H, 3051CA
- MODEL 3001C, 3001CL, 3001CH
- MODEL 3001S, 3001SL, 3001SH

ROSEMOUNT INC.
12001 TECHNOLOGY DRIVE
EDEN PRAIRIE, MN 55344 USA

DR. **SANDI MANSON** 8/8/91

ISSUED

SIZE A	FSCM NO	DWG NO. 00268-0031
SCALE N/A	WT. _____	SHEET 7 OF 7

CAD Maintained, (MICROSTATION).


0031A07A

European ATEX Directive Information

OVERVIEW

CENELEC/BASEEFA Intrinsic Safety

Rosemount Model 3051 Pressure Transmitters that have the following label attached, have been certified to comply with Directive 94/9/EC of the European Parliament and the Council as published in the Official Journal of the European Communities No. L 100/1 on 19–April–1994.

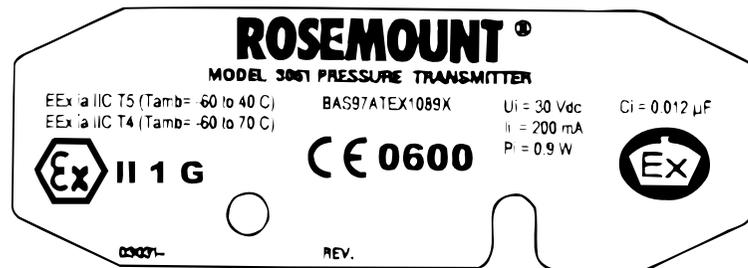

3051LAB

The following information is provided as part of the labeling of the transmitter:

- Name and address of the manufacturer (may be any of the following):
 - Rosemount USA
 - Rosemount England
 - Rosemount Germany
 - Rosemount Singapore

CE 0600

- Complete model number (see Section 5 Specifications and Reference Data).
- The serial number of the device
- Year of construction
- Marking for explosion protection:
 - EEx ia IIC T5 ($T_{amb} = -60$ to 40 °C)
 - EEx ia IIC T4 ($T_{amb} = -60$ to 70 °C)
 - $U_i = 30$ Vdc, $I_i = 200$ mA, $P_i = 0.9$ W, $C_i = 0.012$ mF

Ex II 1 G

Special conditions for safe use (X):

Model 3051 transmitters fitted with the transient protection terminal block are not capable of withstanding the 500 V insulation test required by Clause 6.4.12 of EN 50 020 (1994), and this must be taken into account when installing the apparatus.



Glossary

Analog Output Trim	Digital Trim operation that allows adjustment of the output electronics to conform to the plant standard. Three types of analog output trim are available: 4–20 mA Trim, 4–20 mA Other Scale, and Low Power. See “Analog Output Trim” on page 2-27.
Cloning	Off-line operation that uses the Model 268 to copy configuration data from one transmitter to one or more other transmitters that require the same data. See “Saving, Recalling, and Cloning Configuration Data” on page 2-29.
Commissioning	Functions performed with a HART-based communicator and the transmitter which test the transmitter, test the loop, and verify transmitter configuration data. See “Commissioning the Model 3051 on the bench with a HART-Based Communicator” on page 2-9.
Configuration	Process of setting parameters that determine how the transmitter operates. See page 2-1.
Damping	Output function that increases the response time of the transmitter to smooth the output when there are rapid input variations. See “Damping” on page 2-17.
Descriptor	Sixteen-character field for additional identification of the transmitter, its use, or location. The descriptor is stored in the transmitter and can be changed using the HART-based communicator.
Digital Trim	Format function that allows you to adjust the transmitter characterization for purposes of digital calibration to plant standards. Digital Trim includes two separate operations: Sensor Trim and Analog Output Trim. See pages 2-24 and 2-27.
Failure Mode Alarm	Transmitter function that drives the analog output to a jumper-selectable high or low value in the event of an electronics failure. See “Failure Mode Alarm” on page 2-2.
Factory Characterization	Factory process during which each sensor module is subjected to pressures and temperatures covering the full operating range. The sensor module memory stores data generated from this process for use by the microprocessor in correcting the transmitter output during operation.
Full Trim	Sensor Trim function in which two accurate, end-point pressures are applied, and all output is linearized between them. The selected end points should always be equal to or outside the LRV and URV. See “Full Trim” on page 2-25.
HART (Highway Addressable Remote Transducer) Protocol	Communications standard that provides simultaneous analog and digital signal transmission between control rooms and field devices such as transmitters. All Rosemount SMART FAMILY products communicate using the HART protocol.

Lower Range Limit (LRL)	Lowest value of the measured variable that the transmitter can be configured to measure.
Lower Range Value (LRV)	Lowest value of the measured variable that the analog output of the transmitter is currently configured to measure.
Multidropping	The connection of several transmitters to a single communications transmission line. Communication between the host and the transmitters takes place digitally with the analog output of the transmitters deactivated. See “Multidrop Communication” on page 2-31.
Reranging	Configuration function that changes the transmitter 4 and 20 mA settings. See “Rerange” on page 2-14.
Send Data	HART-based communicator command that transfers configuration data from the hand-held communicator’s memory to the transmitter memory.
Sensor Trim	Digital Trim function that allows you to adjust the digital process variable reading to a precise pressure input. Zero Trim and Full Trim are the two Sensor Trim functions. See page 2-24.
Smart	Term used to describe instruments that are microprocessor-based and feature advanced communications capabilities. See Section 1: Introduction .
SMART FAMILY	Rosemount pressure, temperature, level, and flow instruments with microprocessor-based digital electronics.
Span	Algebraic difference between the upper and lower range values.
Tag	Eight-character field for identifying the transmitter. The tag is stored in the transmitter and can be changed using the Model 268 and the Transmitter Information function.
Transmitter Address	Unique number (1-15) used to identify a multidropped transmitter. Transmitters that are not multidropped have 0 as an address. See page 2-31.
Transmitter Security	Jumper-selectable feature that prevents accidental or deliberate changes to configuration data. See “Transmitter Security” on page 2-4.
Upper Range Limit (URL)	Highest value of the measured variable that the transmitter can be configured to measure.
Upper Range Value (URV)	Highest value of the measured variable that the analog output of the transmitter is currently configured to measure.
Zero Trim	A zero-based, one-point adjustment used in differential pressure applications to compensate for mounting position effects or zero shifts caused by static pressure. See “Zero Trim” on page 2-25.

Index

- A**
 - Access requirements 3-23
 - Activating local zero and span 6-1
 - Adapter bolts 6-11
 - Advanced functions
 - Burst mode 2-29
 - Multidrop mode 2-29
 - Saving, recalling, cloning 2-29
 - Alarm 2-3
 - Burst mode values 2-3
 - Level verification 2-3
 - Multidrop mode values 2-3
 - Alarm and security jumper
 - Configuration procedure 2-5
 - Analog output trim 2-27
 - Approval Drawings C-1
 - List of C-1
 - ATEX
 - European directive information D-1
 - B**
 - Basic setup 2-13
 - Bolts
 - Flange and adapter 6-11
 - Installation 3-18
 - Mounting 3-18
 - Burst mode
 - Advanced functions 2-30
 - Alarm, saturation values 2-3
 - C**
 - Calibration 2-19
 - Deciding which procedure to use 2-22
 - Frequency, determining 2-22
 - Overview 2-20
 - Sensor trim
 - Full trim
 - Zero trim 2-24
 - Check output
 - Process variables 2-12
 - Sensor temperature 2-12
 - Commissioning
 - On the bench with HART communicator 2-9
 - Set the loop to manual 2-9
 - Communicator
 - Model 268 B-1
 - Model 268 keys B-5
 - Model 275 HART A-1
 - Model 275 keys A-8
 - Model 275 menus A-10
 - Configuration
 - Cloning 2-29
 - Recalling 2-29
 - Saving 2-29
 - Configuration data sheet 6-15
 - Configuration data, review 2-12
 - Cover installation 3-23
 - Custom configuration options 6-9
 - Custom meter configuration 6-3
 - D**
 - Damping 2-17
 - Detailed setup 2-17
 - Diagnostics
 - Loop test 2-18
 - Transmitter test 2-18
 - Diagrams
 - Bench hook-up 2-10
 - Digital to analog trim 2-27
 - Disabling local zero and span 6-2
 - Disassembly
 - Before disassembling 4-2
 - Remove electronics board 4-4
 - Remove sensor module 4-5
 - Remove terminal block 4-3
 - Remove transmitter from service 4-3
 - Disassembly procedures 4-3
 - Draft range considerations
 - Installation
 - Reduce process noise 1-4
 - E**
 - Electrical considerations
 - Grounding 3-22
 - Power supply 3-20
 - Electronics board
 - Installing 4-7
 - Removing 4-4
 - Environment considerations 3-23
 - Access 3-23
 - European ATEX directive information D-1
 - F**
 - Failure mode alarm
 - Values 2-2
 - Features**
 - New 1-3
 - Flange and adapter bolts 6-11
 - Full trim 2-25
 - Functional specifications 5-6
- G**
 - Grounding the transmitter 3-22
 - H**
 - HART communicator
 - Model 268 B-1
 - Communicator keys B-5
 - Connections and hardware B-4
 - Model 275 A-1
 - Communicator keys A-8
 - Connections and hardware A-6
 - Menus and functions A-10
 - Hazardous locations 3-22
 - Housing rotation 3-13
 - I**
 - Impulse piping 3-11
 - Installation
 - Bolts 3-18
 - Mechanical consideration 3-3
 - Mounting 3-9
 - Integral manifolds 6-13
 - 305 installation 6-13
 - 306 installation 6-14
 - Introduction 1-1
 - J**
 - Jumpers
 - Alarm, security configuration 2-5
 - L**
 - LCD meter 6-2
 - Diagnostic messages 6-6
 - Installing 6-4
 - Options 2-17
 - Level flange 6-9
 - Line pressure
 - Compensating 2-28
 - Local zero and span(local keys)
 - Physical removal 2-4
 - Software lock out 2-4
-

- Low power
 - Analog output trim 2-27
 - Output range 2-8
- M**
- Manifolds
 - see Integral manifolds
- Manual
 - Models covered 1-2
 - Use of 1-1
- Mechanical considerations 3-3
- Models covered
 - In manual 1-2
- Mounting 3-9
 - Bolts 3-18
 - Requirements 3-10
- Mounting brackets
 - Options 6-9
- Multidrop communication
 - Advanced functions 2-31
- N**
- NAMUR-compliant values 2-2
- New features 1-3
- O**
- Optional mounting brackets 6-9
- Options 6-1
 - Custom configuration 6-9
 - LCD meter 2-17
 - Local zero and span 6-1
- Ordering information 5-15
- Output range
 - Low power transmitters 2-8
- P**
- Parts list 5-30
- Performance specifications 5-1
- Physical specifications 5-10
- Piping, impulse 3-11
- Power supply
 - 4-20 mA transmitters 3-20
 - Low power transmitters 3-20
- Process variables 2-12
- R**
- Reassembly
 - Attach electronics board 4-7
 - Attach sensor module 4-6
 - Install terminal block 4-8
 - Process sensor body 4-8
- Reassembly procedures 4-6
- Recall factory trim 2-26
- Rerange 2-14
 - Communicator only 2-14
 - Pressure input source and communicator 2-14
 - Pressure input source, local zero and span 2-14
- Returning products, materials 4-9
- S**
- Saturation
 - Burst mode values 2-3
 - Multidrop mode values 2-3
- Saving a configuration 2-29
- Security
 - Local zero and span physical removal 2-4
 - Local zero and span software lock out 2-4
 - Write protect 2-4
- Security and alarm jumper
 - Configuration procedure 2-5
- Sensor module
 - Installing 4-6
 - Removing 4-5
- Sensor temperature 2-12
- Sensor trim 2-24
- Setup
 - Basic 2-13
 - Detailed 2-17
- Signal wiring grounding 3-22
- Span
 - Disabling 6-2
 - Local activation 6-1
 - Local options 6-1
- Specifications 5-1
- T**
- Terminal block
 - Installing 4-8
 - Removing 4-3
 - Transient protection 6-12
- Traditional flange 6-10
- Transient protection terminal block 6-12
- Transmitter functions 2-1
- Trim
 - Analog output 2-27
 - Digital to Analog 2-27
 - Full 2-25
 - Low power analog output 2-27
 - Recall factory 2-26
 - Sensor 2-24
 - Zero 2-25
- Troubleshooting 4-1
- V**
- Vertical mount 6-10
- W**
- Wiring 3-21
 - Signal wiring grounding 3-22
- Wiring diagrams
 - Bench hook-up 2-10
 - Field hook-up 2-11
- Z**
- Zero
 - Disabling 6-2
 - Local activation 6-1
 - Local options 6-1
- Zero trim 2-25

Rosemount Inc.
8200 Market Boulevard
Chanhausen, MN 55317 USA
Tel 1-800-999-9307
Telex 4310012
Fax (612) 949-7001

© 1999 Rosemount Inc. 
<http://www.rosemount.com>



00809-0100-4001 Rev. DA 06/99

ROSEMOUNT®

FISHER-ROSEMOUNT™ Managing The Process Better.™